

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Hotpoint](#) /

> [ARISTON HOTPOINT COOKER FOOT COUPLING - C00037386 Instruction Manual](#)

Hotpoint C00037386

Instruction Manual

ARISTON HOTPOINT COOKER FOOT COUPLING - MODEL C00037386

1. Introduction

This manual provides essential information for the proper installation, use, and maintenance of the Ariston Hotpoint Cooker Foot Coupling, model C00037386. Please read these instructions carefully before proceeding with installation or any related procedures. Retain this manual for future reference.

This part is designed as a replacement component for specific Ariston and Indesit cooker models. Ensuring compatibility with your appliance model is crucial for correct functionality and safety.

2. Safety Information

Important Safety Instructions:

- Always disconnect the appliance from the main power supply before attempting any installation, repair, or maintenance. Failure to do so can result in electric shock or injury.
- If you are unsure about any part of the installation process, consult a qualified technician.
- Use appropriate tools for installation.
- Keep small parts away from children to prevent choking hazards.
- Ensure the cooker is stable and level after installation of the foot coupling to prevent tipping.

3. Product Overview

The cooker foot coupling (Model C00037386) is a critical component designed to provide stability and proper leveling for your cooker. It typically screws into the base of the appliance, allowing for height adjustment to ensure the cooker stands firmly on uneven surfaces.



Figure 1: Ariston Hotpoint Cooker Foot Coupling (Model C00037386). This image shows the black, circular foot coupling with a threaded center, designed to provide stable support for a cooker.

4. Compatibility

This foot coupling is compatible with various models from ARISTON and INDESIT. Please verify your appliance's model number against the list below to ensure compatibility:

Compatible ARISTON Models:

- C 346 GT (X)F - F029678
- C 35 G1 (X) F - F036669
- C 659 B X AG.1 - F022523
- C 347 G (X)I - F026673
- C 347 P(X)I - F026675
- C 347 P.2 (X)I - F029401
- C 3V M6 (X) F - F041289
- C 659 B X.1 - F018496
- C 659 P X.1 - F018506
- G 84P G5 (W) R.. - F017456
- G 84P G5(W) R -1 - F014691
- G 960 G3 (AL) EX - F004122
- G 960 G3 (AV) EX - F004121
- G 960 G3 (C) EX - F004120
- G 960 G3 EX - F004102
- A6GG1F (W) EX - F083788
- A6GG1F (X) EX - F083787
- A6TMH2AF (X) EX - F083795
- A6TMH2F (X) IL - F083794
- CX65SP1 (W) IL - F073634
- CX65SP1 (X) I S - F080984
- CX65SP1 (X) IL - F073633
- C 347 G (W)I - F026672
- C 347 P(W)I - F026674

- C 347 P.2 (W)I - F029400
- C 645 G (W)AG.1 - F023047
- C 645 G (X)AG.1 - F022525
- C 645 P (W)AG.1 - F022524
- C 645 P (X)AG.1 - F023044
- C 646 M (X)IR - F023980
- C 647 E (W) - F018668
- C 647 E.3 (W) I - F029382
- C 647 G (W) - F018667
- C 647 G (X) - F018503
- C 647 M (W) - F018664
- C 647 P (W) - F018663
- C 647 P (X) - F018662
- C 647 P.3 (X) I - F029384
- C 647 PV (W) - F018665
- C 648 B X - F018666
- C 648 PT X - F018661
- C 648 PT.4 X I - F029385
- C 649 P (A) - F018669
- C 649 P (B) - F018670
- C 649 P.4 (A) I - F029386

Compatible INDESIT Models:

- K 647 PS(X)I - F023794
- K 647 PS.C (X)I - F029258
- K 649 PS(W)I - F023793
- KN6T62SA(W)I - F073529
- KN6T62SA(X)/B - F074054
- KN6T62SA(X)I - F073530
- KN6T76SA(W)I - F073531
- KN6T76SA(X)I - F073532
- I6TMH6AF(X)I - F084411
- KN6T76SA(X)I S - F081146
- I6GG1F(W)I - F084409
- I6GG1F(X)I - F084413
- I6GG1F(X)/P - F084570
- I6GG1G(X)/RU - F084208
- I6TMH2AF(W)I - F155450
- I6TMH2AF(X)I - F155170
- I6TMH2AF(X)/P - F155167

- KN6G217S(X)/RU - F073438
- KN6G21S(W)/I - F073527
- KN6G21S(W)/I S - F081141
- KN6G21S(X)/I - F073528
- KN6G21S(X)/I S - F081142
- KN6G527S(X)/RU - F073441

If your model is not listed, please contact customer support for assistance before purchasing.

5. Installation Instructions

This section outlines the general steps for replacing or installing a cooker foot coupling. Specific procedures may vary slightly depending on your cooker model.

1. Preparation:

- Ensure the cooker is completely disconnected from all power sources (electricity and gas, if applicable).
- Move the cooker away from the wall to access its rear and underside.
- Place a protective mat or blanket on the floor to prevent scratches to the cooker or flooring.
- Carefully tilt the cooker backward or to the side to expose the existing foot couplings. You may need assistance for this step due to the weight of the appliance.

2. Removal of Old Foot Coupling (if applicable):

- Locate the damaged or missing foot coupling.
- Unscrew the old foot coupling by turning it counter-clockwise. If it is seized, a wrench or pliers may be needed.
- Clean any debris or residue from the threaded hole.

3. Installation of New Foot Coupling:

- Align the new C00037386 foot coupling with the threaded hole at the base of the cooker.
- Carefully screw the foot coupling into the hole by turning it clockwise.
- Tighten it securely by hand. Do not overtighten, as this could damage the threads.

4. Leveling the Cooker:

- Gently return the cooker to its upright position.
- Adjust the height of each foot coupling by turning it clockwise (to lower) or counter-clockwise (to raise) until the cooker is perfectly level and stable. Use a spirit level on the cooker's surface to ensure accuracy.
- Ensure all four feet are firmly on the ground and the cooker does not wobble.

5. Final Check:

- Once leveled, push the cooker back into its desired position, ensuring no cables or hoses are pinched.
- Reconnect the power supply.

6. Operation and Usage

The cooker foot coupling is a passive component that provides structural support and leveling. Once correctly installed and adjusted, it requires no further operational input. Its function is to ensure the cooker remains stable and level during use, which is crucial for even cooking and safe operation.

Regularly check the stability of your cooker, especially if it is moved or if the floor surface changes. Re-leveling may be required periodically.

7. Care and Maintenance

The C00037386 cooker foot coupling is designed for durability and requires minimal maintenance. However, periodic checks can extend its lifespan and ensure continued stability of your appliance:

- **Regular Inspection:** Periodically inspect the foot couplings for any signs of wear, damage, or corrosion.
- **Cleaning:** If necessary, wipe the foot couplings with a damp cloth to remove dust or grease. Avoid harsh chemicals that could damage the material.
- **Stability Check:** Gently push on the cooker from different angles to ensure it remains stable and does not wobble. If instability is detected, re-level the cooker as described in the installation section.

8. Troubleshooting

Problem	Possible Cause	Solution
Cooker is wobbly or unstable.	Foot couplings are unevenly adjusted or damaged.	Re-level the cooker by adjusting the foot couplings. Inspect for damage and replace if necessary.
Foot coupling cannot be screwed in.	Incorrect threading or debris in the hole.	Ensure the foot coupling is aligned correctly. Clean the threaded hole. Do not force it. Verify part compatibility.
Cooker is still not level after adjustment.	Floor surface is extremely uneven or other structural issues with the cooker.	Consider using shims under the foot couplings if the floor is severely uneven. Consult a professional if the cooker's frame appears bent or damaged.

9. Specifications

Feature	Detail
Part Name	Cooker Foot Coupling
Model Number	C00037386
Brand Compatibility	Ariston, Hotpoint, Indesit
Material	Durable plastic/metal composite (typical for such parts)
Function	Appliance leveling and stability

10. Warranty Information

Specific warranty details for this replacement part are typically provided by the retailer or the manufacturer at the time of purchase. Please refer to your purchase receipt or contact the seller for information regarding warranty coverage, terms, and conditions.

Note: This product is a spare part. Warranty terms may differ from those of a complete appliance.

11. Customer Support

If you require further assistance with the installation, compatibility, or troubleshooting of your Ariston Hotpoint Cooker Foot Coupling (Model C00037386), please contact your retailer or a qualified appliance technician.

For general inquiries about Ariston or Hotpoint appliances, please visit their official websites or contact their customer service departments directly.

Disclaimer: The information provided in this manual is for general guidance. Always prioritize safety and consult a professional if you are unsure about any procedure.