

[Manuals.plus](#) /

> [IKONIC](#) /

> Ikonic Artistic IKTC-15 Hair Scissor 5.5" – VG10 Stainless Steel Shear, Mirror Finish, Sword Blade, Comfortable Grip – Styling, Trimming, Grooming – Barber, Salon, Beauty Parlour, Unisex Personal Use

IKONIC 2211916669122

Ikonic Artistic IKTC-15 Hair Scissor User Manual

Model: IKTC-15 (2211916669122)

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use, maintenance, and care of your Ikonic Artistic IKTC-15 Hair Scissor. Crafted with premium VG10 stainless steel and CNC technology, this scissor is designed for precision cutting and ergonomic comfort, suitable for professional salon use, barbering, and personal grooming.

Key features include:

- **VG10 Stainless Steel:** Ensures ultra-sharp precision for clean, smooth cuts.
- **CNC Technology:** Provides superior blade balance and alignment for detailed styling and bulk trimming.
- **Ergonomic Handle:** Designed to reduce hand strain during prolonged use.
- **Mirror-Finish Silver Body:** A sleek, polished aesthetic with a classic straight-edge blade.
- **Versatile Use:** Ideal for stylists, barbers, and home users seeking professional-grade performance.

SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines when handling and using your hair scissors:

- Keep scissors out of reach of children and pets.
- Handle scissors with extreme care, as blades are very sharp.
- Always hold scissors by the handles, never by the blades.
- Do not attempt to cut anything other than hair with these scissors to prevent damage to the blades.
- Store scissors in a protective case or pouch when not in use to prevent accidental injury and protect the blades.
- Avoid dropping the scissors, as this can misalign the blades and affect cutting performance.
- If the scissors become dull or damaged, do not attempt to use them. Seek professional sharpening or replacement.

SETUP

Upon receiving your Ikonic Artistic IKTC-15 Hair Scissor, follow these steps for initial setup:

1. **Unboxing:** Carefully remove the scissor from its packaging. Inspect for any visible damage during transit.

2. **Initial Cleaning:** Before first use, gently wipe the blades with a soft, dry cloth to remove any manufacturing residues.
3. **Lubrication Check:** The pivot screw may have a light coating of oil from the factory. If it appears dry, apply a small drop of scissor oil (not included) to the pivot point.
4. **Tension Adjustment:** The scissor comes pre-adjusted for optimal tension. However, you can fine-tune it if needed. The tension screw (located at the pivot) can be adjusted with a small tool (often included with professional scissors, but not specified here). Turn clockwise to tighten for more resistance, counter-clockwise to loosen for less resistance. Test the tension by opening and closing the blades; they should close smoothly without excessive play or stiffness.



Image: The Ikonic Artistic IKTC-15 Hair Scissor presented in its retail packaging, highlighting its sleek design and professional presentation.

OPERATING

Proper technique is essential for achieving precise cuts and maintaining the longevity of your scissors.

1. **Grip:** Hold the scissor with your ring finger in the smaller finger hole and your thumb in the larger finger hole. Your index and middle fingers should rest on the shank of the blade for stability and control. The pinky finger rests on the finger rest (tang) for balance.

2. **Blade Movement:** Only the thumb should move when cutting. The ring finger and the rest of the hand should remain stable. This technique ensures smooth, controlled cuts and reduces hand fatigue.
3. **Cutting Angle:** Always ensure the hair is clean and dry (unless performing specific wet cuts). Hold the hair section firmly and position the scissor at the desired angle.
4. **Clean Cuts:** Use the full length of the blade for most cuts, closing the blades smoothly and completely. Avoid "chewing" the hair with just the tips of the blades, as this can lead to split ends and dull the scissor prematurely.
5. **Precision Work:** For detailed work, such as point cutting or texturizing, use the tips of the blades with controlled, small movements.



Image: The Ikonik Artistic IKTC-15 Hair Scissor with its blades open, demonstrating the sharp cutting edges and the design of the finger holes and tang for comfortable grip.

MAINTENANCE

Proper maintenance is crucial for preserving the sharpness and lifespan of your Ikonik Artistic IKTC-15 Hair Scissor.

- **Daily Cleaning:** After each use, wipe the blades clean with a soft, dry cloth to remove any hair clippings or product residue.

- **Lubrication:** Apply a small drop of professional scissor oil (specifically designed for hair scissors) to the pivot point at the end of each day or after every few uses. Open and close the scissors several times to distribute the oil, then wipe off any excess. This helps maintain smooth action and prevents corrosion.
- **Storage:** Always store your scissors in a protective case, pouch, or on a magnetic holder to prevent accidental damage to the blades and ensure safety. Do not store them loosely in a drawer where they can rub against other tools.
- **Avoid Harsh Chemicals:** Do not use harsh disinfectants or cleaning agents that are not specifically designed for professional hair cutting tools, as they can corrode the steel or damage the finish.
- **Professional Sharpening:** Hair scissors require specialized sharpening. Do not attempt to sharpen them yourself with standard sharpeners. Send them to a reputable professional scissor sharpener when they begin to feel dull or pull hair. The frequency depends on usage, but typically every 6-12 months for professional use.



Image: The Ikonic Artistic IKTC-15 Hair Scissor in its closed state, highlighting the polished mirror finish and the precise alignment of the VG10 stainless steel blades.

TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions.

Problem	Possible Cause	Solution
Scissors pulling or bending hair	Dull blades, incorrect tension, hair product buildup.	Clean blades thoroughly. Adjust tension (tighten slightly). If still dull, professional sharpening is required.
Blades feel stiff or gritty	Lack of lubrication, dirt/hair trapped in pivot.	Clean pivot area. Apply a drop of scissor oil to the pivot and work it in.
Blades feel too loose or wobbly	Tension screw is too loose.	Tighten the tension screw slightly until the blades close smoothly with appropriate resistance.
Scissor makes a clicking sound	Blades are misaligned or damaged.	Check for visible damage. If no damage, try adjusting tension. If problem persists, seek professional repair/sharpening.

SPECIFICATIONS

Model Number	IKTC-15 (2211916669122)
Blade Material	VG10 Stainless Steel
Overall Length	5.5 inches
Finish Type	Mirror Polished
Color	Silver
Item Weight	150 Grams
Product Dimensions	9 x 2 x 23 cm
Hand Orientation	Ambidextrous
Manufacturer	SSIZ INTERNATIONAL PVT LTD
Country of Origin	China

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or professional servicing, please refer to the warranty card included with your purchase or contact IKONIC customer service directly. Contact details can typically be found on the product packaging or the official IKONIC website.

It is recommended to retain your proof of purchase for warranty claims.

