



[Manuals.plus](#) /

› [Kids Licensing](#) /

› Kids Licensing Minecraft Digital Watch User Manual

Kids Licensing 0878311-MIN4223

Minecraft Digital Watch User Manual

Brand: Kids Licensing

Model: 0878311-MIN4223

1. INTRODUCTION

Welcome to your new Minecraft Digital Watch! This manual provides essential instructions for setting up, operating, and maintaining your watch. Please read it carefully to ensure proper use and longevity of your product.

2. PRODUCT OVERVIEW

The Minecraft Digital Watch features a vibrant design inspired by the popular game, making it a fun and functional accessory. It displays time digitally and is designed for ease of use.



Figure 2.1: Front view of the Minecraft Digital Watch. The watch features a green circular face with a digital time display. The strap is adorned with iconic Minecraft elements, including green Creeper faces and red TNT blocks on a black background.



Figure 2.2: The Minecraft Digital Watch presented in its original retail packaging. The watch is displayed against a cardboard backing featuring a Minecraft landscape with clouds and a bee, highlighting the product's theme.

3. SETUP: SETTING THE TIME

To set the time on your digital watch, follow these general steps. Note that button functions may vary slightly, but most digital watches follow a similar pattern:

1. **Identify Buttons:** Typically, digital watches have one or two buttons on the side. One is usually for "Mode" or "Display," and the other for "Set" or "Adjust."
2. **Enter Time Setting Mode:** Press the **Mode** button repeatedly until the time display starts flashing, or you

see an indicator for setting the time.

3. **Adjust Hours:** While the hours are flashing, press the **Set** or **Adjust** button to advance the hour. Continue pressing until the correct hour is displayed. Pay attention to AM/PM if your watch uses a 12-hour format.
4. **Adjust Minutes:** Press the **Mode** button again to move to the minute setting. The minutes should now be flashing. Use the **Set** or **Adjust** button to set the correct minutes.
5. **Confirm Settings:** Once the time is set, press the **Mode** button one last time to exit the setting mode. The time should now be displayed steadily.

If your watch has additional settings like date or seconds, you can usually cycle through these by pressing the **Mode** button and adjusting with the **Set** button.

4. OPERATING INSTRUCTIONS

Your Minecraft Digital Watch is designed for simple operation:

- **View Time:** The watch continuously displays the current time (hours and minutes).
- **Check Date (if applicable):** If your watch supports date display, a quick press of the **Mode** button might cycle through time, date, and seconds.
- **Backlight (if applicable):** Some digital watches include a backlight feature. If present, pressing a specific button (often the "Set" or "Adjust" button when not in setting mode) will illuminate the display for a few seconds.

5. MAINTENANCE

- **Cleaning:** Wipe the watch case and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but avoid excessive moisture. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** This watch is generally splash-resistant, but not waterproof. Avoid submerging it in water, showering, or swimming while wearing it.
- **Battery Replacement:** When the display becomes dim or stops working, the battery may need replacement. This typically requires opening the watch back. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and function.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

6. TROUBLESHOOTING

- **Display is Blank:**
 - Check if the battery needs replacement.
 - Ensure no buttons are stuck in a pressed position.
- **Time is Incorrect:**
 - Follow the "Setting the Time" instructions in Section 3 to reset the time.
 - A weak battery can sometimes cause timekeeping inaccuracies.
- **Buttons Not Responding:**
 - Ensure the watch is not in a locked mode (if applicable).
 - Try a soft reset by removing and reinserting the battery (if comfortable doing so, otherwise seek professional help).

7. SPECIFICATIONS

Model Number	0878311-MIN4223
Brand	Kids Licensing
Dimensions (L x W x H)	50 x 50 x 28 cm
Weight	120 grams
Power Source	Battery (type not specified)

Note: The listed dimensions (50 x 50 x 28 cm) and weight (120 grams) appear to refer to the product in its packaging rather than the watch itself.

8. WARRANTY AND SUPPORT

Specific warranty details and direct support contact information are not provided in the available product data. For warranty claims or technical assistance, please refer to the retailer or the official Kids Licensing website where you purchased the product.