

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Taurus](#) /

› [Taurus Air Fry Digital Duo Double Air Fryer 9L 2200W Instruction Manual](#)

Taurus 973980000

Taurus Air Fry Digital Duo Double Air Fryer 9L 2200W Instruction Manual

Model: 973980000

1. INTRODUCTION

Thank you for choosing the Taurus Air Fry Digital Duo Double Air Fryer. This appliance is designed to cook a variety of foods using hot air, offering a healthier alternative to traditional deep frying. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation.
- Do not block any ventilation openings.

3. PRODUCT OVERVIEW

The Taurus Air Fry Digital Duo features two independent cooking zones, allowing you to prepare different foods simultaneously with varying settings.



Figure 1: Overall view of the Taurus Air Fry Digital Duo Double Air Fryer with food in both baskets.



Figure 2: The air fryer positioned on a kitchen counter, showcasing its dual baskets with different food items.

Components:

- Main Unit with Digital Control Panel
- Two independent cooking baskets with handles
- Non-stick cooking trays (inside baskets)



Figure 3: Detailed view of the digital touch control panel, showing time, temperature, and function buttons.

The digital control panel allows for precise temperature and time adjustments for each cooking zone, along with specialized functions like 'Sync Finish' and 'Dual Cook'.

4. SETUP

Unpacking:

1. Remove all packaging materials and promotional labels from the air fryer.
2. Ensure all components are present and undamaged.

Before First Use:

1. Wipe the exterior of the appliance with a damp cloth.
2. Wash the cooking baskets and non-stick trays with warm, soapy water. Rinse thoroughly and dry completely.
3. Place the air fryer on a stable, level, heat-resistant surface. Ensure there is at least 15 cm (6 inches) of clear space around the back and sides for proper ventilation.

4. Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

Basic Operation:

1. Place the food into the cooking baskets. Do not overfill.
2. Slide the baskets back into the main unit until they click into place.
3. Press the power button to turn on the appliance.
4. Select the desired cooking zone (1 or 2) on the digital control panel.
5. Adjust the temperature (50°C to 200°C) and time using the '+' and '-' buttons.
6. Press the start/pause button to begin cooking.



Figure 4: A user interacting with the touch control panel to set cooking parameters.

Dual Zone Functions:

- **Sync Finish:** This function allows two different foods, cooked at different temperatures and times in separate baskets, to finish cooking simultaneously. Set the desired time and temperature for each zone, then activate 'Sync Finish'. The air fryer will automatically adjust the start times for each zone to ensure they complete at the same moment.
- **Dual Cook:** Use this function to apply the same cooking settings (time and temperature) to both baskets. Set the parameters for one zone, then activate 'Dual Cook' to mirror these settings to the second zone.



Figure 5: A user carefully removing a cooking basket from the air fryer after cooking.

Preheating:

For best results, preheating the air fryer for 3-5 minutes at the desired temperature is recommended before adding food.

Shaking Food:

Some foods, especially smaller items like fries, may require shaking halfway through the cooking process to ensure even crisping. Carefully remove the basket, shake the contents, and reinsert the basket.

6. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your air fryer.

After Each Use:

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the cooking baskets and non-stick trays. Wash them with warm, soapy water and a non-abrasive sponge. Rinse and dry thoroughly.
3. Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
4. Clean the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove food residue from the heating element, ensuring the appliance is unplugged and cool.

Note: The cooking baskets and trays are NOT dishwasher safe. Do not immerse the main unit, cord, or plug in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the power button.
Food is not cooked evenly.	Baskets are overfilled; food not shaken; incorrect temperature/time.	Do not overfill baskets. Shake food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the baskets and interior thoroughly. For fatty foods, add a small amount of water to the bottom of the outer basket to prevent smoke.
Food is not crispy.	Too much moisture in food; not enough oil (for some items); incorrect temperature/time.	Pat food dry before cooking. Lightly spray with oil if desired. Increase cooking time or temperature slightly.

8. SPECIFICATIONS

Detailed technical specifications for the Taurus Air Fry Digital Duo Double Air Fryer:



Figure 6: Product dimensions for the Taurus Air Fry Digital Duo.

Feature	Detail
Model Number	973980000
Brand	Taurus
Capacity	9 Liters (total, dual zone)
Power Output	2200 Watts (as per title, 2600W in specs might be max peak)
Voltage	220 Volts
Temperature Range	50°C to 200°C
Control Method	Touchscreen Digital Display
Material	Stainless steel, non-stick coating (baskets), Plastic (interior)
Dimensions (P x L x H)	45 cm x 35 cm x 35 cm
Weight	9.2 Kilograms
Special Features	Dual Zone Functionality, Sync Finish, Dual Cook

Feature	Detail
Dishwasher Safe	No (baskets and trays)

9. WARRANTY AND SUPPORT

This Taurus Air Fry Digital Duo Double Air Fryer comes with a **2-year manufacturer warranty**. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact Taurus customer service through their official website or the retailer where the product was purchased.

