

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [We Are Rewind](#) /
- › [We Are Rewind Kurt Bluetooth Cassette Player Instruction Manual](#)

We Are Rewind 252427

We Are Rewind Kurt Bluetooth Cassette Player Instruction Manual

Model: 252427

1. PRODUCT OVERVIEW

The We Are Rewind Kurt is a portable cassette player and recorder featuring Bluetooth 5.1 connectivity and a rechargeable lithium battery. It allows for both playback of audio cassettes and recording via its audio input.



Image 1.1: Front view of the We Are Rewind Kurt Bluetooth Cassette Player, showcasing the cassette window and minimalist design.

Key Features:

- **Bluetooth 5.1 Connectivity:** For wireless audio streaming to compatible devices.
- **Rechargeable Lithium Battery:** Provides up to 12 hours of playback.
- **Audio Input:** Enables recording from external sources.
- **Cassette Compartment:** Secure storage and playback for standard audio cassettes.
- **Aluminum Design:** Durable and lightweight construction.

2. SETUP

2.1 Unboxing and Initial Charge

1. Carefully remove the cassette player and all accessories from the packaging.
2. Locate the USB-C charging cable.
3. Connect the USB-C cable to the charging port on the side of the player and the other end to a compatible USB power adapter (not included).
4. Allow the device to charge fully before first use. The charging indicator light will change color or turn off when charging is complete.

READY TO REWIND?

Like the old cassette players, our players have:

- Fast Forward / Rewind buttons
- Headphone Output
- Volume Control
- Audio Input

But to keep up with the times, we've added a few **modern touches.**



Image 2.1: Side view of the cassette player, highlighting the USB-C charging port and other audio jacks.

2.2 Powering On/Off

- To power on, press and hold the Power button (usually indicated by a circle with a vertical line) until the indicator light illuminates.
- To power off, press and hold the Power button again until the indicator light turns off.

3. OPERATING INSTRUCTIONS

3.1 Loading a Cassette

1. Gently press the Eject button to open the cassette compartment door.
2. Insert a standard audio cassette with the open side facing upwards and the tape side facing the player's head.
3. Close the compartment door firmly until it clicks into place.

3.2 Playback

1. Ensure a cassette is loaded.
2. Connect headphones to the 3.5mm headphone jack or pair a Bluetooth device (see 3.3 Bluetooth Pairing).

3. Press the Play button (triangle icon).
4. Adjust the volume using the volume control knob.
5. To stop playback, press the Stop button (square icon).
6. Use the Fast Forward (double arrow right) and Rewind (double arrow left) buttons to navigate the tape. Note: The player may not automatically stop at the end of the tape during fast forward/rewind; manually press Stop.



Image 3.1: Top view of the cassette player, illustrating the playback controls (Play, Stop, Fast Forward, Rewind) and volume knob.

3.3 Bluetooth Pairing

1. Power on the cassette player.
2. Activate Bluetooth on your desired receiving device (e.g., headphones, speaker).
3. Press and hold the Bluetooth pairing button on the cassette player (often indicated by a Bluetooth symbol). The indicator light will flash, signifying pairing mode.
4. On your receiving device, select "We Are Rewind Kurt" from the list of available Bluetooth devices.
5. Once paired, the indicator light on the player will become solid.



STEREO PLAYBACK & RECORDING

Create your own mixtapes
and give the most romantic
gift for Valentine's Day.



BUILT-IN WIRELESS

Wireless Bluetooth 5.1
connection with on/off
button in addition to a
3.5 mm mini-jack plug.



Image 3.2: The We Are Rewind Kurt player shown with a pair of headphones, demonstrating its Bluetooth connectivity feature.

3.4 Recording

1. Insert a blank or recordable cassette into the compartment.
2. Connect an audio source (e.g., smartphone, computer) to the 3.5mm audio input jack on the player using an auxiliary cable (not included).
3. Press the Record button (red circle) simultaneously with the Play button. The player will begin recording from the audio input.
4. Ensure the audio input level is appropriate to avoid distortion. The player features automatic level control.
5. To stop recording, press the Stop button.

4. MAINTENANCE

4.1 Cleaning

- Regularly clean the tape head, pinch roller, and capstan with a cotton swab lightly dampened with isopropyl alcohol. This helps maintain optimal sound quality and prevents tape damage.
- Wipe the exterior of the player with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

4.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the device for an extended period, charge it to approximately 50% and store in a cool, dry place.

5. TROUBLESHOOTING

5.1 No Playback / Tape Not Moving

- **Check Power:** Ensure the player is powered on and has sufficient battery charge.
- **Cassette Insertion:** Verify the cassette is inserted correctly and the compartment door is fully closed.
- **Tape Condition:** Inspect the cassette tape for damage or tangles. Try a different cassette.
- **Controls:** Ensure the Play button is pressed firmly.

5.2 Poor Sound Quality / Hissing

- **Clean Heads:** Clean the tape head, pinch roller, and capstan as described in Section 4.1.
- **Cassette Quality:** The quality of the cassette tape significantly impacts sound. Try a different, known-good cassette.
- **Volume Levels:** Adjust the volume on both the player and your connected headphones/speaker. Excessive volume can introduce distortion.
- **Headphone/Speaker Connection:** Ensure headphones or speakers are fully plugged into the 3.5mm jack or properly paired via Bluetooth.

5.3 Bluetooth Pairing Issues

- **Pairing Mode:** Ensure the player is in Bluetooth pairing mode (indicator light flashing).
- **Device Visibility:** Make sure your receiving device's Bluetooth is on and discoverable.
- **Distance:** Keep the player and receiving device within close proximity (typically within 10 meters).
- **Interference:** Move away from other wireless devices that might cause interference.
- **Reset:** Try turning both the player and the receiving device off and on again.

5.4 Cassette Tape Damage (Eating Tape)

- **Clean Components:** Dirty or sticky pinch rollers and capstans can cause tape damage. Clean them thoroughly (Section 4.1).
- **Tape Condition:** Old or poorly stored tapes can be fragile. Avoid using damaged tapes.
- **Player Malfunction:** If the issue persists with multiple tapes after cleaning, the player may require service. Contact customer support.

6. SPECIFICATIONS

Feature	Specification
Model Number	252427

Product Dimensions	5.54 x 3.5 x 1.32 inches
Item Weight	14.1 ounces
Battery Type	1 Lithium Ion battery (required)
Bluetooth Version	5.1
Manufacturer	We Are Rewind

7. WARRANTY AND SUPPORT

The We Are Rewind Kurt Bluetooth Cassette Player is covered by a manufacturer's warranty. For specific warranty terms, duration, and to register your product, please refer to the warranty card included in your product packaging or visit the official We Are Rewind website.

For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact We Are Rewind customer support through their official website or the contact information provided with your purchase.

Online Resources: For additional information and updates, please visit the [We Are Rewind Store on Amazon](#).