

## Brandt WDB184QWP

# Brandt WDB184QWP Washing Machine User Manual

Model: WDB184QWP

## 1. INTRODUCTION

Thank you for choosing the Brandt WDB184QWP Washing Machine. This manual provides essential information for the safe installation, operation, and maintenance of your appliance. Please read these instructions carefully before using the machine and keep them for future reference.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Do not operate the machine if it is damaged or malfunctioning.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Brandt WDB184QWP washing machine.



**Figure 1:** Front view of the Brandt WDB184QWP Washing Machine. This image displays the front of the Brandt WDB184QWP washing machine. Key components visible include the detergent dispenser drawer on the top left, the central program selection knob, a digital display, and various function buttons on the control panel. The large circular door for loading laundry is prominently featured, and a service access panel is located at the bottom right.

### Key Components:

- **Detergent Dispenser Drawer:** For adding detergent and fabric softener.
- **Control Panel:** Includes program selector knob, digital display, and function buttons.
- **Door:** For loading and unloading laundry.
- **Service Access Panel:** Located at the bottom right, for accessing the drain pump filter.

## 4. INSTALLATION

## 4.1 Unpacking

- Remove all packaging materials, including the transport bolts at the rear of the machine. Keep the transport bolts for future transport.
- Inspect the machine for any damage. If damaged, do not install or operate it.

## 4.2 Location

- Place the machine on a firm, level floor.
- Ensure adequate ventilation around the appliance.
- Avoid direct sunlight or extreme temperatures.

## 4.3 Water Connection

- Connect the cold water inlet hose to the cold water tap and the corresponding inlet valve on the machine.
- Ensure all connections are tight to prevent leaks.

## 4.4 Drain Connection

- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during operation.
- The drain hose should be at a height between 60 cm and 100 cm from the floor.

## 4.5 Electrical Connection

- Plug the power cord into a grounded electrical outlet.
- Ensure the voltage and frequency match the specifications of your machine (2.2E+2 Volts AC).
- Do not use extension cords or adapters.

## 4.6 Leveling the Machine

- Adjust the adjustable feet at the bottom of the machine until it is perfectly level and stable.
- A level machine reduces vibration and noise during operation.

# 5. OPERATING INSTRUCTIONS

---

## 5.1 Control Panel Overview

Refer to Figure 1 for the location of the control panel components.

- **Program Selector Knob:** Turn to select the desired wash program.
- **Digital Display:** Shows remaining time, error codes, and selected options.
- **Function Buttons:** Modify program settings (e.g., temperature, spin speed, delay start, extra rinse).
- **Start/Pause Button:** To start or pause a wash cycle.

## 5.2 Loading Laundry

- Open the door and load laundry loosely into the drum, ensuring not to overload.
- Close the door firmly until it clicks shut.

### 5.3 Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add detergent to the main wash compartment and fabric softener to its designated compartment.
- Close the dispenser drawer gently.

### 5.4 Program Selection

- Turn the Program Selector Knob to choose a suitable program for your laundry type (e.g., Cotton, Synthetics, Delicates, Quick Wash, Spin, Rinse).
- Adjust additional options like temperature or spin speed using the function buttons if desired.

### 5.5 Starting a Cycle

- Press the Start/Pause button to begin the selected wash cycle.
- The digital display will show the estimated remaining time.

### 5.6 Drying Cycle (for Washer-Dryer Function)

This appliance features an integrated drying function with a capacity of 6 kg.

- After a wash cycle, you can select a drying program or a combined wash and dry program.
- Ensure the load size is appropriate for the drying capacity (max 6 kg).
- Select the desired drying level (e.g., iron dry, cupboard dry) using the program selector or function buttons.
- Press Start/Pause to begin the drying cycle.

### 5.7 End of Cycle

- The machine will signal the end of the cycle.
- Wait for the door lock indicator to turn off before opening the door.
- Remove laundry promptly to prevent creasing.

## 6. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

### 6.1 Cleaning the Detergent Dispenser

- Pull out the dispenser drawer completely.
- Remove any residue and rinse under running water.
- Clean the housing of the dispenser drawer with a brush.

### 6.2 Cleaning the Drum

- Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) periodically to prevent odors and limescale buildup.

### 6.3 Cleaning the Drain Pump Filter

- Open the service access panel at the bottom right of the machine.
- Place a shallow container to collect any residual water.
- Unscrew the filter cover slowly to drain water, then remove the filter and clean it of lint and foreign objects.
- Reinsert the filter and close the cover and access panel securely.

## 6.4 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

## 7. TROUBLESHOOTING

Before contacting customer service, refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected; Start button not pressed.	Check power connection; Ensure door is latched; Select a program; Press Start.
No water intake	Water tap closed; Water inlet hose kinked; Water supply cut off.	Open water tap; Straighten hose; Check water supply.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter (see Section 6.3).
Excessive vibration/noise	Machine not level; Transport bolts not removed; Overloaded drum.	Adjust leveling feet; Remove transport bolts; Reduce laundry load.
Door will not open	Cycle not finished; Water still in drum; Safety lock active.	Wait for cycle to complete; Run a drain cycle; Wait a few minutes for safety lock to release.

## 8. SPECIFICATIONS

Key technical specifications for the Brandt WDB184QWP Washing Machine:

- **Model:** WDB184QWP
- **Brand:** Brandt
- **Washing Capacity:** 8 Kilograms
- **Drying Capacity:** 6 Kilograms
- **Maximum Spin Speed:** 1400 RPM
- **Voltage:** 2.2E+2 Volts AC
- **Product Dimensions (W x D x H):** 60 x 60 x 80 cm
- **Weight:** 62.99 kg
- **Access Location:** Front-loader





## 9. WARRANTY AND SUPPORT

 
 
For warranty information, please refer to the warranty card provided with your appliance or contact your local Brandt dealer or authorized service center. Keep your purchase receipt as proof of purchase.

For technical support or service requests, please visit the official Brandt website or contact their customer service department.

 
© 2023 Brandt. All rights reserved.

## Related Documents - WDB184QWP

	<p><a href="#">Brandt Automatic Washing Machine BT16524QN User Manual</a></p> <p>This manual provides detailed instructions for the installation, operation, and maintenance of the Brandt BT16524QN automatic washing machine. It covers safety precautions, program selection, troubleshooting, and energy efficiency information.</p>
	<p><a href="#">Guide d'Utilisation Four Brandt : Installation, Fonctionnement et Entretien</a></p> <p>Ce manuel d'utilisation détaillé pour les fours Brandt couvre l'installation, les modes de cuisson, les fonctions de sécurité, le nettoyage et l'entretien. Découvrez comment utiliser votre four Brandt de manière optimale.</p>
	<p><a href="#">How to Clean Your Washing Machine's Pump Filter</a></p> <p>A guide on how to clean the pump filter of a washing machine, with instructions provided in English, Czech, Slovak, and Polish.</p>
	<p><a href="#">Adjusting Water Hardness Setting on Washing Machine</a></p> <p>Instructions for adjusting the water hardness setting on a washing machine, with steps provided in Czech, Slovak, Polish, and English. Includes guidance on detergent dosage based on water hardness.</p>

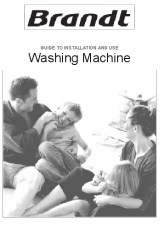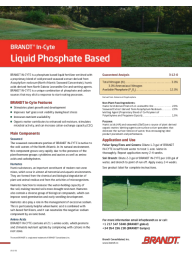	<p><a href="#">Brandt Washing Machine: Installation and User Guide</a></p> <p>Comprehensive guide for installing, operating, and maintaining your Brandt washing machine (WFB190WA). Includes safety instructions, troubleshooting, and technical specifications.</p>
	<p><a href="#">BRANDT In-Cyte Liquid Phosphate Fertilizer - Product Information</a></p> <p>BRANDT In-Cyte is a liquid fertilizer containing phosphate, seaweed extract, humic acids, and amino acids designed to stimulate plant growth, improve root viability, and enhance nutrient availability. Learn about its components, guaranteed analysis, and application methods.</p>

Documents - Brandt – WDB184QWP

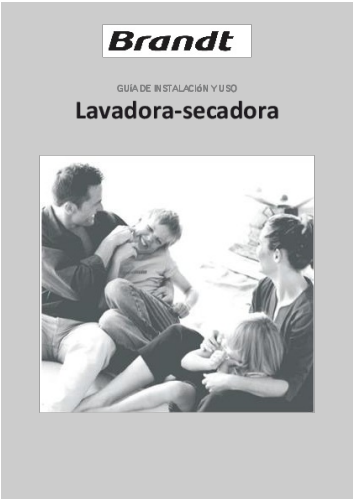 


[\[pdf\]](#) User Manual

Utilisateur de Microsoft Office manual instrucciones lavasecadora WDB184QWP electro brandt es 2022 02 |||

GUA DE INSTALACI N Y USO Lavadora-secadora NDICE Instrucciones de seguridad ..... rpidamente poca cantidad de ropa muy poca sucia. 25 Cuadro de los programas de lavado Programa **WDB184QWP** Capacidad de lavado/secado kg Tiempo mostrado 8.0 8.0 Higiene 5.0/5.0 2:27 Algodn ...

lang:es **score:35** filesize: 1.65 M page\_count: 37 document date: 2021-08-30

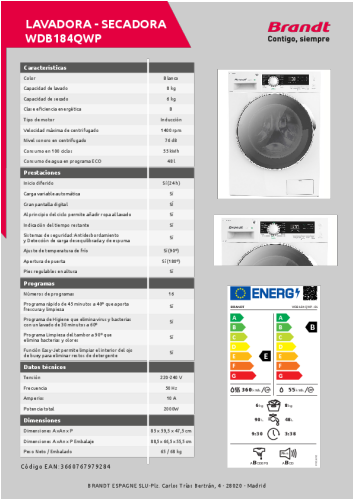 


[\[pdf\]](#)

WDB184QWP ficha producto 1 electro brandt es 2022 05 |||

LAVADORA - SECADORA LWAVDABD18O4RQAWWPFB194QWP Caractersticas Color Capacidad de lavado Capacidad d ... 000W 85 x 59,5 x 47,5 cm 88,5 x 66,5 x 55,5 cm 65 / 68 kg BRANDT A B C D E E F G 360 kWh **WDB184QWP** -01 A B B C D E F G 55 kWh 6 kg 90 L 9:30 8 kg 48 L 3:38 ABCDEFG 76 dB ABCD ...

lang:es **score:33** filesize: 368.95 K page\_count: 1 document date: 2022-04-29

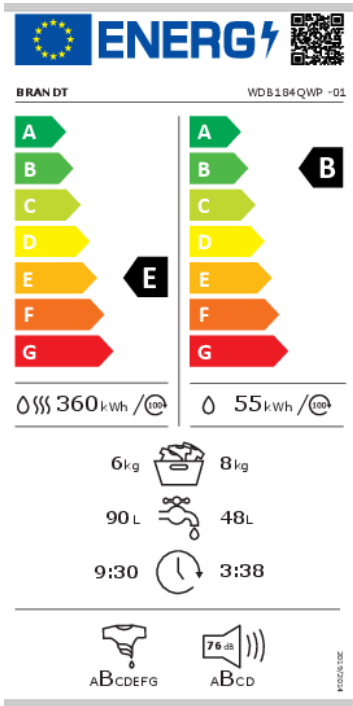

[pdf]

00104710209703 4 sgfm elcorteingles es SGFM dctm MEDIA03 202303 09 |||

BRANDT A B C D E E F G 360 kWh **WDB184QWP** -01 A B B C D E F G 55 kWh 6 kg 90 L 9:30 8 kg 48 L 3:38 2019/2014 ABCDEFG 76 dB ABCD ...

lang:es score:17 filesize: 76.14 K page\_count: 1 document date: 2021-04-19