

Linsar CSC-ECOM

Linsar CSC-ECOM Upholstery Cleaning Device

User Manual

Model: CSC-ECOM | Brand: Linsar

1. INTRODUCTION

Thank you for choosing the Linsar CSC-ECOM Upholstery Cleaning Device. This wet and dry vacuum cleaner is designed for efficient and thorough cleaning of various fabric surfaces, including upholstery, carpets, stairs, and car seats. Please read this manual carefully before first use to ensure safe and optimal operation.

2. SAFETY INSTRUCTIONS

- Always disconnect the power cord from the electrical outlet before performing any maintenance or cleaning the device.
- Do not immerse the device in water or other liquids.
- Keep the device away from children and pets.
- Use only cleaning solutions recommended for spray extraction cleaners. Avoid using flammable or corrosive liquids.
- Ensure all filters are correctly installed before operation.
- Do not use the device to pick up hot ashes, sharp objects, or large debris that could damage the motor or hose.
- Inspect the power cord and plug for damage before each use. Do not use if damaged.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Linsar CSC-ECOM Main Unit
- Flexible Hose with Spray Nozzle

- Upholstery Cleaning Tool with Brush
- Crevice Tool
- Fresh Water Tank (1.0L capacity)
- Dirty Water Tank (0.5L capacity)
- User Manual



Image 3.1: Overview of the Linsar CSC-ECOM device and its included accessories.

4. SETUP

4.1 Assembling the Device

1. Place the main unit on a stable, flat surface.
2. Attach the flexible hose to the designated port on the main unit. Ensure it clicks securely into place.
3. Select the appropriate cleaning tool (upholstery brush or crevice tool) and attach it to the end of the spray nozzle.

4.2 Filling the Fresh Water Tank

1. Remove the fresh water tank from the main unit.
2. Unscrew the cap and fill the tank with clean water. For enhanced cleaning, add a suitable upholstery cleaning solution according to the solution manufacturer's instructions. Do not overfill past the MAX line.
3. Securely replace the cap and reinsert the fresh water tank into the main unit until it locks into position.



Image 4.1: The dual-tank system, showing the 1.0L fresh water tank and 0.5L dirty water tank.



Image 4.2: The dual-tank system separates clean and dirty water for effective cleaning.

5. OPERATING INSTRUCTIONS

5.1 Pre-Cleaning Steps

- Vacuum the area to be cleaned with a regular vacuum cleaner to remove loose dirt and debris.
- Test the cleaning solution on an inconspicuous area of the fabric for colorfastness before full application.

5.2 General Cleaning Procedure

1. Plug the device into a suitable electrical outlet.
2. Turn on the device using the power switch.
3. Hold the cleaning tool firmly against the surface to be cleaned.
4. Press the spray trigger to release cleaning solution onto the fabric.
5. Slowly pull the cleaning tool across the wet area, allowing the powerful suction to extract the dirty solution. Overlap strokes slightly.
6. For heavily soiled areas, repeat the spray and extract process. You may also pre-spray the area and let the solution sit for a few minutes before extracting.
7. Continue cleaning until the dirty water being extracted appears clear.
8. After cleaning, make several dry passes over the area to remove as much moisture as possible.



Image 5.1: Cleaning a sofa using the upholstery cleaning tool.



Image 5.2: Detailed view of the cleaning process on upholstery.



Image 5.3: The device is effective for cleaning car seats and interiors.



Image 5.4: Cleaning a carpeted area with the upholstery cleaning tool.



Image 5.5: The device can also be used for wet spills on hard surfaces.

VERSATILE CLEANING WITH DUAL ATTACHMENT OPTIONS



Image 5.6: The device offers versatile cleaning with dual attachment options for different surfaces.

6. MAINTENANCE

6.1 Emptying and Cleaning the Dirty Water Tank

1. After each use, turn off and unplug the device.
2. Remove the dirty water tank from the main unit.
3. Carefully empty the dirty water into a sink or drain.
4. Rinse the dirty water tank thoroughly with clean water.
5. Allow the tank to air dry before reassembling or storing.

6.2 Cleaning the Nozzle and Hose

- Rinse the cleaning tool and hose under running water to remove any residue.
- Check the nozzle for blockages and clear if necessary.

6.3 Storage

Store the device in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure all tanks are empty and clean before storage.



Image 6.1: The compact design allows for convenient storage in small spaces.



Image 6.2: The device features a compact design for easy storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No spray from nozzle	Fresh water tank empty; Nozzle clogged; Pump malfunction	Refill fresh water tank; Clean nozzle; Contact customer support

Problem	Possible Cause	Solution
Low suction power	Dirty water tank full; Hose or nozzle clogged; Filter dirty; Tank not seated correctly	Empty dirty water tank; Clear blockage; Clean filter; Re-seat tank
Device not turning on	Not plugged in; Power outlet faulty; Power cord damaged	Check power connection; Try different outlet; Do not use if cord is damaged, contact support
Water leaking	Tanks not properly sealed; Hose not securely attached; Tank cracked	Ensure tanks are sealed; Reattach hose; Contact customer support for replacement parts

8. SPECIFICATIONS

Feature	Specification
Brand	Linsar
Model Number	CSC-ECOM
Power	400 Watts
Voltage	240 Volts
Fresh Water Tank Capacity	1 Litre
Dirty Water Tank Capacity	0.5 Litre (implied from image, not explicit in specs)
Material	Plastic
Noise Level	80 Decibels
Special Features	Wet/Dry, Portable
Cable Length	3.3 meters
Item Weight	4.27 Kilograms
Filter Type	HEPA Filter
Surface Recommendation	Carpet, Upholstery



Image 8.1: The 400W motor provides efficient cleaning power.

LONG REACH WITH 3.3M CABLE

Easy access to different areas of the room without the need to change sockets



Easy access to different areas of the room without the need to change sockets

Image 8.2: The 3.3-meter cable allows for extended reach without frequent outlet changes.

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms and conditions for the Linsar CSC-ECOM Upholstery Cleaning Device is not available in the provided product details. For warranty claims, technical support, or spare parts inquiries, please refer to the contact information provided with your purchase documentation or visit the official Linsar website.

Availability of spare parts: Information unavailable.

