

Wahl Family Pro Cut

Wahl Family Pro Cut Hair Clipper Instruction Manual

Model: Family Pro Cut

INTRODUCTION

The Wahl Family Pro Cut Cordless Hair Clipper is designed for versatile personal grooming, suitable for both home and professional use. This manual provides essential information for its safe and effective use, from initial setup to maintenance, ensuring optimal performance and longevity of your device.

SETUP

1. Unboxing and Components

Carefully remove all items from the packaging. Verify that all components are present:

- Wahl Family Pro Cut Hair Clipper
- 6 Colored Guide Combs (various lengths)
- Charger
- Cleaning Brush
- Blade Oil
- Styling Comb
- Scissors
- Storage Pouch



Image 1: The Wahl Family Pro Cut Hair Clipper displayed with its complete set of accessories, including guide combs, charger, cleaning tools, and styling instruments.

2. Selecting Cutting Lengths

Choose the desired cutting length by selecting one of the colored guide combs. Each comb corresponds to a specific hair length. Always ensure the comb is securely attached before beginning to cut.

3. Hair Cutting Techniques

For best results, ensure hair is clean and dry. Always start with a longer guide comb length than you anticipate needing, and gradually reduce it if a shorter cut is desired. Move the clipper against the direction of hair growth for an even and consistent cut. Use smooth, overlapping strokes. For detailing, remove the guide comb and use the bare blade carefully.

MAINTENANCE

1. Cleaning the Blades

After each use, turn off and unplug the clipper. Use the provided cleaning brush to remove any loose hair from the blades. The blades are removable and washable for thorough cleaning. Detach the blades, rinse them under running water, and ensure they are completely dry before reattaching.

2. Oiling the Blades

To maintain optimal cutting performance and extend blade life, apply a few drops of the included blade oil to the teeth of the blades after every few uses or after cleaning. Turn the clipper on for a few seconds to distribute the oil evenly, then wipe off any excess.

3. Storage

Store the clipper and all its accessories in the provided storage pouch. This protects the device from dust and damage, keeping all components organized and readily available for your next use. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Wahl Family Pro Cut Hair Clipper, refer to the following common solutions:

- **Clipper Not Turning On:** Ensure the clipper is fully charged. Check that the power switch is in the 'ON' position. If using corded, verify the power adapter is securely plugged into both the clipper and a working electrical outlet.
- **Poor Cutting Performance:** Clean the blades thoroughly to remove any accumulated hair or debris. Apply blade oil as instructed in the maintenance section. Check if the blades are dull or damaged; if so, they may need replacement.
- **Battery Not Charging:** Verify that the charger is correctly connected to the clipper and the power outlet. Ensure the outlet is functional. If the issue persists, the charger or battery may require inspection by a qualified technician.
- **Excessive Noise or Vibration:** This can often be resolved by cleaning and oiling the blades. Ensure all components are securely attached.

If these steps do not resolve the issue, please contact Wahl customer support for further assistance.

SPECIFICATIONS

Model Name	Family Pro Cut
Model Number	3024100
Brand	Wahl
Power Source	Cordless (Lithium-metal battery included) / Electric with cord (Bivolt)
Blade Material	Metal
Special Features	Colored guide combs, Bivolt voltage
Product Dimensions	7 x 16 x 24 cm
Product Weight	500 g
UPC / GTIN	043917011110

WARRANTY INFORMATION

The Wahl Family Pro Cut Hair Clipper is covered by a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your original purchase receipt as proof of purchase for any warranty claims. The warranty does not cover damage resulting from misuse, neglect, unauthorized repairs, or normal wear and tear.

SUPPORT

For further assistance, product inquiries, or technical support, please contact Wahl customer service. You can find contact details on the product packaging or by visiting Wahl's official website. When contacting support, please have your product model number (Family Pro Cut, Model 3024100) and proof of purchase readily available.