

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Philco](#) /

› [PHILCO Dual Alarm Clock Model 1006-GR User Manual](#)

Philco 1006-GR

PHILCO Dual Alarm Clock Model 1006-GR User Manual

Model: 1006-GR

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your new PHILCO Dual Alarm Clock Model 1006-GR. Please read this manual thoroughly before using the device to ensure proper function and to maximize your user experience. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PRODUCT OVERVIEW

Front View

The front of the PHILCO Dual Alarm Clock features a clear LED display for time and status indicators.



Image Description: This image displays the front of the PHILCO Dual Alarm Clock. It is a black rectangular device with a prominent green 0.6-inch LED display showing "12:01". Below the time, the "PHILCO" brand name is visible. Small indicators for "Buzzer", "Alarm 1", "Radio", "Sleep", "Alarm 2", and "Radio" are also present around the display.

Top View and Controls

The top panel houses all control buttons for setting time, alarms, radio functions, and volume.



Image Description: This image shows the top of the PHILCO Dual Alarm Clock. It features a speaker grille at the back and an array of control buttons. From left to right, there are buttons for "SOURCE", "-VOLUME+", "-TUNING+", "PRESET", "AL 1", "AL 2", "HOUR", "MINUTE", and "CLOCK". A large "SNOOZE" button is centrally located at the front of the top panel.

Package Contents

Upon opening the package, you will find the PHILCO Dual Alarm Clock, its power adapter, and the owner's manual.



Image Description: This image displays the PHILCO Dual Alarm Clock along with its accessories. The black clock is visible, accompanied by a black power adapter with its cord, and a printed owner's manual titled "PHILCO DUAL ALARM CLOCK RADIO".

SETUP

1. Power Connection

1. Connect the provided power adapter to the DC input jack on the back of the clock.
2. Plug the power adapter into a standard 110V or 220V AC wall outlet. The clock is compatible with both voltages.
3. The LED display will light up, indicating the clock is receiving power.

2. Installing Backup Batteries (Optional)

For time and alarm settings retention during a power outage, install backup batteries.

- Locate the battery compartment on the bottom of the clock.
- Open the battery compartment cover.

- Insert two (2) AAA batteries (not included), observing the correct polarity (+ and -) as indicated inside the compartment.
- Close the battery compartment cover securely.
- **Note:** Backup batteries only maintain time and alarm settings; they do not power the display or alarm functions during a power outage.

OPERATING INSTRUCTIONS

1. Setting the Time

1. Press and hold the **CLOCK** button until the hour digits begin to flash.
2. Press the **HOUR** button repeatedly to adjust the hour. Observe the PM indicator if setting a PM time.
3. Press the **MINUTE** button repeatedly to adjust the minutes.
4. Press the **CLOCK** button again to confirm and save the time. The digits will stop flashing.

2. Setting Alarms (Alarm 1 and Alarm 2)

The clock features two independent alarms.

1. Press and hold the **AL 1** button (for Alarm 1) or **AL 2** button (for Alarm 2) until the alarm hour digits begin to flash.
2. Press the **HOUR** button to set the desired alarm hour.
3. Press the **MINUTE** button to set the desired alarm minutes.
4. Press the **AL 1** or **AL 2** button again to confirm the alarm time.
5. Immediately after setting the alarm time, press the **AL 1** or **AL 2** button repeatedly to cycle through alarm modes:
 - **Buzzer:** Alarm will sound with a buzzer.
 - **Radio:** Alarm will turn on the FM radio to the last tuned station.
 - **OFF:** Alarm is deactivated.
6. The corresponding alarm indicator (Alarm 1 or Alarm 2) will light up on the display when an alarm is active.

3. Using the FM Radio

1. Press the **SOURCE** button to switch to FM radio mode. The frequency will appear on the display.
2. **Manual Tuning:** Press the **-TUNING+** buttons (< or >) briefly to adjust the frequency step by step.
3. **Automatic Scan:** Press and hold the **-TUNING+** buttons (< or >) for a few seconds to automatically scan for the next available station.
4. **Adjusting Volume:** Press the **-VOLUME+** buttons (< or >) to increase or decrease the radio volume.

4. Setting Radio Presets (20 Presets)

1. Tune to your desired FM station using the tuning buttons.
2. Press and hold the **PRESET** button until the preset number flashes on the display.
3. Use the **-TUNING+** buttons (< or >) to select the desired preset number (P01-P20).
4. Press the **PRESET** button again to save the station to the selected preset.
5. To recall a preset station, briefly press the **PRESET** button repeatedly to cycle through your saved stations.

5. Snooze Function

When an alarm sounds, press the large **SNOOZE** button to temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after this period.

6. Stopping the Alarm

To turn off an active alarm for 24 hours, press the corresponding **AL 1** or **AL 2** button. The alarm indicator will remain lit, and the alarm will sound again at the same time the next day.

To completely deactivate an alarm, follow the steps for "Setting Alarms" and select the "OFF" option.

MAINTENANCE

Cleaning

- Always unplug the clock from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces of the clock.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid getting moisture into any openings of the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Display off	Power adapter not connected or outlet is not active.	Ensure the power adapter is securely plugged into the clock and a working wall outlet.
Alarm does not sound	Alarm is not set, set to OFF, or volume is too low (for radio alarm).	Verify alarm time and mode (Buzzer/Radio) are correctly set. Increase radio volume if using radio alarm.
Radio static or poor reception	Weak signal or interference.	Adjust the position of the clock. Try tuning to a stronger station.
Time/Alarm settings lost after power outage	Backup batteries are not installed or are depleted.	Install new AAA backup batteries.

SPECIFICATIONS

- **Brand:** Philco
- **Model:** 1006-GR
- **Display Type:** 0.6" LED
- **Color:** Black
- **Power Source:** Corded Electric (110V/220V compatible)
- **Backup Batteries:** 2 x AAA (not included)
- **Radio:** Digital FM Radio with 20 Presets
- **Alarm Features:** Dual Alarms (Buzzer or Radio)
- **Snooze Duration:** Approximately 9 minutes
- **Product Dimensions:** 4.33"W x 4.96"H
- **Item Weight:** 9.3 ounces

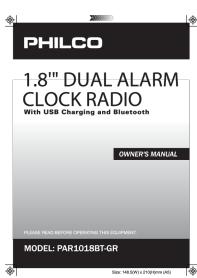
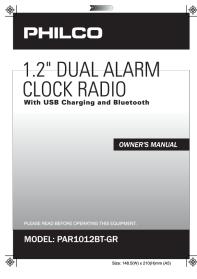
- **Material:** Acrylonitrile Butadiene Styrene

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Philco website. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: PHILCO

Related Documents - 1006-GR

	<p>Philco PAR1018BT-GR 1.8" Dual Alarm Clock Radio with USB Charging and Bluetooth - Owner's Manual</p> <p>Owner's manual for the Philco PAR1018BT-GR 1.8" Dual Alarm Clock Radio. This manual provides safety instructions, control locations, setup guides for clock, alarm, sleep timer, USB charging, Bluetooth pairing, AUX IN operation, FM radio listening, troubleshooting, specifications, and warranty information.</p>
	<p>Philco PAR1012BT-GR 1.2-Inch Dual Alarm Clock Radio with USB Charging and Bluetooth - Owner's Manual</p> <p>Owner's manual for the Philco PAR1012BT-GR dual alarm clock radio. Learn how to set the clock, alarms, use Bluetooth, FM radio, USB charging, and understand safety instructions and warranty information.</p>
	<p>Philco PDA240UVX Dehumidifier and Air Purifier User Manual</p> <p>Comprehensive user manual for the Philco PDA240UVX, detailing its features as a dehumidifier and air purifier, operation modes, maintenance, and troubleshooting. Includes specifications and operational guidance.</p>
	<p>Philco PH2740IC Induction Hob: Instruction and Installation Manual</p> <p>Comprehensive guide for the Philco PH2740IC Induction Hob, covering safety, installation, operation, features, troubleshooting, and maintenance. Learn how to use your induction cooktop safely and efficiently.</p>

 <p>PHILCO Famous for Quality the World Over</p> <p>FOOD DEHYDRATOR SUŠIČKA POTRAVÍN SUŠIČKA POTRAVÍN SUŠZARKA DO ZÝNOVÍ</p> <p>PHFD 5080</p> <p>Práčka Návod na obsluhu</p>	<p><u>PHILCO PHFD 5080 Food Dehydrator User Manual</u></p> <p>Comprehensive user manual for the PHILCO PHFD 5080 Food Dehydrator, detailing operation, safety, care, and troubleshooting for optimal food drying.</p>
 <p>Práčka Návod na obsluhu</p> <p>PHILCO Famous for Quality the World Over</p> <p>PLDSI 127 ATG</p>	<p><u>Philco PLDSI 127 ATG Návod na obsluhu</u></p> <p>Kompletný návod na obsluhu pre práčku Philco PLDSI 127 ATG. Obsahuje pokyny pre bezpečnú inštaláciu, používanie, starostlivosť a riešenie problémov.</p>