

Weiser 9GED92500-002

Weiser Powerbolt 3 Electronic Door Lock User Manual

Model: 9GED92500-002

Brand: Weiser

1. INTRODUCTION

Welcome to the user manual for your new Weiser Powerbolt 3 Electronic Door Lock. This keyless entry deadbolt offers a convenient and secure way to manage access to your home or property. Designed for ease of use and installation, the Powerbolt 3 provides reliable performance with features like customizable user codes, auto-locking, and enhanced security.

Key features include:

- Convenient keyless entry with a 10-button keypad.
- Ability to customize up to 25 user codes and 5 one-time user codes.
- Optional Auto-Lock feature with adjustable timings (30 seconds, 1, 3, 5, or 10 minutes).
- Vacation Mode to temporarily disable the keypad for enhanced security when away.
- SmartKey Technology for easy re-keying and advanced break-in protection.
- Easy installation requiring only a screwdriver, supported by the BILT App for 3D video and voice guidance.

2. PRODUCT OVERVIEW

The Weiser Powerbolt 3 is an electronic deadbolt designed for various door types, offering a modern and secure access solution. Its sleek design integrates seamlessly with most home decors.



Figure 2.1: Weiser Powerbolt 3 Electronic Door Lock (Exterior and Interior Units)

This image displays the complete Weiser Powerbolt 3 electronic deadbolt, showing both the exterior keypad unit with its 10-button layout and keyhole, and the interior unit with its thumb-turn and battery cover. Both components are finished in satin nickel.

The Powerbolt 3 is versatile and suitable for various applications, including:

- Front, back, or side doors
- Garage doors
- Shed or storage doors
- Office doors

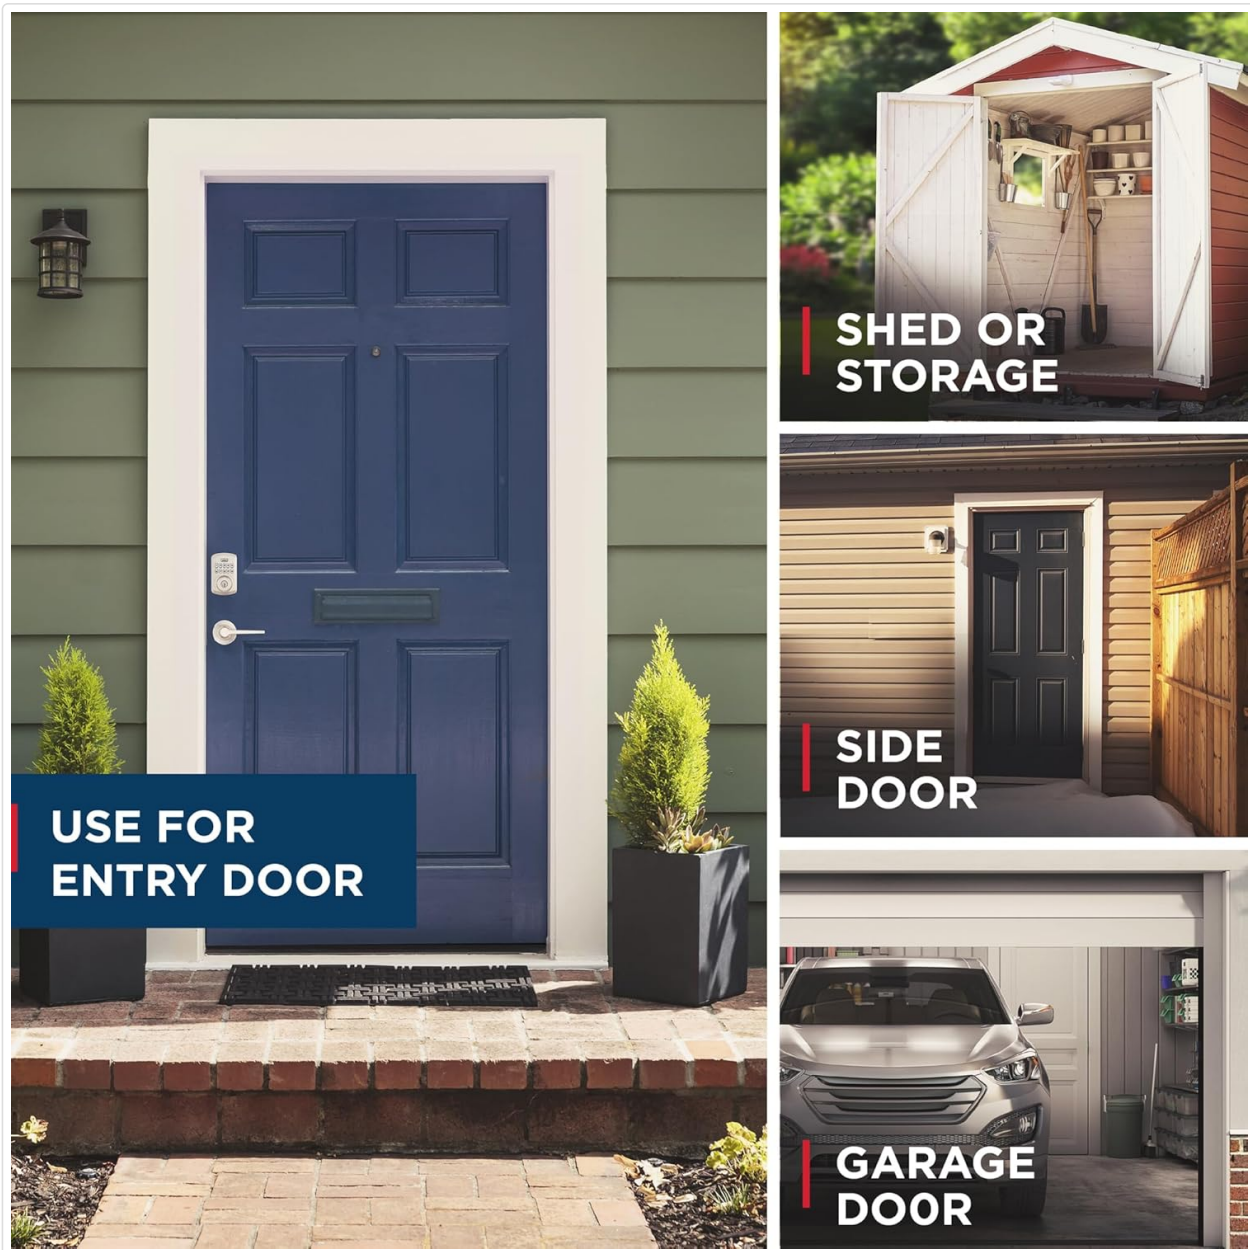 


Figure 2.2: Versatile Applications of Powerbolt 3

This image illustrates various common applications for the Weiser Powerbolt 3, including an entry door, a shed door, a side door, and a garage door, highlighting its adaptability for different access points.

3. WHAT'S IN THE BOX

Before beginning installation, please verify that all components are present in your package:

- Exterior Deadbolt Assembly
- Interior Deadbolt Assembly
- Adjustable Latch
- Strike Plate
- Mounting Plate
- Installation Hardware (screws)
- 2 Weiser Keys

- SmartKey Tool
- Drive-in Collar
- Installation Guide (Manual)

DIMENSIONS

WEISER®
Powerbolt® 3



Figure 3.1: Included Components

This image displays all the components included in the Weiser Powerbolt 3 package, laid out for easy identification. It shows the exterior and interior lock assemblies, keys, SmartKey tool, latch, strike plate, mounting plate, and various screws.

4. SETUP AND INSTALLATION

The Weiser Powerbolt 3 is designed for simple installation, requiring only a screwdriver. For detailed, step-by-step 3D video and voice-guided instructions, it is highly recommended to use the BILT App.

4.1 Door Preparation

Ensure your door meets the following specifications:

- **Cross Bore Hole Diameter:** 1-1/2 inches or 2-1/8 inches
- **Door Thickness:** 1-3/8 inches to 1-3/4 inches standard
- **Adjustable Latch Backset:** 2-3/8 inches to 2-3/4 inches



Figure 4.1: Product Dimensions and Latch Backset

This diagram provides detailed dimensions for the Weiser Powerbolt 3 exterior and interior units, along with an illustration of the adjustable latch backset, crucial for proper door preparation and installation.

4.2 Installation Steps (General Overview)

1. Install the latch into the door edge.
2. Install the exterior keypad assembly.
3. Install the mounting plate.
4. Install the interior assembly.
5. Install the strike plate on the door frame.
6. Insert 4 AA batteries (not included) into the interior assembly.
7. Perform the door handing process to calibrate the lock to your door.

For detailed visual and audio guidance, download the BILT App on your smartphone or tablet.

5. OPERATING INSTRUCTIONS

5.1 Keyless Entry

To unlock the door using the keypad:

1. Enter your 4-8 digit user code.
2. The deadbolt will retract, and the door can be opened.



Figure 5.1: Convenient Keyless Entry

This image shows a person using the Weiser Powerbolt 3 keypad to gain keyless entry into a home, demonstrating the convenience and security of the system.

5.2 One-Touch Motorized Locking

To lock the door from the exterior, simply press the Lock button (the 'Weiser' button) on the keypad. The deadbolt will extend automatically. From the interior, turn the thumb-turn to lock the door.

5.3 Low Light Code Entry

The keypad features bright LED lights that illuminate the buttons, making it easy to enter your user code at night or in low-light conditions. Simply tap the keypad to activate the lights.



Figure 5.2: Easy Low Light Code Entry

This image highlights the backlit keypad of the Weiser Powerbolt 3, showing how the illuminated buttons make it easy to enter codes even in dark environments, such as at night.

6. PROGRAMMING USER CODES

The Powerbolt 3 allows for easy management of access codes. You can program up to 25 unique user codes for regular access and 5 one-time user codes for temporary access.

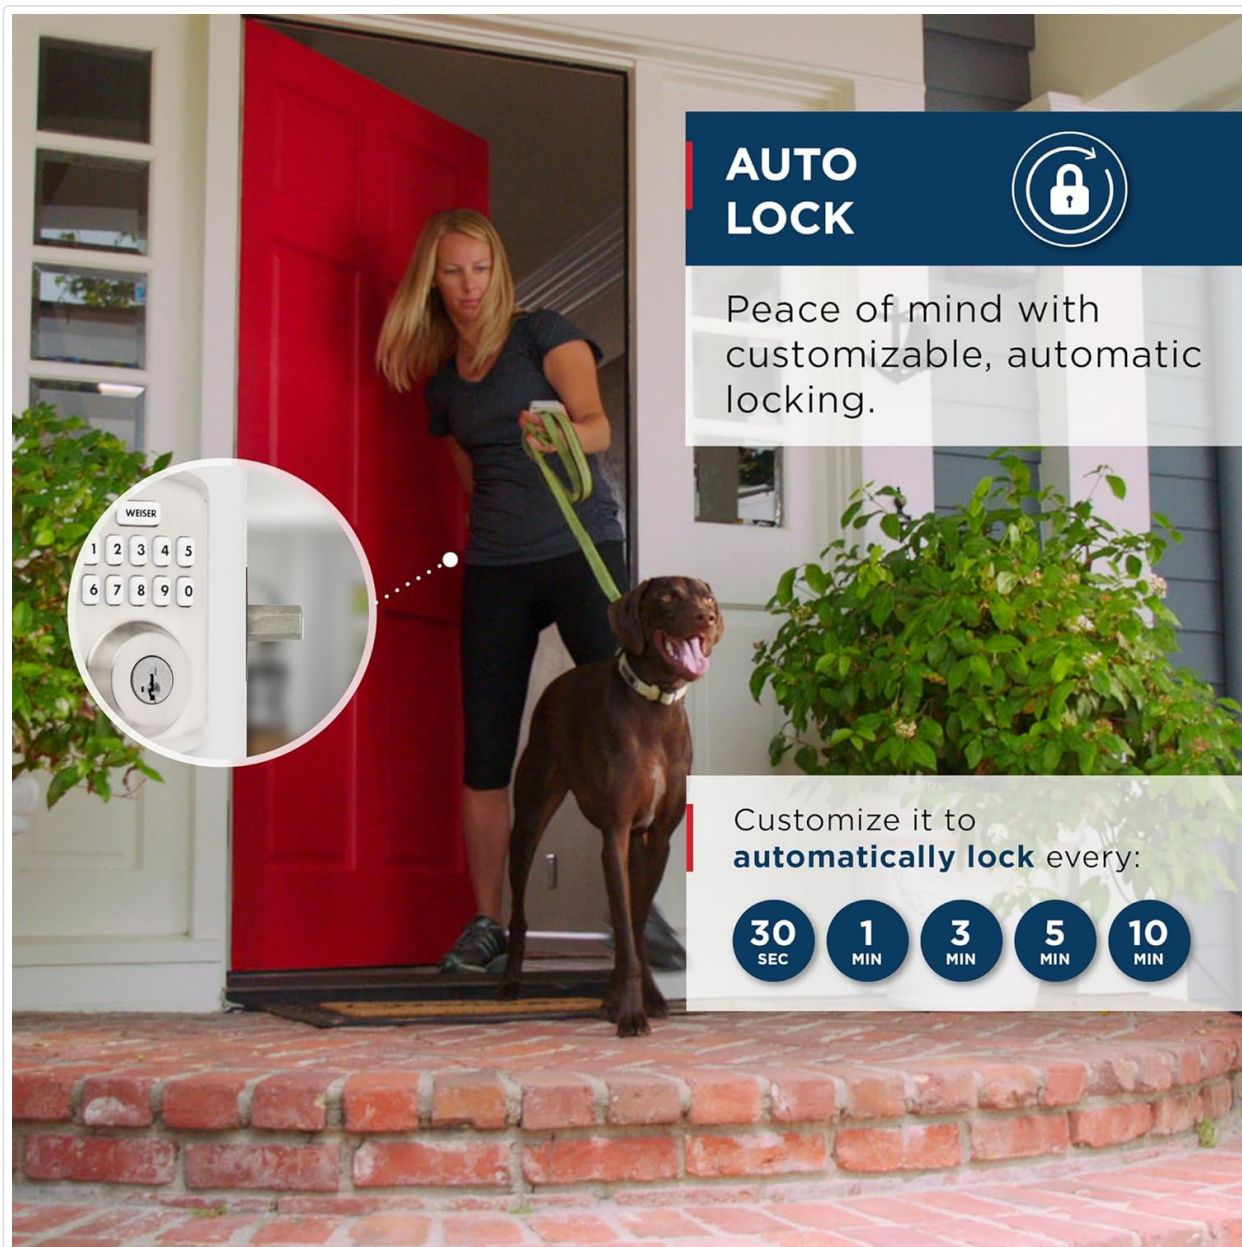 


Figure 6.1: Easy Code Management

This image illustrates the easy code management feature of the Weiser Powerbolt 3, showing how up to 25 regular user codes and 5 one-time user codes can be programmed, with visual representations of different user types.

Refer to your detailed installation guide for specific steps on adding, deleting, or modifying user codes and the master code.

7. ADVANCED FEATURES

7.1 Auto-Lock

For added security and peace of mind, the Powerbolt 3 can be set to automatically lock after a specified delay. This feature ensures your door is always secured, even if you forget to lock it manually.

- Customizable auto-lock timings: 30 seconds, 1 minute, 3 minutes, 5 minutes, or 10 minutes.



Figure 7.1: Auto-Lock Functionality

This image demonstrates the auto-lock feature of the Weiser Powerbolt 3, showing a person leaving a house with a dog, and the lock automatically engaging after a customizable time delay, providing peace of mind.

7.2 Vacation Mode

Activate Vacation Mode to temporarily disable the keypad. This feature is ideal when you are away for an extended period, ensuring no one can operate your door lock via the keypad.





			
<p>12-Month Battery Life</p> <p>Battery lasts at least 12 months, giving you more time in between battery replacements. Uses 4x AA alkaline batteries (batteries not included).</p>	<p>Easy Install and BILT App</p> <p>Installs with just a screwdriver. BILT 3D interactive instructions provide voice, text and animation guidance for an easy installation.</p>	<p>Certified Security</p> <p>Certified Security: Security, Durability and Finish are BHMA Grade 3 certified, withstanding over 1,000 lbs of force when attempting to pry the deadbolt off the door.</p>	<p>What's in the Box</p> <p>Includes exterior deadbolt, interior deadbolt, latch, strike, mounting plate, installation hardware, 2 Weiser keys and installation guide.</p>

Figure 7.2: Vacation Mode

This image depicts a couple walking through an airport, symbolizing travel, while showcasing the Weiser Powerbolt 3's Vacation Mode feature, which temporarily disables the keypad for enhanced security when the user is away.

7.3 SmartKey Technology

Weiser's SmartKey Security™ provides advanced protection against common break-in techniques and allows you to re-key your lock yourself in seconds. This means you can easily re-key the lock to any Kwikset (KW1) key, making lost or unreturned keys obsolete.



Figure 7.3: SmartKey Security™

This image illustrates the SmartKey Security™ technology, showing a cutaway view of the lock cylinder and highlighting its resistance to advanced break-in techniques like picking and bumping, along with the re-keying process.

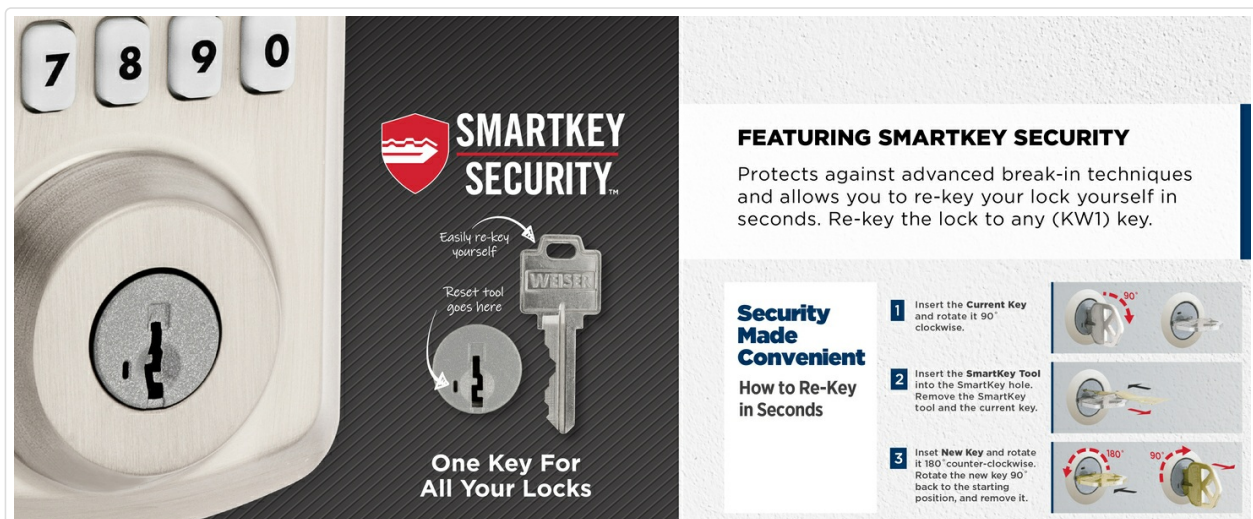 


Figure 7.4: How to Re-Key in Seconds

This image provides a step-by-step visual guide on how to re-key the Weiser Powerbolt 3 using the SmartKey tool, demonstrating the simplicity of the process for users to change their lock's keying themselves.

7.4 Intrusion Alert

If three consecutive incorrect user code attempts are made, the lock will sound an alarm and disable the keypad for 1 minute to prevent tampering. This feature enhances security by deterring unauthorized access attempts.

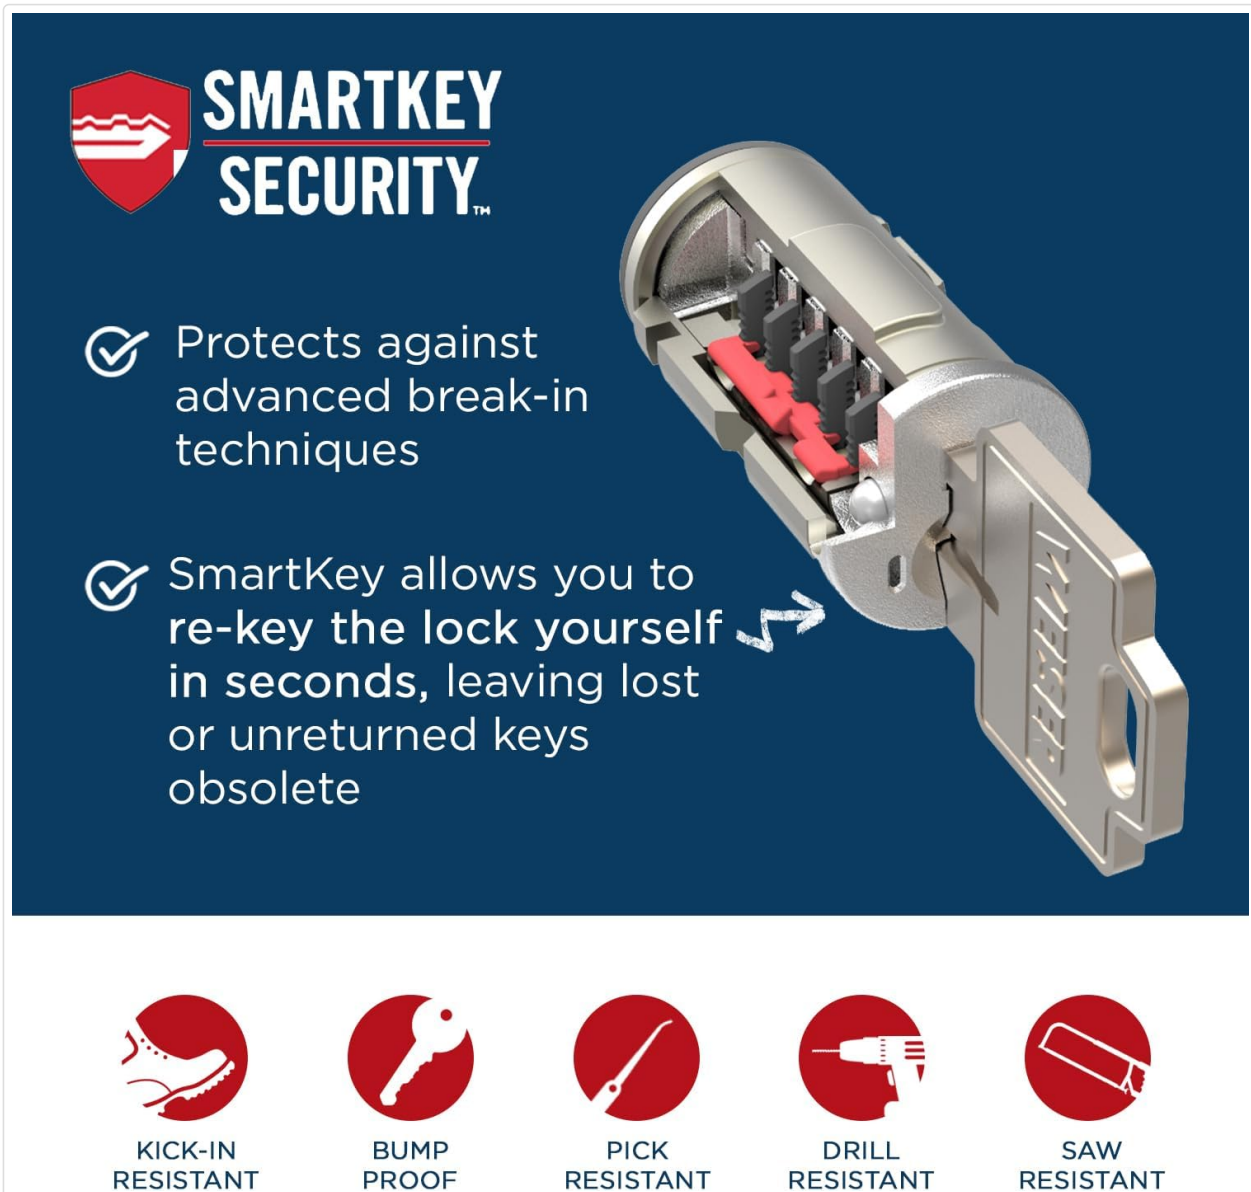 


Figure 7.5: Intrusion Alert System

This image illustrates the intrusion alert feature of the Weiser Powerbolt 3, showing the keypad flashing red and sounding an alarm after three incorrect user code attempts, indicating a security breach attempt.

8. MAINTENANCE

The Weiser Powerbolt 3 is designed for low maintenance. The lock operates on 4 AA alkaline batteries (not included) and provides approximately 12 months of battery life under normal usage. When batteries are low, the lock will provide an audible and visual indicator. Replace all four batteries simultaneously when prompted.

To clean the lock, use a soft, damp cloth. Avoid abrasive cleaners or solvents, as they may damage the finish.

or electronic components.

9. TROUBLESHOOTING

If you encounter issues with your Weiser Powerbolt 3, please refer to the following common troubleshooting tips:

- **Lock not responding:** Check battery levels and replace if necessary. Ensure the battery pack is correctly seated.
- **Keypad not lighting up:** Tap the keypad to activate the backlight. If it still doesn't light up, check batteries.
- **Lock not locking/unlocking:** Ensure the door is properly closed and aligned with the strike plate. Re-perform the door handing process if the lock was recently installed or if the door alignment has changed.
- **User code not working:** Verify the user code is correct. Ensure the lock is not in Vacation Mode or disabled due to multiple incorrect entries (Intrusion Alert).
- **Lock beeps continuously:** This may indicate low battery. Replace batteries immediately.

For more detailed troubleshooting steps or persistent issues, please consult the full installation guide or contact Weiser customer support.

10. SPECIFICATIONS

Feature	Detail
Manufacturer	Weiser
Model Number	9GED92500-002
Colour	Satin Nickel
Style	Powerbolt 3
Finish	Brushed
Material	Metal, Plastic
Product Dimensions	2.46 x 7.14 x 11.66 cm; 907.18 g
Item Weight	907 g
Lock Type	Deadbolt, Keypad
Special Features	Auto-Lock, BHMA/ANSI Grade 3, Motorized Locking, SmartKey Technology, Vacation Mode (Disable Keypad)
Power Source	4 x AA Batteries (not included)

Feature	Detail
Battery Life	Approximately 12 months
Door Thickness Compatibility	1-3/8" to 1-3/4" standard
Cross Bore Hole Compatibility	1-1/2" or 2-1/8" diameter
Country of Origin	China

11. WARRANTY AND SUPPORT

11.1 Warranty Information

The Weiser Powerbolt 3 comes with the following warranty coverage:

- **1-Year Limited Electronics Warranty:** Covers defects in materials and workmanship of the electronic components.
- **Lifetime Limited Mechanical & Finish Warranty:** Covers defects in materials and workmanship of the mechanical components and the finish of the lock.

Please retain your proof of purchase for warranty claims. For full warranty details and conditions, refer to the documentation included with your product or visit the official Weiser website.



 
 
 
11.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Weiser customer support. You can find contact information on the official Weiser website or in your product packaging.

Visit the [Weiser Store on Amazon](#) for more products and information.

Related Documents - 9GED92500-002

<div>User Manual of Product 1: Weiser Powerbolt 3 Matte Black Keyless Entry Door Lock/Deadbolt Lock, Single Cylinder Paged Door Lock with Deadbolt, Paged 1/2 in x 1 in Door Cylinder, Aisle Lock, Electronic Door Locks for Entry Door</div> <div>User Manual of Product 2: Weiser Powerbolt 3 Matte Black Keyless Entry Door Lock/Deadbolt Lock, Single Cylinder Paged Door Lock with Deadbolt, Paged 1/2 in x 1 in Door Cylinder, Aisle Lock, Electronic Door Locks for Entry Door</div>	<div>Weiser Powerbolt 2 Keyless Entry Door Lock Installation and User Guide</div> <div>Comprehensive guide for installing and using the Weiser Powerbolt 2 Matte Black Keyless Entry Door Lock/Deadbolt Lock. Includes instructions for setup, programming user codes, changing master codes, and troubleshooting.</div>
---	--

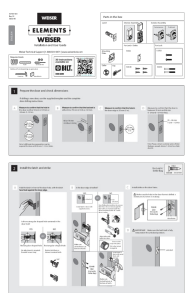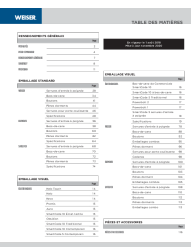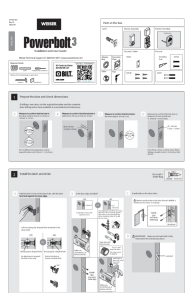	<p>Weiser Powerbolt 2 Keyless Entry Door Lock Installation and User Guide</p> <p>Comprehensive guide for installing and using the Weiser Powerbolt 2 touchpad keyless entry door lock, including setup, programming, troubleshooting, and safety information.</p>
	<p>Weiser Powerbolt 2 Electronic Deadbolt: Installation and Usage Guide</p> <p>Comprehensive guide for the Weiser Powerbolt 2 electronic deadbolt, covering door handing, adding user codes, and removing user codes. Features SmartKey technology.</p>
	<p>Weiser Elements Installation and User Guide</p> <p>Comprehensive installation and user guide for the Weiser Elements electronic door lock, detailing setup, operation, and troubleshooting.</p>
	<p>Weiser Catalogue Complet de Quincaillerie de Porte et Serrures</p> <p>Explorez le catalogue Weiser pour une vaste sélection de quincaillerie de porte, serrures électroniques et mécaniques, incluant les technologies SmartKey et Microban. Trouvez spécifications, finitions et prix.</p>
	<p>Weiser Powerbolt Installation and User Guide</p> <p>Comprehensive guide for installing and using the Weiser Powerbolt electronic lock, including setup, user code management, and troubleshooting.</p>