

One For All URC1310

One For All URC1310 Universal Remote Control User Manual

Model: URC1310

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your One For All URC1310 Universal Remote Control. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience. This remote is designed to control various home entertainment devices, including televisions and set-top boxes.

PRODUCT OVERVIEW

The One For All URC1310 is a universal remote control designed for ease of use. Below is an image of the remote with a description of its key features and buttons.





Figure 1: Front view of the One For All URC1310 Universal Remote Control. The remote is black with a brushed texture, featuring a standard layout of buttons including a red power button at the top left, numerical keys, volume and channel controls, navigation buttons, and media playback controls at the bottom. Colored function buttons (A, B, C, D) are also present.

Button Functions:

- **Power (Red Button):** Turns the selected device on or off.
- **0-9 (Number Buttons):** For direct channel selection or numerical input.
- **TTX/MIX:** Teletext functions.
- **PRE-CH:** Returns to the previous channel.
- **Volume Up/Down (+/-):** Adjusts the volume level.
- **Mute (Speaker with cross):** Mutes or unmutes the audio.

- **Channel Up/Down (CH +/-)**: Changes the channel.
- **CH. LIST**: Displays the channel list.
- **Input/Source (Arrow into box)**: Selects the input source.
- **Menu**: Opens the device's main menu.
- **Guide**: Displays the electronic program guide.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter)**: For navigating menus and confirming selections.
- **Return**: Goes back to the previous screen or menu.
- **Exit**: Exits the current menu or function.
- **Colored Buttons (A, B, C, D)**: Special functions, often context-dependent for smart TVs or set-top boxes.
- **AD.SUBT**: Audio Description / Subtitle control.
- **INFO**: Displays information about the current program or content.
- **TOOLS**: Accesses quick settings or tools menu.
- **Media Playback Controls (Rewind, Play, Fast Forward, Record, Pause, Stop)**: Controls media playback on compatible devices.

SETUP

1. Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

2. Programming the Remote Control

The URC1310 is a universal remote and requires programming to control your specific devices. Refer to the included code list or the One For All website for detailed programming instructions and device codes. The general steps are:

1. Turn on the device you wish to control (e.g., TV, Set-Top Box).
2. Press and hold the **SETUP** button (if available, or a combination of buttons as per specific instructions) on the remote until the LED blinks twice.
3. Enter the 4-digit device code for your brand and device type.
4. Point the remote at the device and press the **POWER** button. If the device turns off, the code is correct.
5. If the device does not respond, try the next code for your brand or use the Code Search function (refer to the full manual for details).

OPERATING INSTRUCTIONS

Once programmed, your URC1310 remote control operates similarly to your original device remote. Ensure the remote is pointed directly at the device you intend to control.

- **Power On/Off**: Press the **Power** button once.
- **Channel Selection**: Use the **CH +/-** buttons to cycle through channels or enter channel numbers directly using the **0-9** buttons.
- **Volume Adjustment**: Use the **Volume +/-** buttons.
- **Menu Navigation**: Press **MENU** to open the menu, then use the **Navigation** buttons (Up, Down, Left, Right) and **OK/Enter** to make selections. Use **RETURN** or **EXIT** to leave menus.
- **Input Source**: Press the **Input/Source** button to cycle through available inputs (HDMI, AV, etc.).

- **Media Playback:** Use the dedicated media buttons (Play, Pause, Stop, Rewind, Fast Forward, Record) for controlling compatible media players or DVRs.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the LED indicator (if present) signals low power. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not operate device.	Incorrect device code entered, batteries are low or incorrectly inserted, remote not pointed at device.	<ul style="list-style-type: none">• Ensure fresh batteries are correctly installed.• Verify the remote is pointed directly at the device.• Re-program the remote with the correct device code. Try alternative codes for your brand.
Some buttons do not work.	Device code may not fully support all functions, or the button is not applicable to the current device.	<ul style="list-style-type: none">• Try a different device code for your brand.• Ensure the button function is supported by your device.
LED indicator does not light up.	Batteries are dead or incorrectly inserted.	<ul style="list-style-type: none">• Replace batteries with new ones.• Check battery polarity.



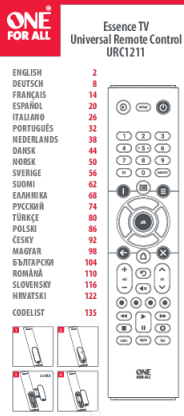
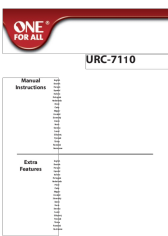

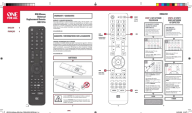 
SPECIFICATIONS

- **Brand:** One For All
- **Model:** URC1310
- **Compatible Devices:** Set Top Box, Television
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Dimensions:** Approximately 50 x 50 x 28 cm (Note: These dimensions likely refer to packaging, actual remote is smaller.)
- **Weight:** Approximately 230 g
- **Special Feature:** Universal

WARRANTY AND SUPPORT

For warranty information, technical support, or to access the latest device codes, please visit the official One For All website or contact their customer service department. Keep your proof of purchase for warranty claims. You can find more information about One For All products at their store: [One For All Store](#).

Related Documents - URC1310

	<p>One For All URC 6810 Universal Remote Setup Guide Learn & Code Programming</p> <p>Comprehensive setup guide for the One For All URC 6810 universal remote. Learn how to program your remote using learning or code methods, control multiple devices, and utilize advanced features.</p>
	<p>One For All OARC04G 4-Device Universal Remote Control User Guide</p> <p>Comprehensive user guide for the One For All OARC04G 4-Device Universal Remote Control. Learn how to install batteries, set up the remote using direct code or search methods, understand keypad functions, use extra features like macros and volume punch through, troubleshoot common issues, and find warranty information.</p>
	<p>ONE FOR ALL URC1211 Essence TV Universal Remote Control User Manual</p> <p>User manual for the ONE FOR ALL URC1211 Essence TV Universal Remote Control. Learn how to set up, use, and program your remote for seamless control of your entertainment devices.</p>
	<p>ONE FOR ALL URC-7110 Universal Remote Control Manual</p> <p>User manual and setup guide for the ONE FOR ALL URC-7110 universal remote control. Learn how to use SimpleSet, Direct Code Set Up, and Search Method, plus explore features like Key Magic and Macros.</p>
	<p>ONE FOR ALL Sport Universal Remote User Guide & Code Book</p> <p>Comprehensive user guide and code book for the ONE FOR ALL Sport Universal Remote (Model URC-2575), detailing setup, advanced features, troubleshooting, and device codes for TVs, VCRs, Satellite Receivers, and Cable Boxes.</p>
	<p>One For All URC 1916 Hisense Universal Replacement Remote Quick Start Guide</p> <p>Learn how to set up and use your One For All URC 1916 universal replacement remote for Hisense TVs. Includes setup instructions, battery replacement, and learning functions.</p>

