

[Manuals.plus](#) /

› [One For All](#) /

› One For All URC1313 Universal Remote Control User Manual

One For All URC1313

One For All URC1313 Universal Remote Control User Manual

INTRODUCTION

This user manual provides detailed instructions for the One For All URC1313 Universal Remote Control. It covers setup, operation, maintenance, and troubleshooting to ensure you get the most out of your device. Please read this manual carefully before using the remote control.





Image: The One For All URC1313 Universal Remote Control, featuring a black ergonomic design with various control buttons for power, navigation, volume, channel, and media playback.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

2. Programming Your Remote Control

The URC1313 is a universal remote control designed to operate various audio/video devices. Programming typically involves entering a code specific to your device's brand or using an automatic search function. Refer to the detailed programming instructions provided in the packaging or on the One For All support website for your specific device type (e.g., TV, DVD, Soundbar).

- **Code Entry:** Power on your device, find its brand code in the provided code list, and follow the remote's instructions to enter the code.
- **Auto Search:** If code entry fails, use the auto search feature to scan for compatible codes.

OPERATING INSTRUCTIONS

Once programmed, your URC1313 remote control can operate your devices. Below is a general overview of common button functions:

- **Power Button** (): Turns your device on or off.
- **Input/Source Buttons** (–, ■, ►): Selects different input sources on your TV or other devices.
- **Playback Controls** (■ Stop, ⏸ Pause, ⏮ Rewind, ► Play, ⏭ Fast Forward, R Record): Controls media playback functions.
- **GUIDE Button**: Accesses the electronic program guide (EPG).
- **Settings/Gear Button**: Opens the device's settings or menu.
- **EXIT Button**: Exits menus or on-screen displays.
- **Colored Buttons** (Red, Cyan, Yellow, Blue): Often used for specific functions within menus or interactive services.
- **Info Button** (i): Displays information about the current program or content.
- **Menu Button** (≡): Opens the main menu of your device.
- **Navigation Pad** (Up, Down, Left, Right arrows): Navigates through menus and options.
- **OK Button**: Confirms selections.
- **Back/Return Button** (←): Returns to the previous screen or menu.
- **Home Button** (△): Accesses the device's home screen or smart hub.
- **Volume Up/Down Buttons** (+/-): Adjusts the volume level.
- **Mute Button** (): Mutes or unmutes the audio.
- **Channel Up/Down Buttons** (^/∨): Changes channels.
- **Number Buttons** (0-9): Directly enters channel numbers or other numerical inputs.
- **SUB (Subtitle) Button**: Toggles subtitles on or off.
- **TEXT Button**: Accesses teletext services.
- **SMART Button**: Accesses smart TV features or apps.
- **AMBILIGHT Button**: Controls Ambilight features on compatible Philips TVs.

MAINTENANCE

Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's performance degrades or if the indicator light (if present) signals low battery. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.

Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not working:** Check if the batteries are correctly inserted and not depleted. Replace them if necessary. Ensure there are no obstructions between the remote and the device.
- **Device not responding:** Verify that the remote is programmed correctly for your specific device. Try re-entering the code or using the auto-search function. Ensure the correct device mode is selected on the remote (if applicable).
- **Limited functionality:** Some advanced functions may not be supported by all universal remote codes. Ensure you have the most compatible code for your device.
- **Indicator light not flashing:** This usually indicates dead batteries or a faulty remote. Replace batteries first.

SPECIFICATIONS

Brand	One For All
Model	URC1313
Color	Black
Battery Type	AAA (Alkaline, not rechargeable)
Connectivity Technology	Infrared
Maximum Range	10 Meters
Product Dimensions	50 x 50 x 28 cm (or 16.2L x 22.7B x 11.8H cm)
Product Weight	230 g
Special Features	Ergonomic design

WARRANTY INFORMATION

One For All products are manufactured to high standards. For specific warranty terms and conditions applicable to your URC1313 Universal Remote Control, please refer to the warranty card included with your product packaging or visit the official One For All website. Keep your proof of purchase for warranty claims.

SUPPORT

For further assistance, programming guides, or frequently asked questions, please visit the official One For All support website. You can typically find detailed product information and contact options there.

Website: [www.oneforall.com/support](#) (Example link, please verify actual support URL)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C6CRDL13>

More documents and user manuals: **<https://manuals.plus/>**