

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Victiv](#) /
- › [Victiv 70" Phone Tripod \(Model P10\) Instruction Manual](#)

## Victiv P10

# Victiv 70" Phone Tripod

## MODEL: P10 - INSTRUCTION MANUAL

### Introduction

---

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Victiv 70" Phone Tripod (Model P10). Please read this manual thoroughly before using the product to ensure safe and efficient operation.

### What's in the Box

---

Verify that all components are present in your package:

- 1x Victiv Cellphone Tripod (P10)
- 1x Universal Cold Shoe Phone Holder
- 1x Wireless Remote Control
- 1x Carrying Bag

### Setup and Assembly

---

Follow these steps to assemble your Victiv Phone Tripod:

1. **Unfold the Tripod Legs:** Gently pull the three legs outwards until they are fully extended and stable on a flat surface.
2. **Extend the Tripod:** Loosen the flip locks on the tripod shaft. Extend the aluminum tubes to your desired height. Secure each section by closing the flip locks.
3. **Attach the Phone Holder:** The universal 1/4" screw at the top of the tripod is compatible with the phone holder. Screw the phone holder onto the tripod head until it is secure. The phone holder can be rotated 180° for horizontal or vertical orientation.
4. **Insert Your Phone:** Gently expand the adjustable phone clip (2.5"-3.74") and place your smartphone inside. Ensure it is securely held by the rubber protection layer.
5. **Pair the Wireless Remote:**
  - Turn on the remote control using the side switch. The indicator light will flash blue.
  - On your smartphone, go to Bluetooth settings and search for available devices.
  - Select "AB Shutter 3" (or similar name) from the list to pair. The indicator light will stop flashing once paired.

# Complete Tripod Units



- 1 Selfie Stick Tripod
- 2 Wireless Remote
- 3 Phone Holder
- 4 Carrying Bag

Figure 1: Victiv Phone Tripod components. Includes the tripod, phone holder, wireless remote, and carrying bag.

# Phone Tripod



Figure 2: Detailed view of the tripod's adjustable features and stable base.

Your browser does not support the video tag.

Video 1: Unboxing and initial setup of the Victiv Phone Tripod, demonstrating how to assemble the components and pair the remote control.

## Operating Instructions

The Victiv Phone Tripod offers versatile usage modes:

### Tripod Mode

For stable, hands-free recording or photography:

- Ensure the tripod legs are fully extended and stable.
- Adjust the height using the flip locks on the shaft.
- Use the 180° rotating head to achieve the desired camera angle.

### Selfie Stick Mode

For handheld shots and wider angles:

- Unscrew the base locking knob at the bottom of the tripod to detach the tripod legs.
- The remaining shaft can be extended from 17" to 63" for use as a selfie stick.
- Utilize the wireless remote control to capture photos or start/stop video recording from a distance.



Figure 3: The tripod can be converted into a selfie stick by detaching the base and extending the shaft. The wireless remote allows for convenient photo capture.

### Wireless Remote Control

The included Bluetooth remote control is compatible with most iOS and Android smartphones, supporting a distance of up to 33 feet (10 meters).

- After pairing (as described in Setup), open your phone's camera app.
- Press the button on the remote to trigger the shutter for photos or to start/stop video recording.

### Features

- **Adjustable Height:** Extends from a compact 19" to a maximum height of 70" in tripod mode, and 17" to 63" in selfie stick mode.
- **Flexible Head:** The tripod head features 180° rotation, allowing for easy switching between horizontal and vertical shooting, as well as overhead filming.

- **Universal Phone Holder:** The adjustable phone clip (2.5"-3.74") accommodates all cellphones and includes a cold shoe mount for attaching accessories like fill lights or microphones.
- **Universal Compatibility:** Equipped with a standard 1/4" screw, making it compatible with various devices including iPhones (17, 16, 15, 14 Pro Max, 13, 12, 11), Galaxy S10, other smartphones, sports cameras, DSLR cameras, and digital cameras.
- **Lightweight and Portable:** Constructed from durable aluminum, weighing only 1.7 lbs, and folds down to 18.8" for easy transport in the included carrying bag.

## Phone Tripod with Flexible Head

1/4" Universal Screw



Camera



Sport Camera



Ringlight



Panel Light

## Horizontal & Vertical & Overhead Shooting



Figure 4: The flexible head and universal screw allow for diverse device compatibility and shooting angles.

# Cold Shoe Phone Holder

Adapted to fill lights, microphones, audio recorder.

Compatible with all 2.5–3.74inch cellphones

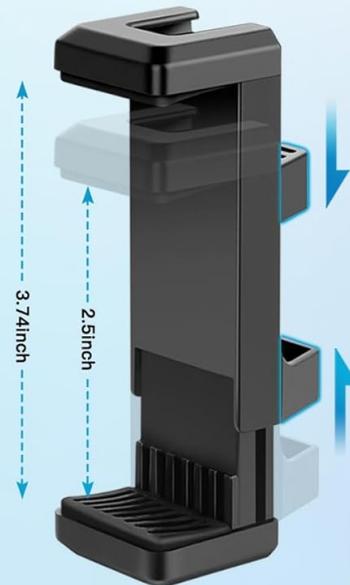


Figure 5: The universal phone holder securely grips various smartphone sizes and features a cold shoe mount for accessories.

Your browser does not support the video tag.

Video 2: Demonstration of the tripod's height extension and the flexible gooseneck feature, highlighting its adaptability for various shooting needs.

Your browser does not support the video tag.

Video 3: A user demonstrates the maximum height of the tripod, emphasizing its utility for tall individuals and various recording scenarios.

## Specifications

<b>Model Number</b>	P10
<b>Product Dimensions</b>	19 x 70 x 70 inches (fully extended)
<b>Item Weight</b>	1.63 pounds
<b>Material</b>	Aluminum

<b>Color</b>	Black
<b>Maximum Height</b>	70 Inches
<b>Minimum Height</b>	19 Inches
<b>Phone Clip Adjustment</b>	2.5" - 3.74"
<b>Remote Control Range</b>	Up to 33 feet (10 meters)

## Maintenance

---

- Keep the tripod clean by wiping it with a soft, dry cloth.
- Avoid exposing the tripod to extreme temperatures or moisture.
- Ensure all locking mechanisms are clean and free of debris for smooth operation.
- Store the tripod in its carrying bag when not in use to protect it from dust and scratches.

## Troubleshooting

---

- **Remote Control Not Pairing:**
  - Ensure the remote control is turned on and within range (33 feet).
  - Check your phone's Bluetooth settings to ensure Bluetooth is enabled.
  - If previously paired, try unpairing and re-pairing the remote.
  - Check the remote's battery.
- **Tripod Stability Issues:**
  - Ensure all three legs are fully extended and the base locking knob is tightened.
  - Verify that the tripod is placed on a flat, stable surface.
  - Do not overload the phone holder with excessively heavy devices or accessories.
- **Phone Not Fitting in Holder:**
  - Confirm your phone's width is within the adjustable range of 2.5"-3.74".
  - Remove any bulky phone cases if necessary.

## Warranty and Support

---

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Victiv website. Keep your purchase receipt as proof of purchase.