

KWANWA KW718S

KWANWA KW718S Alarm Clock Instruction Manual

Model: KW718S

[Introduction](#) [Features](#) [Components](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)
& Support

1. INTRODUCTION

Thank you for purchasing the KWANWA KW718S Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual thoroughly before use to ensure proper function and longevity of the product.

2. PRODUCT FEATURES

- **Dual Alarm Clock:** Set two independent alarms for different schedules.
- **Adjustable Alarm Volume:** Two levels of alarm volume (High/Low) to suit your preference.
- **Adjustable LED Brightness:** Three levels of display brightness for comfortable viewing day or night.
- **12/24-Hour Display:** Easily switch between 12-hour and 24-hour time formats.
- **Snooze Function:** Provides extra sleep time with a simple press.
- **Battery Operated:** Cordless design for flexible placement, powered by 4 AA batteries (not included).
- **Easy Setup:** Unique rotary dial for quick and intuitive time and alarm setting.

3. COMPONENT IDENTIFICATION

Familiarize yourself with the various parts and controls of your KWANWA KW718S Alarm Clock.

Dual Alarms

Set 2 different alarms according to your habits



AM:6:00
Wake Up Time



PM:14:45
Coffee Time

Figure 1: Top View of Alarm Clock Controls

This image displays the top panel of the alarm clock, highlighting the main controls including the large central SNOOZE button/rotary dial, TIME SET, VOLUME H/L, 12H/24H, AL1 ON/OFF, and AL2 ON/OFF buttons.



Figure 2: Front View of Alarm Clock Display

This image shows the front of the alarm clock with its clear red LED digital display, indicating the current time.

Batter Operated Extremely Easy Alarm Clock

( Not included)



Figure 3: Back View of Alarm Clock

This image illustrates the back of the alarm clock, featuring the battery compartment cover and the speaker grille.

Control Layout:

- **SNOOZE Button / Rotary Dial:** Large central button for snooze, also rotates to adjust time/alarm.
- **TIME SET Button:** Used to enter time setting mode.
- **VOLUME H/L Switch:** Toggles between High and Low alarm volume.
- **12H/24H Button:** Switches between 12-hour and 24-hour time display.
- **AL1 ON/OFF Button:** Activates or deactivates Alarm 1.
- **AL2 ON/OFF Button:** Activates or deactivates Alarm 2.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the alarm clock (refer to Figure 3).
2. Remove the battery compartment cover.

3. Insert 4 new AA batteries (not included) according to the polarity indicators (+ and -) inside the compartment.
4. Replace the battery compartment cover securely.

The clock will power on and the display will light up once batteries are correctly installed.

4.2 Initial Time Setting

1. Press and hold the **TIME SET** button until the hour digits begin to flash.
2. Rotate the large central **SNOOZE** dial clockwise or counter-clockwise to adjust the hour.
3. Press the **TIME SET** button again to switch to minute adjustment. The minute digits will flash.
4. Rotate the **SNOOZE** dial to adjust the minutes.
5. Press the **TIME SET** button one more time to confirm the time and exit time setting mode.

5. OPERATING INSTRUCTIONS

5.1 Switching 12/24-Hour Display

Press the **12H/24H** button to toggle between 12-hour (with AM/PM indicator) and 24-hour time formats.

5.2 Setting Alarms (Alarm 1 and Alarm 2)

The clock features two independent alarms. The process is identical for both.

1. To set Alarm 1: Press and hold the **AL1 ON/OFF** button until the alarm hour digits flash.
2. Rotate the **SNOOZE** dial to adjust the alarm hour.
3. Press the **AL1 ON/OFF** button again to switch to minute adjustment. The alarm minute digits will flash.
4. Rotate the **SNOOZE** dial to adjust the alarm minutes.
5. Press the **AL1 ON/OFF** button one more time to confirm the alarm time. The alarm indicator (e.g., 'AL1') will appear on the display, indicating the alarm is active.
6. Repeat steps 1-5 for Alarm 2 using the **AL2 ON/OFF** button.



Figure 4: Dual Alarm Functionality

This image demonstrates the ability to set two distinct alarm times, useful for different wake-up schedules.

5.3 Activating/Deactivating Alarms

To turn an alarm ON or OFF, simply press the corresponding **AL1 ON/OFF** or **AL2 ON/OFF** button. The alarm indicator on the display will show if the alarm is active.

5.4 Adjusting Alarm Volume

Use the **VOLUME H/L** switch located on the top of the clock to select between High (Loud) and Low alarm volume settings.



Figure 5: Adjustable Alarm Volume

This image highlights the adjustable alarm volume feature, catering to both light and heavy sleepers.

5.5 Adjusting LED Display Brightness

The clock offers 3 levels of LED display brightness. To adjust, press the **SNOOZE** button briefly. Each press will cycle through the brightness levels (Bright, Medium, Dim).

5.6 Using the Snooze Function

When an alarm sounds, press the large central **SNOOZE** button to temporarily silence the alarm. The alarm will sound again after approximately 7 minutes. This can be repeated up to 3 times.

6. MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace all 4 AA batteries when the display dims significantly or the clock stops functioning. Always replace with new batteries of the same type.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity. Check brightness setting.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the AL1/AL2 ON/OFF button is set to ON. Verify the alarm time is set correctly. Check alarm volume setting.
Cannot set time or alarm.	Not in setting mode or buttons not pressed correctly.	Press and hold the TIME SET or AL1/AL2 ON/OFF button until digits flash. Ensure the rotary dial is functioning.
Time display is incorrect.	Time was set incorrectly or batteries were removed.	Reset the current time following the "Initial Time Setting" instructions.

8. SPECIFICATIONS

- **Brand:** KWANWA
- **Model:** KW718S
- **Color:** Red Digital Display
- **Display Type:** Red LED Digital Display
- **Power Source:** Battery Powered (4 AA batteries required, not included)
- **Product Dimensions:** 4.6"W x 2.6"H (approximately 11.7 cm W x 6.6 cm H)
- **Item Weight:** 6.3 ounces (approximately 180 grams)
- **Material:** Plastic
- **Indoor/Outdoor Usage:** Indoor
- **Special Features:** Adjustable Alarm Volume, Adjustable LED Brightness, Dual Alarm, Snooze, 12/24Hr



Figure 6: Product Dimensions

This image provides a visual representation of the alarm clock's dimensions, indicating its compact size.

9. WARRANTY & SUPPORT

KWANWA products are designed for reliability and performance. For information regarding warranty coverage, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the official KWANWA website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question