

[Manuals.plus](#) /

› [SHARP](#) /

› SHARP 25L Bake+Grill Microwave Oven R625KNK User Manual

SHARP R625KNK

SHARP 25L Bake+Grill Microwave Oven R625KNK User Manual

Model: R625KNK

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your SHARP 25L Bake+Grill Microwave Oven, Model R625KNK. Please read these instructions thoroughly before using the appliance and retain them for future reference.

The SHARP R625KNK is a versatile 25-liter microwave oven designed for grilling, reheating, defrosting, and cooking. It features a durable ceramic-coated interior, intuitive Jog-Dial and push-button controls, and various automatic cooking functions.



Image 1.1: Front view of the SHARP 25L Bake+Grill Microwave Oven R625KNK.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open or if the door is damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Use only utensils suitable for microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Do not overcook food.

- Do not use corrosive chemicals or vapors in this appliance.
- This appliance is designed for heating food and beverages. Drying of clothes and heating of warming pads, slippers, sponges, damp cloth, and similar items may lead to risk of injury, ignition or fire.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Contact customer support for assistance.

3.2 Placement

- Place the oven on a flat, stable surface strong enough to hold the oven and the food you place in it.
- Ensure adequate ventilation. Leave a minimum of 10 cm (4 inches) clearance at the rear, 20 cm (8 inches) at the top, and 5 cm (2 inches) on both sides.
- Do not block air vents.
- Keep the oven away from heat sources and strong magnetic fields.

3.3 Electrical Connection

Ensure the voltage specified on the rating label matches your local power supply. Plug the oven into a properly grounded electrical outlet. Do not use extension cords or adapters.

3.4 Turntable Installation

Place the roller ring in the center of the oven cavity. Position the glass turntable securely on top of the roller ring. Ensure it rotates freely.

COMBINATION COOKING (GRILL + MICROWAVE)

Show: Combi 1- 80% grill, 20% microwave

Comb 2- 70% grill, 30% microwave

Combi 3- 60% grill, 40% microwave

Combi 4- 100% grill



Image 3.1: Interior view of the oven, highlighting the ceramic cavity and turntable setup.

4. OPERATING INSTRUCTIONS

Your SHARP R625KNK microwave oven features a combination of Jog Dial and Push Button controls for easy operation.

JOG DIAL CONTROL + PUSH BUTTONS

Make delicious dishes with a press of a button



Image 4.1: Close-up of the control panel, showing the Jog Dial and push buttons.

4.1 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the upper Jog Dial to select the desired microwave power level (e.g., M.High, Med, M.Low, Low).
4. Turn the lower Jog Dial to set the cooking time.
5. Press the "Start" button (usually integrated with the Jog Dial or a separate push button) to begin cooking.

4.2 Grill Function

The grill function is ideal for browning and crisping food.

1. Place food on the grill rack (if provided) or a heat-resistant dish.
2. Select the "Grill" setting using the upper Jog Dial or a dedicated button.
3. Set the grilling time using the lower Jog Dial.
4. Press "Start".

4.3 Combination Cooking (Grill + Microwave)

This mode combines microwave energy with grilling for faster cooking and browning.

1. Place food in a suitable container.
2. Select "Combi.1", "Combi.2", or "Combi.3" using the upper Jog Dial. These settings offer different ratios of microwave to grill power.
3. Set the cooking time.
4. Press "Start".

4.4 Defrosting

Your oven offers both Quick Defrost and Power Defrost options.

- **Quick Defrost:** For quick thawing of smaller items. Select "Quick Defrost" and set time.
- **Power Defrost:** For more precise defrosting based on weight. Select "Power Defrost" and input the weight of the food. The oven will automatically calculate the defrosting time.

4.5 Auto Menus

The oven includes pre-programmed settings for various popular dishes. Refer to the Quick Guide Label provided with your oven for a detailed list of Auto Menu options and their usage.

4.6 Quick Start

The Quick Start function allows you to start cooking immediately at full power for a short duration, typically 30 seconds or 1 minute per press, depending on the model. This is useful for reheating beverages or small portions of food.

4.7 Keep Warm Function

This feature maintains food at a warm temperature after cooking, preventing it from getting cold before serving.



Image 4.2: Visual representation of key functions including Quick Start, Quick Defrost, Keep Warm, and Grill.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

5.1 Cleaning the Interior

- After each use, wipe the interior with a damp cloth to remove food splatters.
- For stubborn stains, place a bowl of water with lemon juice inside and microwave for 5-7 minutes. The steam will loosen the stains, making them easier to wipe away.
- The ceramic-coated interior is designed for easy cleaning. Avoid abrasive cleaners or scouring pads.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the control panel gently with a soft, damp cloth. Avoid excessive moisture.

5.3 Turntable and Roller Ring

- The glass turntable and roller ring can be removed and washed in warm, soapy water or in a dishwasher.
- Ensure they are completely dry before placing them back in the oven.

6. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time/power level set; Door not closed properly.	Adjust cooking time and power level; Ensure door is fully closed.
Turntable not rotating	Turntable or roller ring not positioned correctly; Food too large or heavy.	Reposition turntable and roller ring; Ensure food does not obstruct rotation.
Sparking inside oven	Metal in oven; Food splatters on cavity walls.	Remove any metal objects; Clean oven interior thoroughly.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Brand	SHARP
Model Name	R625KNK
Capacity	25 Liters
Product Dimensions (D x W x H)	37.7D x 46.9W x 28H Centimeters

Item Weight	12.5 Kilograms
Wattage	1000 Watts
Voltage	230 Volts (AC)
Frequency	50 Hz
Controller Type	Button, Jog Dial
Inner Material	Ceramic
Heating Method	Radiant
Defrost System Type	Power Defrost
Included Components	Microwave Rack

8. WARRANTY INFORMATION

Your SHARP 25L Bake+Grill Microwave Oven R625KNK comes with a comprehensive warranty to ensure your peace of mind.

- **Comprehensive Warranty:** 01 Year from the date of purchase.
- **Magnetron Warranty:** An additional 02 Years Warranty on the Magnetron, totaling 03 years for this component.

Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal use conditions. For detailed terms and conditions, refer to the warranty document included in the box or contact customer support.

9. CUSTOMER SUPPORT

For any queries, service requests, or technical assistance regarding your SHARP microwave oven, please contact:

Sharp Business Systems (India) Private Limited

Plot No. 51, First Floor, Okhla Industrial Estate, Phase-III, New Delhi- 110020

Toll-Free: [1800-419-4322](tel:1800-419-4322)

E-Mail: support@sharp-oa.com

Our support team is available to assist you with product inquiries, troubleshooting, and service arrangements.