

[Manuals.plus](#) /

> [Spirit Halloween](#) /

> Spirit Halloween 3.5 Ft Grave Watcher Animatronic | Decorations | Animated | Light Up LEDs | Arm and Head Motions

Spirit Halloween Grave Watcher Animatronic

Spirit Halloween 3.5 Ft Grave Watcher Animatronic Instruction Manual

Model: Grave Watcher Animatronic | Brand: Spirit Halloween

1. PRODUCT OVERVIEW

The Spirit Halloween 3.5 Ft Grave Watcher Animatronic is designed to enhance your Halloween display with its animated features and eerie presence. This animatronic is equipped with movements, LED lights, and sound phrases to create a spooky atmosphere.

- Features various head and arm movements.
- Speaks up to four bone-chilling phrases.
- Includes yellow LED light-up candles and red LED light-up eyes that activate upon motion or sound.
- Constructed from durable metal, fabric, plastic, and polyurethane foam.





Figure 1.1: Front view of the Grave Watcher Animatronic, showcasing its overall design and holding two red candles.

2. IMPORTANT SAFETY INFORMATION

Please read and adhere to all safety warnings to prevent injury or damage to the product.

- **Outdoor use only.**
- **Unplug the animatronic during inclement weather conditions.**
- **Do not allow children to play on or near the display.**

- **Keep the animatronic away from all flammable materials.**

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package.

- Grave Watcher Animatronic Figure (1 unit)
- Power Adapter (1 unit)
- Assembly Instructions / User Manual (this document)

4. SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage.
2. **Assembly:** Follow any specific assembly instructions provided with the animatronic. Typically, this involves connecting limbs or attaching the head to the body. Ensure all connections are secure.
3. **Placement:** Position the Grave Watcher Animatronic in a covered outdoor area to protect it from direct weather exposure. Ensure the surface is stable and level. Keep it away from high-traffic areas where it might be tripped over or damaged.
4. **Power Connection:** Locate the power input port on the animatronic. Connect the provided power adapter to the animatronic, then plug the adapter into a standard electrical outlet. Ensure the outlet is suitable for outdoor use if placed outdoors.



Figure 4.1: The Grave Watcher Animatronic positioned in an outdoor setting, demonstrating typical display conditions.

5. OPERATING INSTRUCTIONS

1. **Power On:** Once connected to power, the animatronic should enter a standby mode.
2. **Activation:** The Grave Watcher Animatronic is typically activated by motion or sound sensors. When triggered, its red LED eyes will light up, the yellow LED candles will flicker, and it will perform its arm and head movements while speaking one of its pre-recorded phrases.

3. **Deactivation:** To turn off the animatronic, simply unplug the power adapter from the electrical outlet.





Figure 5.1: The animatronic's face with activated red LED eyes and yellow LED candles, illustrating its operational state.

6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your animatronic.

- **Cleaning:** Spot clean desired areas with a soft, damp cloth. Do not immerse the animatronic in water or use harsh chemical cleaners.
- **Storage:** When not in use, store the animatronic in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Display Conditions:** Always display the animatronic in covered areas to protect it from rain, snow, and excessive sun exposure, which can damage the materials and electronics.

7. TROUBLESHOOTING

If your Grave Watcher Animatronic is not functioning as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Animatronic does not activate.	<ul style="list-style-type: none"> ◦ No power. ◦ Sensor obstructed or faulty. ◦ Power adapter not fully connected. 	<ul style="list-style-type: none"> ◦ Ensure the power adapter is securely plugged into both the animatronic and a working electrical outlet. ◦ Check for any obstructions in front of the sensor. ◦ Try moving the animatronic to a different location or testing in varying light conditions.
Lights (eyes/candles) do not illuminate.	<ul style="list-style-type: none"> ◦ Power issue. ◦ Internal wiring issue. 	<ul style="list-style-type: none"> ◦ Verify power connection as above. ◦ If problem persists, contact customer support.
No sound or movement.	<ul style="list-style-type: none"> ◦ Activation sensor not triggered. ◦ Internal mechanism issue. 	<ul style="list-style-type: none"> ◦ Ensure sufficient motion or sound to trigger the sensor. ◦ Check for any visible obstructions in moving parts. ◦ If problem persists, contact customer support.

8. SPECIFICATIONS

Model Name	Grave Watcher Animatronic
Brand	Spirit Halloween

ASIN	BOC6FRPCCT
Product Dimensions (L x W x H)	15 x 13 x 36.5 inches (approximately 3.5 ft tall)
Item Weight	4.59 pounds
Frame Material	Metal
Overall Material	Metal, Fabric, Plastic, Polyurethane Foam
Light Color	Yellow (candles), Red (eyes)
Number of Light Sources	2 (for candles)
Voltage	6 Volts
Recommended Use	Halloween decoration

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please contact Spirit Halloween directly or refer to the retailer's policy where the product was purchased.

You can visit the official Spirit Halloween store for more information: [Spirit Halloween Store](#)