

[Manuals.plus](#) /

› [SelfieShow](#) /

› SelfieShow L12 Phone Tripod & Selfie Stick User Manual

SelfieShow L12

SelfieShow L12 Phone Tripod & Selfie Stick User Manual

Model: L12

[Introduction](#)

[Safety Information](#)

[Package
Contents](#)

[Product
Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

1. INTRODUCTION

The SelfieShow L12 Phone Tripod & Selfie Stick is a versatile accessory designed to enhance your mobile photography and videography experience. It functions as both an extendable selfie stick and a stable tripod stand, featuring a detachable remote control for convenient operation. Its compact and lightweight design makes it ideal for travel and various shooting scenarios.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Keep the device away from water and other liquids.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the device, as this may void the warranty and cause damage.
- Keep the remote control battery away from children.
- Ensure your phone is securely mounted in the holder before use to prevent accidental drops.
- When extending the stick, ensure all sections are locked properly to maintain stability.

3. PACKAGE CONTENTS

Please check the package for the following items:

- SelfieShow L12 Selfie Stick Tripod

- Detachable Remote Control (with CR1632 Battery installed)
- User Manual

 
4. PRODUCT OVERVIEW

Familiarize yourself with the components of your SelfieShow L12.

MORE STABLE TRIPOD



Anti-slip Silicone Pad

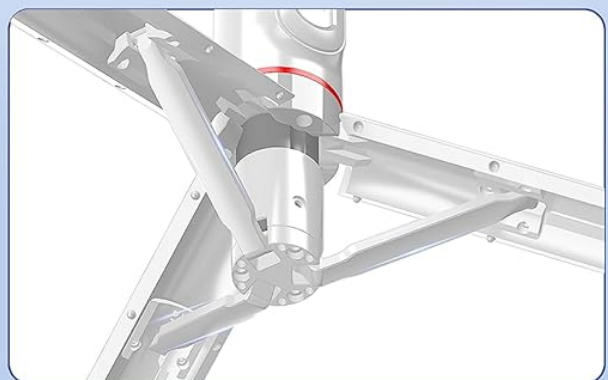

Strengthening Support

Figure 4.1: SelfieShow L12 Phone Tripod and Selfie Stick with remote control.

This image displays the SelfieShow L12 in its folded state, alongside its fully extended form as a selfie stick and as a tripod, with the detachable remote control visible.

1. **Phone Holder:** Securely grips your smartphone.
2. **Extendable Rod:** Aluminum alloy telescopic pole for adjustable length.

3. **Handle/Tripod Base:** Serves as a comfortable grip and unfolds into a stable tripod.
4. **Detachable Remote Control:** Bluetooth remote for wireless photo/video capture.
5. **Rotation Knob:** Allows for angle adjustments of the phone holder.

5. SETUP

5.1 Unfolding the Tripod/Selfie Stick

1. Gently pull the phone holder upwards to extend the telescopic rod.
2. To use as a tripod, spread the three legs at the bottom of the handle until they are fully open and stable.
3. To use as a selfie stick, keep the legs folded and hold the handle firmly.



Figure 5.1: The SelfieShow L12 in folded and extended configurations.

This image illustrates the compact folded size (21cm/8.3in) and the maximum extended length (106cm/41.7in) of the SelfieShow L12, highlighting its portability and reach.



Figure 5.2: Close-up of the tripod base with anti-slip features.

This image details the anti-slip silicone pads on the tripod feet and the internal strengthening support, ensuring stability when used as a tripod.

5.2 Attaching Your Phone

1. Open the phone holder clamps.
2. Carefully place your smartphone into the holder, ensuring it is centered and securely gripped by the soft silicone pads.
3. The holder supports phones with widths between 2.5-3.7 inches (6.5-9.5 cm).

 


Figure 5.3: Wide compatibility of the phone holder.

This image demonstrates the phone holder's adjustable width, accommodating various smartphone models and also showing how a GoPro can be mounted.

5.3 Pairing the Detachable Remote Control

1. Remove the remote control from its slot on the handle.
2. Press and hold the button on the remote control until the indicator light starts flashing, indicating it's in pairing mode.
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select "SelfieShow" from the list to pair. The indicator light on the remote will stop flashing and remain solid once paired.
5. The remote is compatible with iOS 5.1+ and Android 4.4+ devices. No app is needed for basic functionality.



Figure 5.4: Remote control pairing process.

This image shows the detachable remote control and a smartphone screen indicating successful Bluetooth pairing with "SelfieShow", along with compatibility information for iOS and Android.

6. OPERATION

6.1 Using as a Selfie Stick

Hold the handle firmly and extend the telescopic rod to your desired length. Use the remote control to capture photos or start/stop video recording.



Figure 6.1: Using the device as a selfie stick.

This image displays an individual holding the SelfieShow L12 fully extended as a selfie stick, capturing a photo.

6.2 Using as a Tripod

Unfold the tripod legs completely and place the stand on a flat, stable surface. Adjust the height of the telescopic rod as needed. Use the remote control for hands-free shooting.

HIGH QUALITY ALUMINUM ALLOY ROD

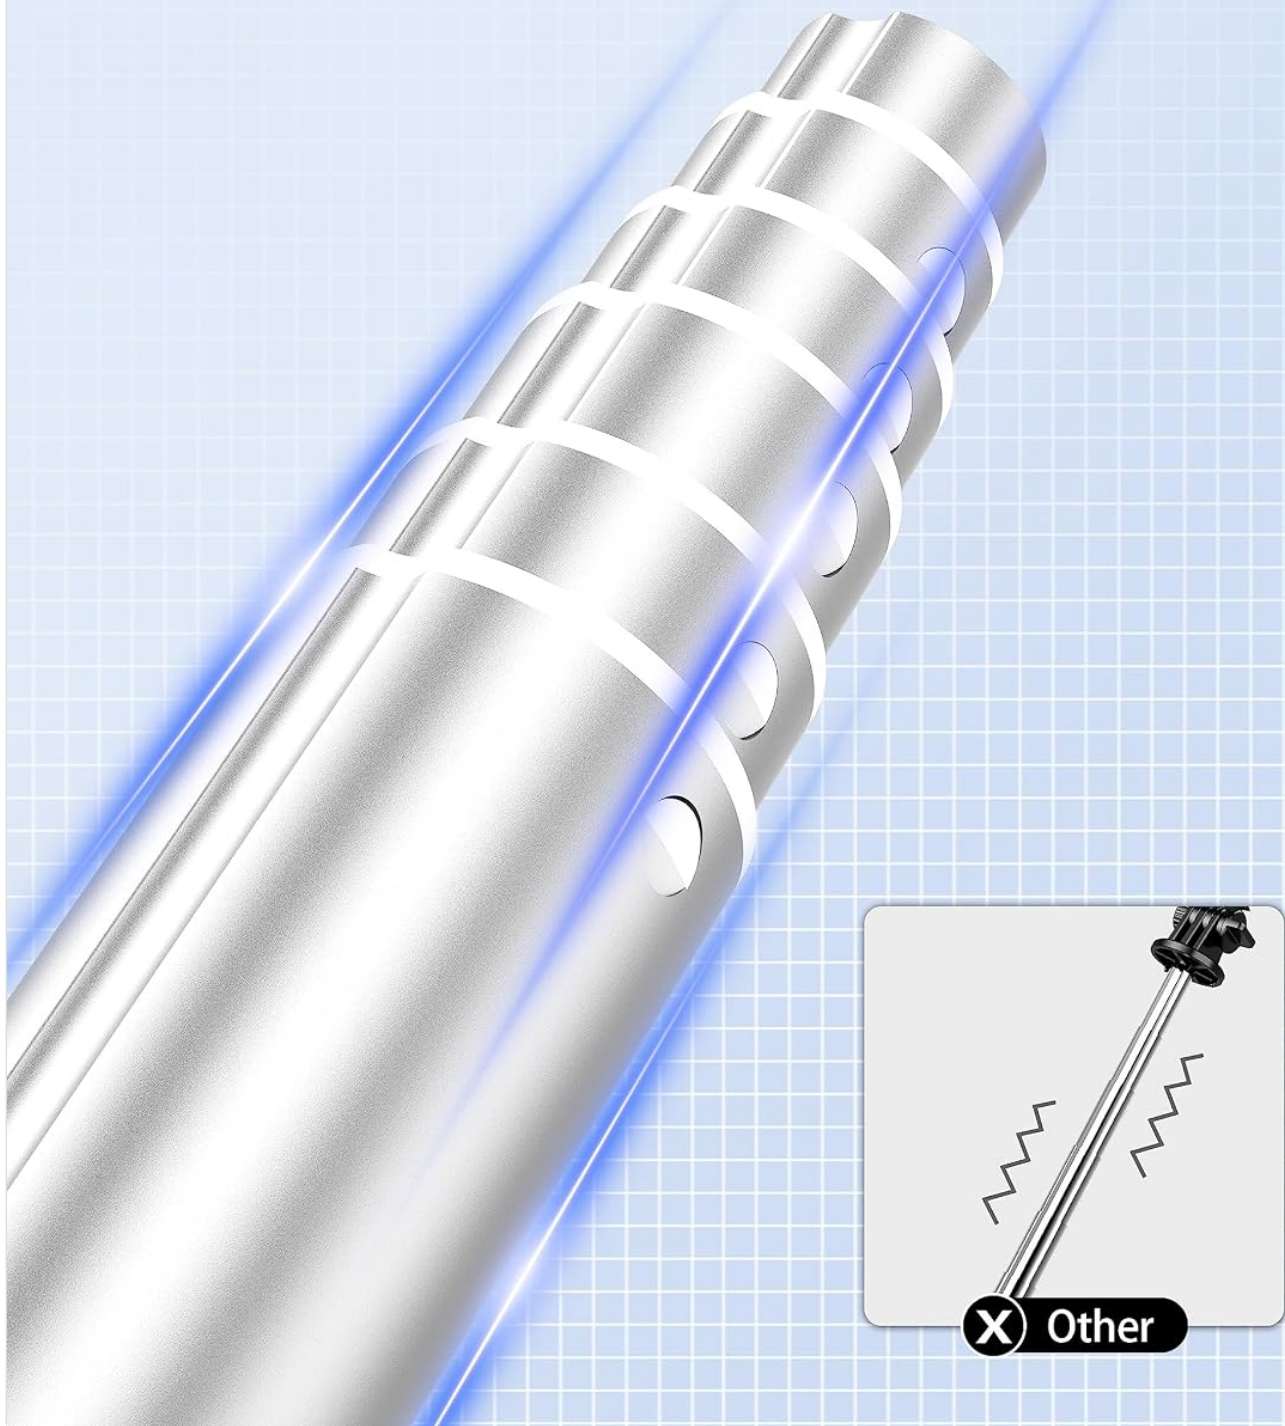


Figure 6.2: Device configured as a tripod.

This image displays the SelfieShow L12 standing upright as a tripod with a smartphone securely mounted in the holder.

6.3 Adjusting Angles

The phone holder features a 360° rotatable design, allowing you to switch between horizontal and vertical camera modes. It also offers a 255° adjustable angle for finding the optimal shooting position.



Figure 6.3: Multi-angle adjustment capabilities.

This diagram illustrates the 360-degree rotation of the phone holder for switching between portrait and landscape modes, and the 255-degree tilt adjustment for various shooting angles.

6.4 Using the Remote Control

Once paired, simply press the button on the remote control to trigger your phone's camera shutter. The remote works up to 33 feet (10 meters) away, providing flexibility for group photos or remote shooting.

Your browser does not support the video tag.

Video 6.4: Demonstration of the SelfieShow L12 features.

This video demonstrates the folding and extending mechanism, the use of the remote control for hands-free shooting, and the stability of the tripod base. It highlights the product's portability and ease of use for various photography needs.

7. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the selfie stick in a cool, dry place when not in use. Ensure the remote control is securely placed in its slot to prevent loss.
- **Battery Replacement:** The remote control uses a CR1632 battery. If the remote stops responding, replace the battery by carefully opening the battery compartment.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote control not pairing.	Battery low or dead; not in pairing mode; Bluetooth off on phone.	Replace CR1632 battery; ensure remote is flashing for pairing; turn on phone's Bluetooth and search for "SelfieShow".
Remote control not taking photos.	Not paired; phone camera app not open; phone settings issue.	Re-pair the remote; open your phone's camera app; check phone camera settings for remote shutter compatibility.
Selfie stick feels unstable.	Sections not fully extended/locked; phone not centered; uneven surface (tripod mode).	Ensure all telescopic sections are fully extended and locked; center your phone in the holder; place tripod on a flat, stable surface.
Phone not fitting in holder.	Phone width exceeds holder's capacity.	The holder supports phones with widths between 2.5-3.7 inches (6.5-9.5 cm). Ensure your phone is within this range.

9. SPECIFICATIONS

Feature	Detail
Model Number	L12
Brand	SelfieShow
Product Dimensions (Folded)	2.17 x 1.38 x 8.27 inches (21 cm / 8.26 inches)
Item Weight	6.3 ounces (180 g / 179.01 Grams)
Maximum Height	41.7 inches (106 cm)
Minimum Height	8.26 inches (21 cm)
Phone Holder Width	2.5-3.7 inches (6.5-9.5 cm)
Material	Aluminum Alloy (Rod)
Remote Control Range	Up to 33 feet (10 meters)
Remote Control Battery	1 Lithium Metal battery (CR1632, included)
Compatible Devices	Smartphones (iOS 5.1+, Android 4.4+), GoPro
Rotation Angle	360° (phone holder), 255° (tilt)
UPC	614162255699

10. WARRANTY AND SUPPORT

SelfieShow products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official SelfieShow website. Keep your purchase receipt as proof of purchase for warranty claims.

