

[Manuals.plus](#) /

› [Cuifati](#) /

› Cuifati 8G MP3 Player with Bluetooth User Manual

Cuifati B0C6H4YHHV

Cuifati 8G MP3 Player with Bluetooth User Manual

Model: B0C6H4YHHV

PRODUCT OVERVIEW

The Cuifati 8G MP3 Player with Bluetooth is a portable music and media device designed for high-fidelity audio playback. Featuring a 1.8-inch screen, Bluetooth 4.2 connectivity, and noise reduction technology, it delivers a clear and immersive listening experience. This device supports various audio formats and includes additional functionalities such as video playback, a translation dictionary, and voice recording.



Figure 1: Front view of the Cuifati 8G MP3 Player.

PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- Cuifati 8G MP3 Player (Black)
- USB Charging Cable
- Wired Earphones
- User Manual (this document)



Figure 2: MP3 Player with included accessories.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

2. Powering On/Off

- To power on: Long press the power button (refer to Figure 3 for button location).
- To power off: Long press the power button until the device shuts down.

3. Inserting a Micro SD Card (Optional)

The device comes with 8GB internal memory. For expanded storage up to 128GB, insert a compatible micro SD card into the designated slot. Ensure the card is inserted correctly to avoid damage.

OPERATING INSTRUCTIONS

Device Controls

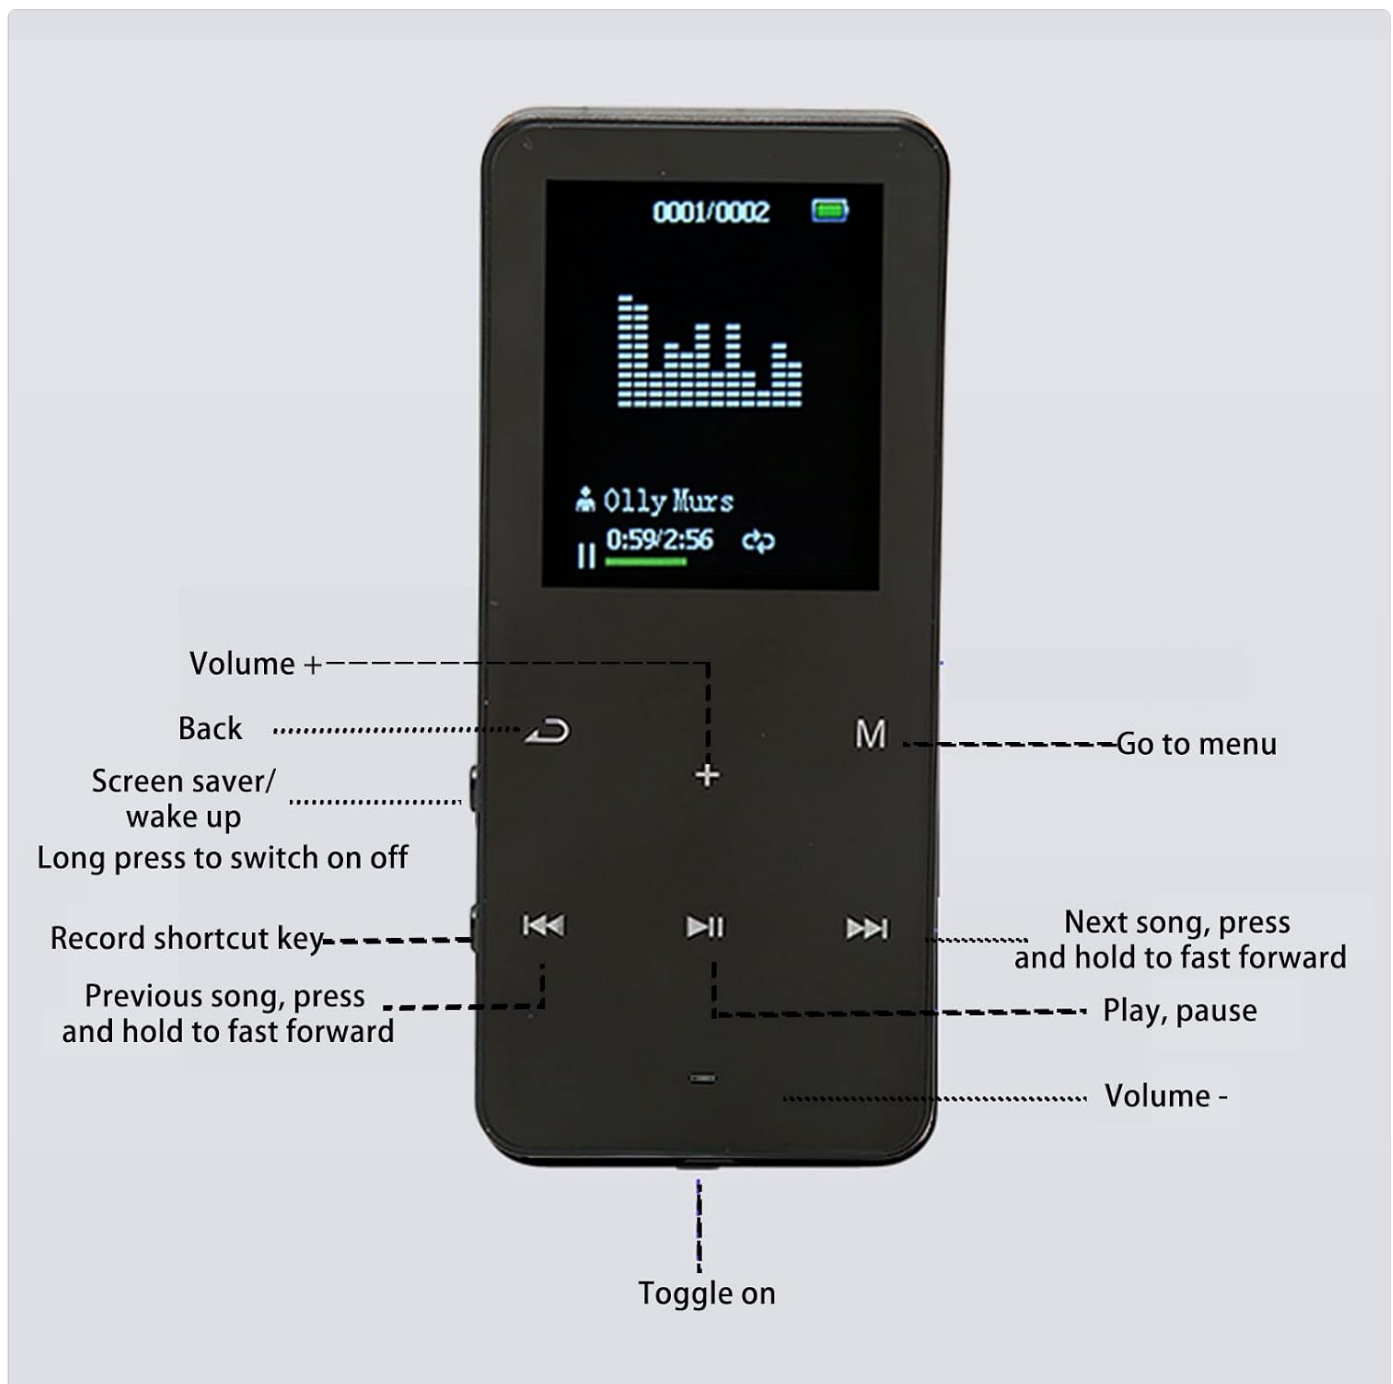


Figure 3: MP3 Player Button Layout and Functions.

Table 1: Button Functions

Button/Control	Function
Volume +	Increase volume.
Back (Curved Arrow)	Go back to the previous menu/screen. Activates screen saver or wakes up the device.
Power Button (Side)	Long press to switch on/off.
Record Shortcut Key (Left Arrow)	Quick access to recording function.
Previous Song / Fast Rewind (Double Left Arrow)	Short press for previous song. Long press to fast rewind.
Play / Pause (Play/Pause Icon)	Play or pause current media.

Button/Control	Function
Next Song / Fast Forward (Double Right Arrow)	Short press for next song. Long press to fast forward.
Volume -	Decrease volume.
M (Menu)	Go to the main menu.
Toggle On (Bottom)	Physical switch for device power.

Music Playback

1. Transfer music files (MP3, WMA, APE, FLAC, WAV, AAC LC, ACELP) to the player's internal memory or micro SD card via USB connection to a computer.
2. From the main menu, navigate to "Music" or "Audio".
3. Select the desired song or album to begin playback.
4. Use the "Play/Pause", "Previous Song", and "Next Song" buttons to control playback.
5. Adjust volume using the "Volume +" and "Volume -" buttons.

Bluetooth Connectivity

The MP3 player features Bluetooth 4.2 for wireless audio streaming to compatible devices.

1. From the main menu, select "Bluetooth".
2. Turn on Bluetooth on the MP3 player.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. The MP3 player will scan for available devices. Select your device from the list to pair.
5. Once paired, audio will be routed wirelessly to the connected device.

Video Playback

The device supports video playback on its 1.8-inch screen.

1. Transfer compatible video files to the player.
2. Navigate to the "Video" section from the main menu.
3. Select a video file to play.

Voice Recording

Use the built-in voice recorder for memos or lectures.

- Press the "Record Shortcut Key" (left arrow) to quickly start recording.
- Alternatively, navigate to "Record" from the main menu.
- Press "Play/Pause" to start/stop recording.
- Recordings are saved automatically.

Translation Dictionary

Access the integrated translation dictionary for language assistance.

- From the main menu, select "Dictionary" or "Translation".
- Follow on-screen prompts to input words for translation.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Impact:** Protect the device from drops and impacts, which can damage internal components or the screen.

TROUBLESHOOTING

Table 2: Common Issues and Solutions

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; Power switch off.	Charge the device; Ensure the physical toggle switch at the bottom is in the "On" position.
No sound during playback.	Volume too low; Earphones not connected properly; Bluetooth not paired.	Increase volume; Re-insert earphones firmly; Re-pair Bluetooth device.
Cannot transfer files.	Incorrect USB connection mode; Driver issues.	Ensure the player is connected as a mass storage device; Try a different USB port or cable.
Bluetooth connection unstable.	Interference; Device too far from player.	Move closer to the Bluetooth device; Avoid obstacles; Disconnect and re-pair.
Screen is unresponsive.	Temporary software glitch.	Perform a soft reset by long-pressing the power button until it restarts.

SPECIFICATIONS

- **Model:** B0C6H4YHHV
- **Screen:** 1.8 inch
- **Internal Memory:** 8GB
- **Expandable Memory:** Up to 128GB (Micro SD card, not included)
- **Bluetooth:** Version 4.2
- **Supported Audio Formats:** MP3, WMA, APE, FLAC, WAV, AAC LC, ACELP
- **Features:** Music Playback, Video Playback, Noise Reduction, Voice Recording, Translation Dictionary

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or contact Cuifati customer support through their official channels. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the [Cuifati Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question