#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- SoBuy /
- > SoBuy FKW75-SCH Kitchen Serving Cart Instruction Manual

# SoBuy FKW75-SCH

# SoBuy FKW75-SCH Kitchen Serving Cart Instruction Manual

Model: FKW75-SCH | Brand: SoBuy

## 1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your SoBuy FKW75-SCH Kitchen Serving Cart. Please read all instructions carefully before assembly and use to ensure safe and proper functionality. Keep this manual for future reference.



Image 1.1: The SoBuy FKW75-SCH Kitchen Serving Cart in black, featuring a wooden top, a cabinet with a door, and open shelves on the side, all on wheels.

#### 2. SAFETY INSTRUCTIONS

- Assembly: Always assemble the unit on a soft, clean surface to prevent scratches. Ensure all parts are
  present before beginning assembly. Two people are recommended for assembly to ensure stability and
  ease of handling.
- Weight Capacity: Do not exceed the maximum load capacity of 45 kg (99 lbs) for the entire cart. Distribute weight evenly.
- **Stability:** Always lock the wheels when the cart is stationary to prevent accidental movement. Do not climb on or lean heavily on the cart.
- **Placement:** Place the cart on a level surface. Avoid placing it near heat sources or in direct sunlight for prolonged periods to prevent material damage.
- Children: Keep small parts and packaging materials away from children. This product is not a toy.

#### 3. PACKAGE CONTENTS

Before assembly, verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

- · Wooden Top Panel
- · Side Panels (with and without glass)
- Bottom Panel
- Back Panel
- Cabinet Door
- Adjustable Interior Shelves
- Wheels (4 units, 2 with brakes)
- Hardware Pack (screws, dowels, hinges, door handle, shelf pins)

#### 4. ASSEMBLY INSTRUCTIONS

Follow the step-by-step illustrated instructions provided in your package. Ensure all numbered parts correspond to the diagrams. The general assembly sequence involves:

- 1. Unpacking: Carefully unpack all components and lay them out on a protected surface.
- 2. **Attaching Wheels:** Secure the four wheels to the bottom panel. Ensure the two wheels with locking mechanisms are positioned on the front side for easy access.
- 3. **Constructing the Frame:** Assemble the side panels, bottom panel, and back panel according to the diagrams. Use the provided screws and dowels.
- 4. **Installing Shelves:** Insert the shelf pins into the desired holes and place the adjustable shelves. Note that the door panels and shelves can be configured to open to the left or right side based on your preference.
- 5. **Attaching the Door:** Mount the hinges to the cabinet door and then attach the door to the main frame. Adjust hinges as needed for proper alignment.
- 6. Installing Door Handle: Secure the door handle to the cabinet door.
- 7. Placing Top Panel: Carefully place and secure the wooden top panel onto the assembled frame.



Image 4.1: Illustration showing the reversible design of the cart, allowing the cabinet door and open shelves to be configured on either the left or right side during assembly.



Image 4.2: Close-up view of the cart's durable wheels, highlighting the locking mechanism on two of the wheels for stability.

## 5. OPERATING INSTRUCTIONS

- Moving the Cart: To move the cart, ensure both locking wheels are in the unlocked position. Gently push or pull the cart to its desired location.
- Securing the Cart: Once the cart is in position, engage the locking mechanism on the two braked wheels by pressing down on the lever. This will prevent the cart from rolling unintentionally.
- **Using Storage:** The cart features a main cabinet with a door and multiple interior levels for larger items, and three open side shelves for smaller items or decorative pieces.



Image 5.1: Diagram illustrating how to lock and unlock the cart's wheels for stationary use or mobility.

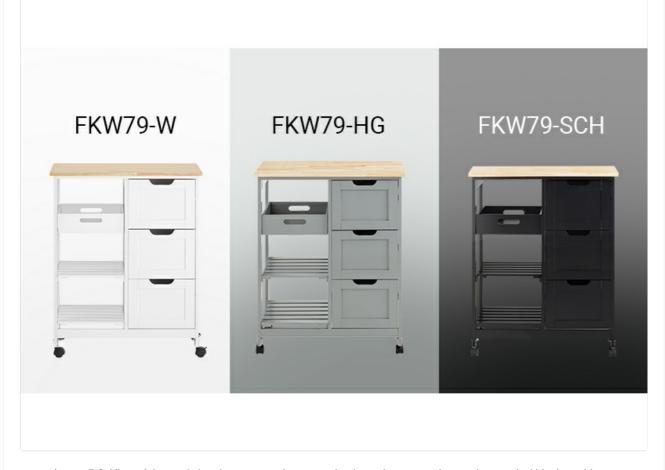


Image 5.2: View of the cart's interior storage, demonstrating how glasses can be neatly stored within the cabinet.

# 6. MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- Spills: Clean up spills immediately to prevent staining or damage to the wood.
- **Fasteners:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain stability.
- Environment: Avoid extreme temperature changes and high humidity, which can affect the wood

# 7. TROUBLESHOOTING

- Cart is unstable: Ensure all screws are tightened. Verify the cart is on a level surface. Check that the wheels are properly installed.
- Wheels not rolling smoothly: Check for debris caught in the wheels. Ensure the wheel locks are fully disengaged.
- Cabinet door not closing properly: Adjust the hinges if necessary. Ensure the cart is on a level surface, as unevenness can affect door alignment.

## 8. Specifications



Image 8.1: Detailed diagram showing the dimensions of the SoBuy FKW75-SCH Kitchen Serving Cart.

Feature	Detail

Feature	Detail
Model Number	FKW75-SCH
Dimensions (L x W x H)	60 cm x 40 cm x 90 cm (23.6 in x 15.7 in x 35.4 in)
Weight	25 kg (55 lbs)
Max Load Capacity	45 kg (99 lbs)
Material	E1 Grade MDF Wood, Metal, Plastic, Glass
Color	Black
Wheels	4 (2 with brakes)

## 9. WARRANTY AND SUPPORT

SoBuy products are designed for quality and durability. For information regarding warranty coverage, spare parts availability, or customer support, please refer to the documentation included with your purchase or visit the official SoBuy website. If you encounter any issues not covered in this manual, please contact SoBuy customer service for assistance.

© 2025 SoBuy. All rights reserved.

#### Related Documents - FKW75-SCH

