

Gyfirmoie 745A

Gyfirmoie 6 Drawer Double Dresser with Power Outlet and LED Light

Model: 745A | Brand: Gyfirmoie

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

1.1 General Safety

- **Anti-Tip Device:** This dresser is equipped with an anti-tip device. It is crucial to install this device to prevent the dresser from tipping over, especially in households with children. Failure to do so can result in serious injury or death.
- **Weight Limits:** Do not overload drawers or shelves. Refer to the specifications section for maximum weight capacities.
- **Assembly:** Assembly should be performed by two adults. Ensure all parts are correctly aligned and fasteners are tightened securely.
- **Placement:** Place the dresser on a flat, level surface. Avoid placing it near heat sources or in direct sunlight to prevent material damage.

1.2 Electrical Safety (Power Outlet & LED Light)

- **Power Source:** Connect the power cord only to a grounded electrical outlet. Do not use extension cords unless absolutely necessary and ensure they are rated for the appropriate wattage.
- **Overload Protection:** The integrated power outlet is designed for specific loads. Do not exceed the maximum wattage rating to prevent electrical hazards.
- **Water Exposure:** Keep the power outlet and LED components away from water or excessive moisture. Do not operate if wet.
- **Cable Management:** Ensure all cables are neatly routed and secured to prevent tripping hazards or damage.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present and undamaged. If any parts are missing or damaged, please contact customer support.

2.1 Parts List

Refer to the assembly video for visual identification of each numbered part.

1. Top Panel (x1)
2. Bottom Panel (x1)
3. Side Panels (x2)
4. Back Panels (x2)
5. Drawer Fronts (x6)
6. Drawer Sides (x12)
7. Drawer Backs (x6)
8. Drawer Bottoms (x6)
9. Shelf Panels (x2)
10. LED Light Strip (x1)
11. Power Outlet Unit (x1)
12. Power Cord (x1)

2.2 Hardware List

Refer to the assembly video for visual identification of each lettered hardware component.

- Cam Locks and Pins
- Screws (various sizes)
- Drawer Slides (sets)
- Anti-Tip Kit
- LED Remote Control

3. SETUP AND ASSEMBLY

Assembly typically requires two people. Clear a spacious area and lay out all components. A screwdriver is required (not included).

3.1 Assembly Video Guide

For a detailed visual guide, please watch the official installation video:

Your browser does not support the video tag.

Video: Official installation guide for the Gyfimoie 6 Drawer Double Dresser.

3.2 Step-by-Step Assembly Overview

1. **Prepare Panels:** Attach drawer slides to the side panels and internal support panels as indicated in the instructions.
2. **Assemble Frame:** Connect the bottom panel, side panels, and internal support panels using cam locks and pins.

3. **Install LED Strip:** Carefully place the LED light strip into the designated groove on the top shelf. Ensure it is securely seated.
4. **Attach Top Panel:** Secure the top panel to the assembled frame.
5. **Install Power Outlet:** Insert the power outlet unit into the pre-cut opening on the top surface and secure it with screws.
6. **Assemble Drawers:** Construct each of the six drawers by attaching the sides, back, and bottom to the drawer front. Install the remaining drawer slides.
7. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots in the dresser frame.
8. **Install Back Panels:** Attach the back panels to the rear of the dresser.
9. **Secure Anti-Tip Device:** Follow the instructions provided with the anti-tip kit to securely fasten the dresser to the wall. This step is critical for safety.

4. OPERATING INSTRUCTIONS

4.1 Power Outlet (Charging Station)

The dresser features an integrated power outlet with 2 standard AC outlets and 2 USB ports.

- **To Use:** Plug the dresser's main power cord into a wall outlet. You can then plug your devices into the AC outlets or USB ports on the top surface of the dresser.
- **Functionality:** Ideal for charging mobile phones, tablets, or powering small appliances like lamps or hair styling tools.



Image: Integrated power outlet for convenient charging.

4.2 LED Lighting System

The dresser includes a multi-color RGB LED light strip for customizable ambient lighting.

- **Control Methods:** The LED lights can be controlled via the included remote control or a dedicated smartphone application.
- **Color Options:** Choose from 16 million colors to match your mood or room decor.
- **Adjustments:** Adjust brightness levels and speed of dynamic modes (Flashing, Jump, Fade, etc.).
- **Music Sync:** The lights can synchronize with music played through the app, creating a dynamic visual experience.



SMART APP CONTROL LED LIGHTS STRIP

30 Dynamic modes/Adjustable Brightness

Sync Your lights with Your Favourite Music



Image: Smartphone application for controlling LED light features.

5. MAINTENANCE

5.1 Cleaning

- **Surface:** Wipe the dresser surfaces with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.

- **Spills:** Immediately wipe up any spills with a damp cloth and dry thoroughly.

5.2 General Care

- **Drawer Slides:** Periodically check drawer slides for smooth operation. If they become stiff, a small amount of silicone lubricant can be applied.
- **Fasteners:** Occasionally check and retighten all fasteners to ensure stability.
- **Electrical Components:** Ensure the power cord and LED connections are free from damage. Do not attempt to repair electrical components yourself.

6. TROUBLESHOOTING

6.1 LED Lights Not Working

- **Check Power:** Ensure the dresser's power cord is securely plugged into a working wall outlet.
- **LED Connection:** Verify that the LED light strip is properly connected to its power source and controller.
- **Remote/App:** Check the remote control battery or ensure the smartphone app is correctly paired and functioning.

6.2 Drawers Sticking or Not Closing Smoothly

- **Alignment:** Ensure the dresser is on a level surface. Uneven surfaces can cause misalignment.
- **Drawer Slides:** Check if the drawer slides are properly installed and free from obstructions. Lubricate if necessary.
- **Overload:** Reduce the weight in the drawer if it is overloaded.

6.3 Power Outlet Not Functioning

- **Main Power:** Confirm the dresser's main power cord is plugged into a live outlet.
- **Circuit Breaker:** Check your home's circuit breaker if other outlets are also not working.
- **Overload:** Disconnect some devices from the outlet to check if it was overloaded.

7. SPECIFICATIONS

Feature	Detail
Brand	Gyfimoie
Model Name	Dresser-745AZ (Model 745A)
Product Dimensions	15.75"D x 47.24"W x 31.5"H
Color	White
Item Weight	92.4 pounds (42 Kilograms)
Room Type	Bedroom
Furniture Finish	White

Drawer Type	Ball Bearing Slide
Assembly Required	Yes
Power Outlet	2 AC Outlets, 2 USB Ports
LED Lighting	RGB, App/Remote Control, Music Sync

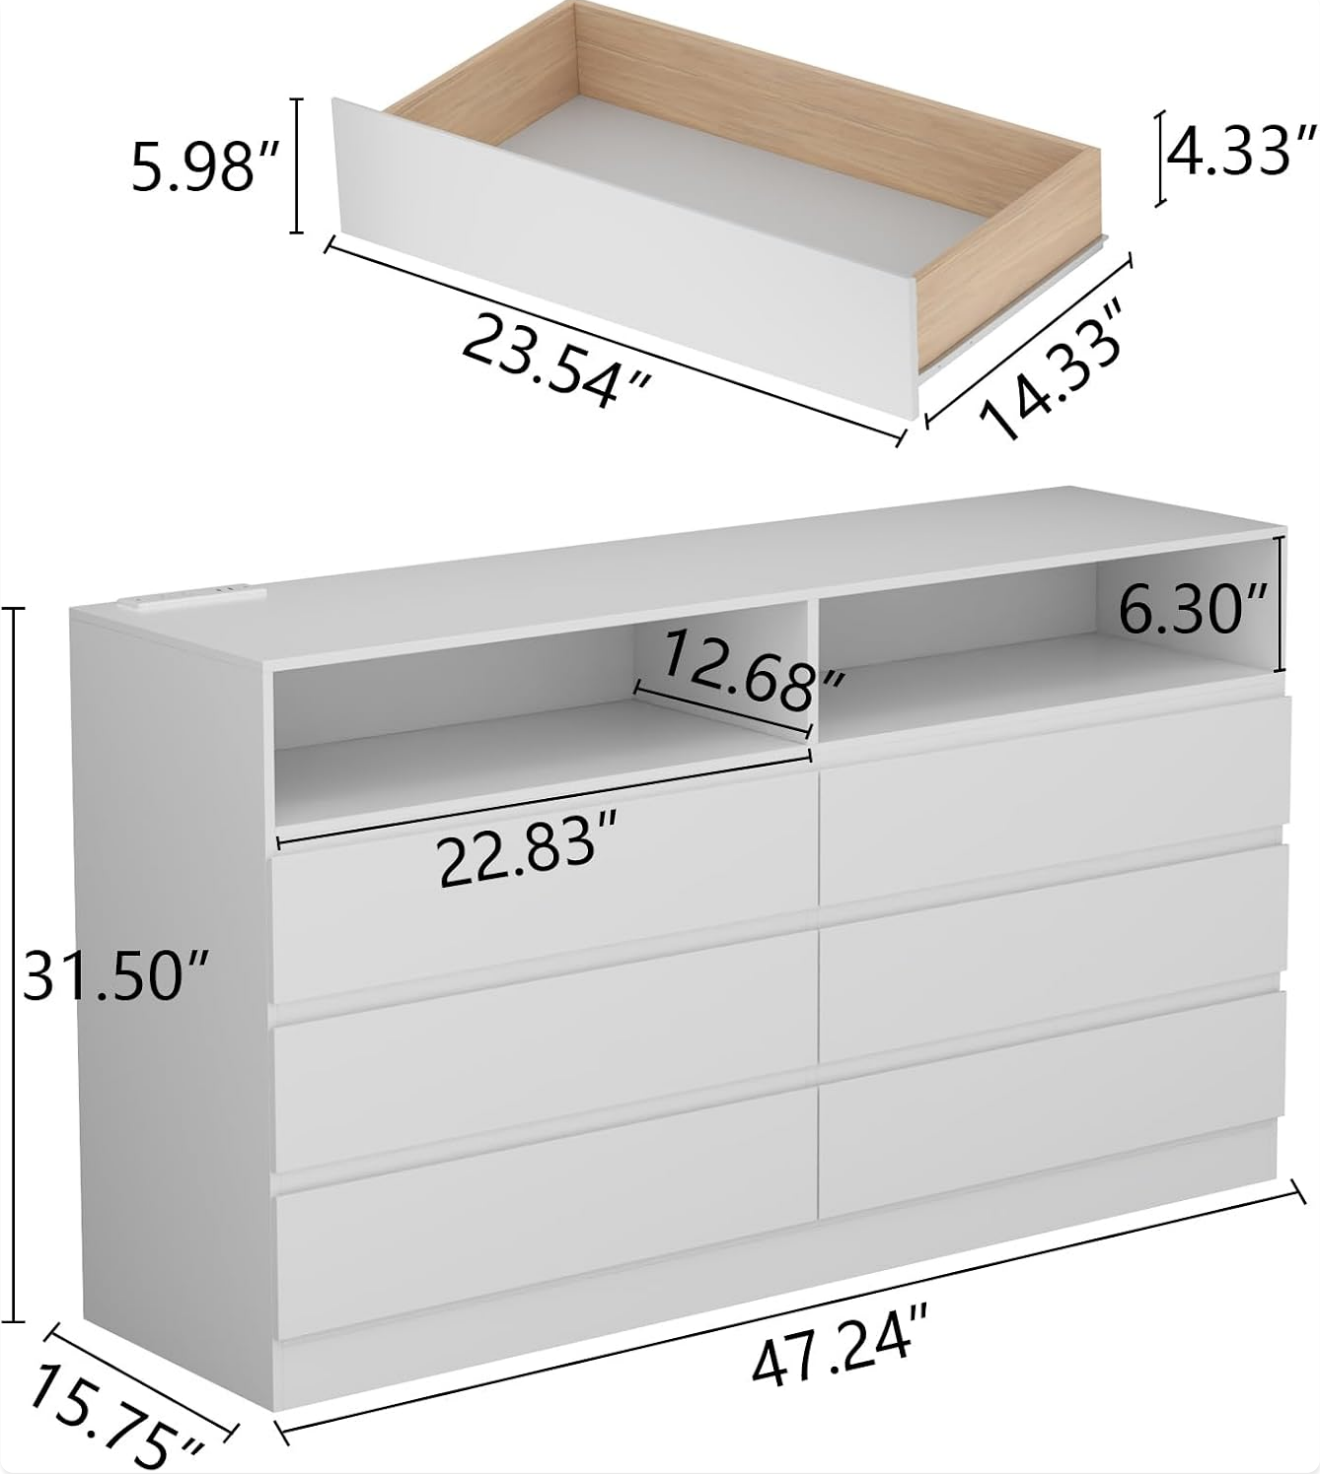


Image: Product dimensions for planning and placement.

8. WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical assistance, please contact Gyfimoie customer support directly. Refer to your purchase documentation for specific contact details or visit the official Gyfimoie website.

Product care instructions: Wipe with Dry Cloth.

© 2023 Gyfirmoie. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question