

- Manuals.plus /
- › ALLIMITY /
- › ALLIMITY Replacement Remote Control User Manual for Metz LED TV Models 55MUB5010, 55MUB7111, 55MUC5000

ALLIMITY QYSY-55MUB5010-QYSY

ALLIMITY Replacement Remote Control User Manual


Compatible with Metz LED TV Models: 55MUB5010, 55MUB7111, 55MUC5000

1. INTRODUCTION

Thank you for choosing the ALLIMITY Replacement Remote Control. This remote is designed to function as a direct replacement for your original Metz LED TV remote, offering full functionality without the need for complex programming. Simply insert batteries, and it is ready for use with compatible Metz LED TV models.

2. PRODUCT OVERVIEW

The ALLIMITY replacement remote control provides a comprehensive set of buttons for navigating your Metz LED TV. Its ergonomic design ensures comfortable handling and easy access to all functions, including channel selection, volume control, menu navigation, and direct access to popular streaming services.

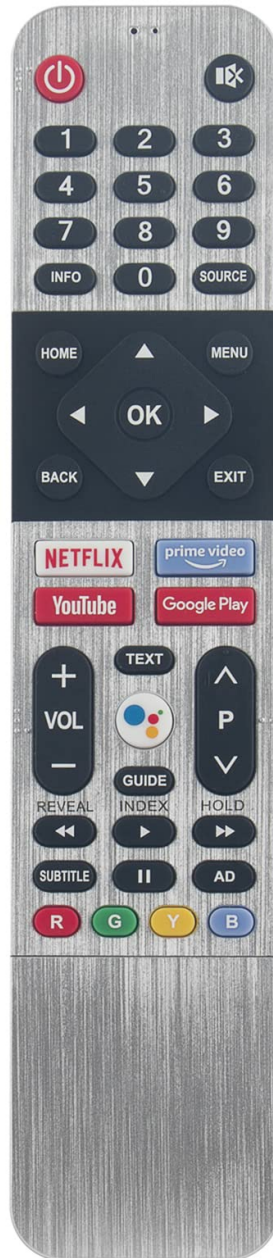

An image showing the ALLIMITY replacement remote control. The remote is silver and black, featuring various buttons for TV operation, including number keys, navigation, volume, channel, and dedicated buttons for streaming services like Netflix, Prime Video, YouTube, and Google Play.

Key Features:

- No programming required: Ready to use out of the box.
- Full functionality: Covers all functions of your original remote control.
- Wide compatibility: Specifically designed for Metz LED TV models 55MUB5010, 55MUB7111, 55MUC5000.

3. SETUP

3.1 Battery Installation

To begin using your ALLIMITY replacement remote control, you will need to install two AAA alkaline batteries (not included). Follow these steps:

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

The remote control is now ready for immediate use with your compatible Metz LED TV.

4. OPERATING INSTRUCTIONS

This section describes the primary functions of the buttons on your ALLIMITY replacement remote control.

Button	Function
Power (Red button)	Turns the TV on or off.
0-9 (Number buttons)	Directly select TV channels or input numbers.
SOURCE	Selects the input source (e.g., HDMI, AV, TV).
INFO	Displays information about the current program or input.
MENU	Opens the TV's main menu.
HOME	Accesses the TV's smart home screen or main interface.
OK (Center button)	Confirms selections in menus.
Directional Arrows	Navigates through menus and options (Up, Down, Left, Right).
BACK	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.
NETFLIX, prime video, YouTube, Google Play	Direct access buttons for respective streaming applications.
TEXT	Activates or deactivates Teletext.
VOL +/-	Adjusts the volume level up or down.
P +/-	Changes TV channels up or down.
GUIDE	Displays the Electronic Program Guide (EPG).
INDEX	Accesses index functions, if available.
HOLD	Holds the current Teletext page.
REVEAL	Reveals hidden text in Teletext.
AD	Activates or deactivates Audio Description.
SUBTITLE	Toggles subtitles on or off.
Rewind (<<), Play/Pause (), Fast Forward (>>)	Controls media playback (e.g., USB, streaming).

Button	Function
R, G, Y, B (Colored buttons)	Perform specific functions depending on the TV menu or application.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA alkaline batteries.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **Remote Sensor:** Ensure the TV's remote sensor is not blocked or covered.
- **Distance:** Operate the remote within the effective range (up to 10 meters) of the TV.

5.2 Specific Buttons Not Working

- If only certain buttons are not working, try replacing the batteries first.
- Ensure the TV is in the correct mode (e.g., TV mode for channel buttons, Smart TV mode for app buttons).

6. SPECIFICATIONS

Feature	Detail
Brand	ALLIMITY
Model Number	QYSY-55MUB5010-QYSY
Compatible Devices	Metz LED TV models: 55MUB5010, 55MUB7111, 55MUC5000
Connectivity Technology	Infrared (IR)
Number of Buttons	35
Maximum Range	10 meters
Product Dimensions	4 x 12 x 0.3 cm
Item Weight	100 grams
Batteries Required	Yes, 2x AAA (not included)
Special Feature	No programming required

7. WARRANTY AND SUPPORT

Specific warranty information for this ALLIMITY replacement remote control is not provided in the product details. For any questions regarding warranty, technical support, or product issues, please contact the seller directly through your purchase platform. Ensure you have your order details available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C6KPXS6H>

More documents and user manuals: <https://manuals.plus/>