

Ihomekee CM6810

Ihomekee Espresso and Cappuccino Machine

Model: CM6810 | Brand: Ihomekee

INTRODUCTION

Thank you for choosing the Ihomekee 3.5 Bar Espresso and Cappuccino Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee maker. Please read it thoroughly before first use and keep it for future reference.

This compact and powerful espresso machine is designed to bring the barista experience to your home, allowing you to enjoy rich espresso, creamy cappuccinos, and lattes with ease.



Figure 1: Ihomekee Espresso Machine (Red)

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.

COMPONENTS

Familiarize yourself with the main components of your Ihomekee Espresso Machine:

- Water Reservoir Cap: Located on top, for adding water.
- Control Knob: Single switch knob with indicator light for operation (Off, Pause, Brew, Steam).
- Portafilter: Holds ground coffee.
- 4-Cup Filter Basket: Inserted into the portafilter.
- Glass Carafe: Collects brewed espresso, with measurement markings.
- Steam Wand: For frothing milk.
- Detachable Drip Tray: For easy cleaning of spills.
- Coffee Scoop/Tamper: For measuring and tamping ground coffee.



Figure 2: Key Components

SETUP

Before first use, clean all removable parts with warm soapy water and rinse thoroughly. Ensure the machine is placed on a stable, flat surface.

1. **Step 1: Add Water.** Unscrew the water reservoir cap on top of the machine. Pour fresh, cold water into the reservoir. The carafe has markings to help you measure the desired amount (1-4 cups). Replace the cap securely.



Figure 3: Step-by-step usage guide (Step One: Add Water)

2. **Step 2: Load Ground Coffee.** Place the 4-cup filter basket into the portafilter. Use the included scoop to add medium-coarse ground coffee to the filter basket. Tamp the coffee gently with the flat end of the scoop to ensure even extraction.

Figure 3: Step-by-step usage guide (Step Two: Load Ground Coffee)

3. **Step 3: Install Portafilter.** Align the portafilter with the "INSERT" mark on the machine. Rotate the portafilter counter-clockwise until its handle is aligned with the "LOCK" position. Ensure it is locked tightly to prevent leaks.



Figure 4: Correct Portafilter Installation

Figure 3: Step-by-step usage guide (Step Three: Install Portafilter)

4. **Step 4: Place Carafe.** Place the glass carafe on the drip tray directly beneath the portafilter.

OPERATING INSTRUCTIONS

Brewing Espresso

1. **Step 1: Adjust Knob to "PAUSE".** Plug in the machine. Turn the control knob to the "PAUSE" position. The indicator light will illuminate, signifying that the machine is heating.

Figure 3: Step-by-step usage guide (Step Four: Adjust knob to "PAUSE")

2. **Step 2: Preheating.** Allow the machine to preheat for approximately 90 seconds. The indicator light will turn off when preheating is complete, indicating it's ready to extract.

Figure 3: Step-by-step usage guide (Step Five: Preheating 90 seconds, ready to extract)

3. **Step 3: Brew Espresso.** Turn the control knob to the "BREW" position (coffee cup icon). Hot water will begin to flow through the ground coffee into the carafe.
4. **Step 4: Stop Brewing.** Once the desired amount of espresso is brewed, turn the control knob back to the "OFF" position.

Milk Frothing

The powerful steam wand allows you to create creamy froth and microfoam for cappuccinos, lattes, and more.



Figure 5: Using the Steam Wand

1. **Step 1: Prepare Milk.** Fill a frothing pitcher with cold milk (dairy or non-dairy) to about one-third full.
2. **Step 2: Heat Steam Wand.** Turn the control knob to the "STEAM" position (steam icon). Allow the machine to heat up until steam is consistently released from the wand.
3. **Step 3: Froth Milk.** Submerge the tip of the steam wand just below the surface of the milk. Turn the control knob to the "STEAM" position. Angle the pitcher slightly to create a swirling motion. Move the pitcher up and down to incorporate air and create foam.

Figure 3: Step-by-step usage guide (Step Six: Rotate steam control knob, making milk foam)

4. **Step 4: Stop Steaming.** Once the milk reaches the desired temperature and consistency, turn the control knob back to "OFF". Immediately wipe the steam wand with a damp cloth to prevent milk residue from drying.

Coffee Recipes

Explore various coffee drinks you can create with your Ihomekee Espresso Machine:



Figure 6: Coffee Recipes

MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your espresso machine.

Daily Cleaning

- **Drip Tray:** Remove and empty the detachable drip tray after each use. Wash with warm soapy water and rinse.
- **Portafilter & Filter Basket:** Remove used coffee grounds. Wash the portafilter and filter basket with warm soapy water and rinse thoroughly.
- **Steam Wand:** Immediately after frothing, wipe the steam wand with a damp cloth to remove any milk residue. Briefly activate the steam function to clear any internal blockages.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or immerse the machine in water.

Descaling (Monthly or as needed)

Over time, mineral deposits can build up inside the machine, affecting performance. Descale your machine regularly using a descaling solution or a mixture of white vinegar and water (1:1 ratio).

1. Fill the water reservoir with the descaling solution.
2. Place a large container under the portafilter and steam wand.
3. Run half of the solution through the brewing cycle without coffee.
4. Run the remaining solution through the steam wand.

5. Rinse the machine by running two full reservoirs of fresh water through both the brewing cycle and the steam wand.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee brews.	No water in reservoir; clogged filter; portafilter not locked correctly.	Fill water reservoir; clean filter; ensure portafilter is securely locked.
Coffee brews too slowly or not at all.	Coffee grounds too fine or tamped too hard; clogged filter.	Use medium-coarse grounds; tamp gently; clean filter.
Weak coffee.	Not enough coffee grounds; coffee grounds too coarse; insufficient preheating.	Add more coffee; use medium-coarse grounds; allow full preheating.
No steam from wand.	Clogged steam wand; insufficient water.	Clean steam wand; ensure sufficient water in reservoir.
Machine leaks.	Portafilter not locked correctly; seal issues.	Ensure portafilter is securely locked; contact support if problem persists.

SPECIFICATIONS

- Brand: Ihomekee
- Model Name: CM6810
- Coffee Maker Type: Espresso Machine
- Pressure: 3.5 Bar
- Capacity: 1-4 Cups (240ml)
- Heating Function: Fast heating (90 seconds)
- Special Features: Portable, Cup Warmer, Milk Frother
- Product Dimensions: 10.59"D x 13.35"W x 7.44"H
- Item Weight: 5.5 pounds
- Coffee Input Type: Ground coffee
- Operation Mode: Fully Automatic



Figure 7: Product Dimensions

WARRANTY & SUPPORT

The Ihomekee Espresso Machine comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or contact Ihomekee customer support.

If you encounter any issues or have questions not covered in this manual, please contact Ihomekee customer service. They are committed to replying within 12 hours.

Contact information for support is typically found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question