

Anne Klein 10/6776CHGB

Anne Klein Women's Date Function Bracelet Watch

Model: 10/6776CHGB

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Anne Klein Women's Date Function Bracelet Watch, Model 10/6776CHGB. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

The Anne Klein Women's Date Function Bracelet Watch features a Japanese Quartz movement, a light champagne sunray dial with Arabic numerals, and a date calendar window at the 6 o'clock position. The watch is equipped with a durable mineral crystal lens and a gold-tone adjustable link bracelet with a jewelry clasp and extender. It is water resistant to 100 feet (30 meters).



Image: Front view of the Anne Klein Women's Date Function Bracelet Watch, showcasing the dial and bracelet.

SETUP

1. Setting the Time

1. Pull the crown (the small knob on the side of the watch case) out to the second click position.
2. Turn the crown clockwise or counter-clockwise to move the hands and set the desired time.
3. Once the time is set, push the crown back into its normal position to start the watch.



Image: Side view of the watch, highlighting the crown used for setting time and date.

2. Setting the Date

1. Pull the crown out to the first click position.
2. Turn the crown counter-clockwise to adjust the date. Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism.
3. Once the date is set, push the crown back into its normal position.

3. Adjusting the Bracelet

The bracelet features adjustable links and an extender for a comfortable fit. If the watch is too loose, links can be removed by a qualified jeweler or watch repair professional. An extra link/extender is included with your watch for minor adjustments.



Image: The watch displayed on a wrist, illustrating its size and fit. This image can help in assessing bracelet adjustment needs.

OPERATING

Your Anne Klein watch is designed for reliable daily use. The Japanese Quartz movement ensures accurate timekeeping. The date function automatically advances once every 24 hours. Ensure the crown is fully pushed in to maintain water resistance during normal wear.

MAINTENANCE

1. Cleaning

Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dirt and perspiration. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

2. Water Resistance

This watch is water resistant to 100 feet (30 meters), suitable for splashes or brief immersion in water. It is **not** recommended for swimming, diving, or prolonged water activities. Always ensure the crown is fully pushed in before any contact with water.

3. Battery Replacement

The watch is powered by a battery. When the watch stops running, the battery may need replacement. It is recommended to have the battery replaced by a professional watch technician to ensure proper sealing and maintain water resistance.





Image: Back view of the watch, showing the case back where battery access is typically located.

4. Storage

When not in use, store your watch in a dry place, away from direct sunlight and extreme temperatures. The original watch box is ideal for storage.

TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Date not changing:** Ensure the time is set correctly, passing midnight. If the date is stuck, try manually advancing it using the crown (refer to 'Setting the Date' section).
- **Condensation under crystal:** This indicates a loss of water resistance. Avoid further contact with water and seek professional service immediately.

SPECIFICATIONS

Feature	Specification
Model Number	10/6776CHGB

Movement Type	Japanese Quartz
Display Type	Analog
Case Material	Metal
Crystal Material	Mineral Glass
Case Diameter	24 millimeters
Case Thickness	8 millimeters
Band Material	Metal (Bracelet)
Band Width	12 millimeters
Band Length	7 inches
Clasp Type	Jewelry Clasp
Water Resistance Depth	100 feet (30 meters)
Dial Color	Gold (Light Champagne Sunray)
Band Color	Gold
Additional Features	Date Calendar, Arabic Numerals, Easy Reader

WARRANTY

Your Anne Klein watch comes with a Limited Warranty. Please refer to the Warranty Card included with your purchase for specific terms, conditions, and duration of coverage. Retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, service, or inquiries regarding your Anne Klein watch, please contact Anne Klein customer service. Contact information can typically be found on the official Anne Klein website or on the warranty card.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question