

[Manuals.plus](#) /

› [Pagani Design](#) /

› Pagani Design 1766 Chronograph Watch User Manual

## Pagani Design PD1766

# Pagani Design 1766 Chronograph Watch User Manual

Model: PD1766

## INTRODUCTION

---

Thank you for choosing the Pagani Design 1766 Chronograph Watch. This timepiece combines classic design elements with modern VK64 quartz movement technology, offering precise timekeeping and chronograph functionality. Crafted from durable stainless steel and featuring 100m water resistance, this watch is designed for reliability and style. Please read this manual carefully to understand the features and proper operation of your watch.



Image: Front view of the Pagani Design 1766 Chronograph Watch, showcasing its green dial, sub-dials, and stainless steel bracelet.

## 1. SETUP

---

### 1.1 Setting the Time

1. Pull the crown (B) out to position 2.
2. Turn the crown to set the hour and minute hands to the desired time.
3. Push the crown back to position 1 to start the watch.



Image: Close-up view of the watch's right side, showing the crown (B) and chronograph pushers (A and C).

## 1.2 Adjusting the Bracelet

The stainless steel bracelet can be adjusted by removing pins from the links. It is recommended to have this procedure performed by a qualified watch technician to avoid damage to the bracelet or watch.

## 2. OPERATING THE CHRONOGRAPH (VK64 MOVEMENT)

---

The VK64 movement features a chronograph with a 60-minute counter and a 24-hour indicator. The central second hand functions as the chronograph second hand.

### 2.1 Chronograph Functions

- **Start/Stop:** Press pusher A (top button) to start the chronograph. Press pusher A again to stop it.
- **Reset:** While the chronograph is stopped, press pusher C (bottom button) to reset all chronograph hands (central second hand, 60-minute counter) to their zero positions.

## 2.2 Sub-dial Functions

- The sub-dial at the 9 o'clock position indicates the **60-minute counter** for the chronograph.
- The sub-dial at the 3 o'clock position indicates the **24-hour time**, synchronized with the main hour hand.



Image: Detailed view of the watch dial, highlighting the chronograph sub-dials at 3 and 9 o'clock, and the central chronograph second hand.

## 3. MAINTENANCE

### 3.1 Cleaning

Wipe the watch regularly with a soft, dry cloth (a watch wipe is included). For the stainless steel bracelet, a slightly damp cloth can be used, followed by a dry one. Avoid using harsh chemicals or abrasive materials.

### 3.2 Water Resistance (100m / 330ft)

Your watch is water-resistant up to 100 meters (330 feet). This means it is suitable for daily use, hand washing, rain, and swimming. **Ensure the crown is fully pushed in before any contact with water.**

- **Do NOT operate the crown or pushers while the watch is wet or submerged.**
- **Avoid wearing the watch during diving or hot showers.** Hot water and steam can compromise the waterproof seals over time.



Image: The Pagani Design 1766 watch shown with water splashes, demonstrating its water-resistant capabilities.

### 3.3 Battery Replacement

The VK64 quartz movement is battery-powered. When the watch stops running, the battery may need replacement. It is recommended to have the battery replaced by a professional watchmaker to ensure proper sealing and maintain water resistance.

## 4. TROUBLESHOOTING

| Problem                                | Possible Cause                                                     | Solution                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------------------|--------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Watch not running                      | Depleted battery                                                   | Replace battery (professional service recommended).                                                                                                                                                                                                                                                                                                                                                                                |
| Chronograph hands do not reset to zero | Misalignment or internal issue                                     | <p>Perform chronograph zero reset:</p> <ol style="list-style-type: none"><li>1. Pull the crown (B) out to position 2.</li><li>2. Press pusher A (top button) to adjust the chronograph second hand.</li><li>3. Press pusher C (bottom button) to adjust the 60-minute counter.</li><li>4. Once all hands are aligned to zero, push the crown back to position 1.</li></ol> <p>If the issue persists, contact customer support.</p> |
| Water inside the watch                 | Crown not fully pushed in, exposure to hot steam, or damaged seals | Immediately take the watch to a professional watchmaker for inspection and repair to prevent further damage.                                                                                                                                                                                                                                                                                                                       |

## 5. SPECIFICATIONS



PAGANI DESIGN 1766

Image: Technical diagram illustrating the dimensions and key features of the Pagani Design PD-1766 watch.

| Feature                | Detail                                    |
|------------------------|-------------------------------------------|
| Model Number           | PD1766                                    |
| Movement               | Japanese VK64 Quartz Chronograph          |
| Case Material          | Stainless Steel                           |
| Case Diameter          | 40 mm                                     |
| Case Thickness         | 13 mm                                     |
| Dial Window Material   | Synthetic Sapphire Glass                  |
| Band Material          | Stainless Steel                           |
| Band Width             | 20 mm                                     |
| Band Length            | 220 mm (Max Perimeter 210mm)              |
| Water Resistance Depth | 100 Meters (330 Feet)                     |
| Special Features       | Chronograph, Stopwatch, 24-hour indicator |
| Power Source           | Battery Powered                           |
| Weight                 | 149.7 grams                               |

6. WARRANTY AND SUPPORT

6.1 Warranty Information

Your Pagani Design 1766 watch comes with a **2-year limited warranty** from the date of purchase, covering manufacturing defects. Additionally, a **30-day return policy** is offered for any reason.

The warranty does not cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Water damage if the crown was not properly secured or if the watch was exposed to conditions beyond its specified water resistance (e.g., hot showers, diving).
- Battery replacement.

### 6.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your Pagani Design watch, please contact the seller or refer to the contact information provided with your purchase documentation.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question