

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY RMT-TX300E Replacement Remote Control User Manual for Sony Bravia TVs

ALLIMITY RMT-TX300E

ALLIMITY RMT-TX300E Replacement Remote Control User Manual

For Sony Bravia TVs

1. INTRODUCTION

This manual provides instructions for the ALLIMITY RMT-TX300E Replacement Remote Control. This remote is designed to function as a direct replacement for the original Sony Bravia TV remote control, model RMT-TX300E. It offers full functionality for compatible Sony Bravia television models, ensuring a seamless user experience without the need for complex programming.





Figure 1: Front view of the ALLIMITY RMT-TX300E Replacement Remote Control.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. This product contains small parts, such as batteries, which can pose a choking hazard. Keep out of reach of children under 3 years of age. Always ensure the battery compartment is securely closed.

3. SETUP

3.1 Battery Installation

The ALLIMITY RMT-TX300E remote control requires two AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) and lift to open the compartment.

3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 2: Battery compartment with AAA batteries inserted.

3.2 Initial Use

Once batteries are installed, the remote control is ready for use. No programming is typically required for this replacement remote. Simply point the remote directly at the IR sensor on your Sony Bravia TV.

4. OPERATION

To operate your television using the ALLIMITY RMT-TX300E remote control, ensure there are no obstructions between the remote and the TV's infrared (IR) sensor. The remote functions identically to the original remote, providing access to all standard TV features.

4.1 Key Functions

- **Power Button** (): Turns the TV on or off.
- **Number Buttons (0-9)**: Selects channels directly.
- **Channel Up/Down (CH +/-)**: Changes channels sequentially.
- **Volume Up/Down (VOL +/-)**: Adjusts the TV volume.
- **Mute Button** (): Mutes or unmutes the TV sound.
- **Home Button (HOME)**: Accesses the TV's main menu or smart TV interface.
- **Navigation Pad (Up, Down, Left, Right, Enter)**: Navigates through menus and selects options.
- **Return Button** (↶): Returns to the previous screen or menu.
- **Netflix / YouTube Buttons**: Direct access to Netflix and YouTube applications (if supported by your TV model).
- **Sync Menu**: Accesses the Sync Menu for connected devices.
- **Digital/Analog**: Switches between digital and analog TV inputs.





Figure 3: Front and back view of the remote control, showing button layout and battery compartment location.

5. MAINTENANCE

5.1 Battery Replacement

If the remote control's performance degrades or it stops responding, it is likely that the batteries need to be replaced. Always replace both AAA batteries with new, high-quality alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper function.

5.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

6. TROUBLESHOOTING

If you experience issues with your ALLIMITY RMT-TX300E remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - a. **Check Batteries:** Ensure that the batteries are inserted correctly with the correct polarity (+/-). If the batteries are old or depleted, replace them with new alkaline batteries.
 - b. **Line of Sight:** Make sure there are no objects blocking the path between the remote control and the infrared (IR) sensor on your television. The remote requires a clear line of sight to the TV's IR receiver.
 - c. **Point Directly:** Always point the remote control directly at the IR sensor located on your TV unit.
- **Specific Buttons Not Working:** If only certain buttons are not functioning, try cleaning the remote as described in Section 5.2. If the issue persists after cleaning and battery replacement, the remote may be faulty.
- **TV Model Not Listed:** If your specific Sony Bravia TV model is not explicitly listed in the compatibility section, but you believe it should be compatible, please contact ALLIMITY customer support for confirmation before ordering or for assistance.

7. COMPATIBLE TV MODELS

The ALLIMITY RMT-TX300E Replacement Remote Control is compatible with a wide range of Sony Bravia TV models. A partial list of known compatible models includes:

- KDL-32W600D
- KDL-32W660E
- KDL-40W650D
- KDL-40W660E
- KDL-43W660F
- KDL-43W750D
- KDL-49W660E
- KDL-49W750D
- KDL-50W660F
- KDL-55W650D
- KD-43X7000E
- KD-43X7000F
- KD-43X7000G
- KD-49X7000F
- KD-49X7000E
- KD-49X7000G
- KD-55X7000E

- KD-55X7000F
- KD-55X7000G
- KD-60X6700E
- KD-65X7000E
- KD-65X7000F
- KD-65X7000G
- KD-70X6700E

Note: This list is not exhaustive. If your TV model is not listed, please refer to your TV's original remote control model number or contact ALLIMITY support for compatibility verification.

8. SPECIFICATIONS

Feature	Detail
Brand	ALLIMITY
Model Number	RMT-TX300E (Internal SKU: ZCM-RMT-TX300E-GX)
Product Dimensions	7.8 x 0.6 x 2 inches
Item Weight	3.17 ounces
Color	Black
Special Feature	Ergonomic
Max Number of Supported Devices	1
Compatible Devices	Television (Sony Bravia)
Power Source	2 x AAA Alkaline Batteries (not included)

9. CUSTOMER SUPPORT

If you have any questions, concerns, or encounter problems with your ALLIMITY RMT-TX300E Replacement Remote Control that are not addressed in this manual, please do not hesitate to contact ALLIMITY customer support. We are committed to responding to our customers within 24 hours to provide assistance.

Please refer to your purchase documentation or the retailer's website for specific contact information.