

[Manuals.plus](#) /

› [ALLIMITY](#) /

› Allimity N2QAYB001180 Replacement Remote Control User Manual for Panasonic LED TVs

ALLIMITY N2QAYB001180

Allimity N2QAYB001180 Replacement Remote Control User Manual

FOR PANASONIC LED TVs

Introduction

This manual provides instructions for the Allimity N2QAYB001180 replacement remote control, designed for use with various Panasonic LED TV models. This remote functions as a direct replacement and requires no programming.





Image: Front view of the Allimity N2QAYB001180 replacement remote control.

Setup: Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AA alkaline batteries (not included), ensuring that the positive (+) and negative (-) terminals match the polarity indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.







Image: View of the remote control with the battery cover removed, showing the battery compartment and polarity indicators.

Operating Instructions

This replacement remote control operates using infrared (IR) signals. No pairing or programming is required; it functions immediately after battery installation.

- **Direct Line of Sight:** Point the remote control directly at the infrared (IR) sensor located on your Panasonic LED TV.
- **Clear Path:** Ensure that no objects are blocking the path between the remote control and the IR sensor on your television.
- **Button Functions:** All buttons correspond to the standard functions of your original Panasonic TV remote. Refer to your TV's user manual for specific button functionalities.

Maintenance

- **Battery Replacement:** Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both batteries with new AA alkaline batteries.
- **Cleaning:** Clean the remote control with a soft, dry cloth. Avoid using liquid cleaners, abrasive materials, or solvents, as these can damage the remote's surface or internal components.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

Troubleshooting

If the remote control is not functioning as expected, please follow these steps:

1. **Check Batteries:** Ensure that the batteries are inserted correctly, matching the positive (+) and negative (-) polarity indicators. Replace old batteries with a fresh pair of AA alkaline batteries.
2. **Line of Sight:** Verify that the remote is pointed directly at the TV's IR sensor and that there are no obstructions (e.g., furniture, plants) blocking the signal path.
3. **TV IR Sensor:** Confirm that the TV's IR sensor is not covered or obstructed.
4. **Test with Another Device (if possible):** If you have another compatible Panasonic TV, test the remote with it to determine if the issue is with the remote or the TV.

If problems persist after following these steps, please refer to the Support section for further assistance.

Specifications

Model Number	N2QAYB001180
Brand	ALLIMITY
Dimensions	8.19 x 0.6 x 2 inches (approx.)
Item Weight	3.17 ounces (approx.)

Color	Black
Special Feature	Ergonomic design
Power Source	2 x AA Alkaline Batteries (not included)
Compatible Devices	Panasonic LED Televisions

Compatible Panasonic LED TV Models

This remote control is compatible with, but not limited to, the following Panasonic LED TV models:

- TX-40GX700E, TX-40GX710E
- TX-50GX700E, TX-50GX710E
- TX-58GX700E, TX-58GX710E, TX-58GX701E
- TX-65GX700E, TX-65GX710E, TX-65GX820B
- TX-43FX600E, TX-43FX620E, TX-43FX603E, TX-43FX613E, TX-43FX623E, TX-43FX633E
- TX-49FX600E, TX-49FX620E, TX-49FX603E, TX-49FX613E, TX-49FX623E, TX-49FX633E, TX-49FX700E, TX-49FX740E, TX-49FX780E
- TX-55FX600E, TX-55FX620E, TX-55FX603E, TX-55FX613E, TX-55FX623E, TX-55FX633E, TX-55FX700E, TX-55FX740E, TX-55FX780E
- TX-65FX600E, TX-65FX620E, TX-65FX603E, TX-65FX623E, TX-65FX700E, TX-65FX740E, TX-65FX780E, TX-65FX740B, TX-65FX750B, TX-65FXW654
- TX-65FZ802B, TX-65FZ830E, TX-65FZ950E, TX-65FZC804, TX-65FZC835, TX-65FZC954, TX-65FZW804, TX-65FZW835, TX-65FZW954
- TX-75FX780E, TX-75EX750B, TX-75EX780E, TX-75EXR780, TX-75EXW784, TX-75FX750B
- TX-77EZ1000E, TX-77EZ1002B, TX-77EZC1004, TX-77EZR1000, TX-77EZW1004
- TX-85X940E, TX-85X942B, TX-85XR940, TX-85XW944, TX-85XW945

If your specific TV model is not listed, please contact the seller for confirmation before purchase.

Support and Contact Information

This product is a replacement remote control. For any questions, concerns, or issues regarding the received remote, please contact the seller directly through the platform where the purchase was made.

The seller is committed to providing customer support and aims to reply to inquiries within 24 hours.

Safety Warnings

WARNING: CHOKING HAZARD - Small parts. This product is not suitable for children under 3 years of age. Keep batteries and small components out of reach of young children.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C6LZ96Y1>

More documents and user manuals: **<https://manuals.plus/>**