

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TONOR](#) /

› [TONOR Wireless Microphones TW630 Instruction Manual](#)

## TONOR TW630

# TONOR TW630 UHF Dual Wireless Microphone System Instruction Manual

Model: TW630

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your TONOR TW630 UHF Dual Wireless Microphone System. Please read this manual thoroughly before using the product to ensure proper function and longevity.

## WHAT'S IN THE BOX

---

Verify that all items listed below are included in your package:

- 2 x Handheld Microphones
- 1 x Receiver with 6.35mm Plug
- 2 x Anti-slip Rings
- 2 x Mic Covers (Foam Windscreens)
- 1 x USB Charging Cable
- 1 x User Manual

# All-in-one Package

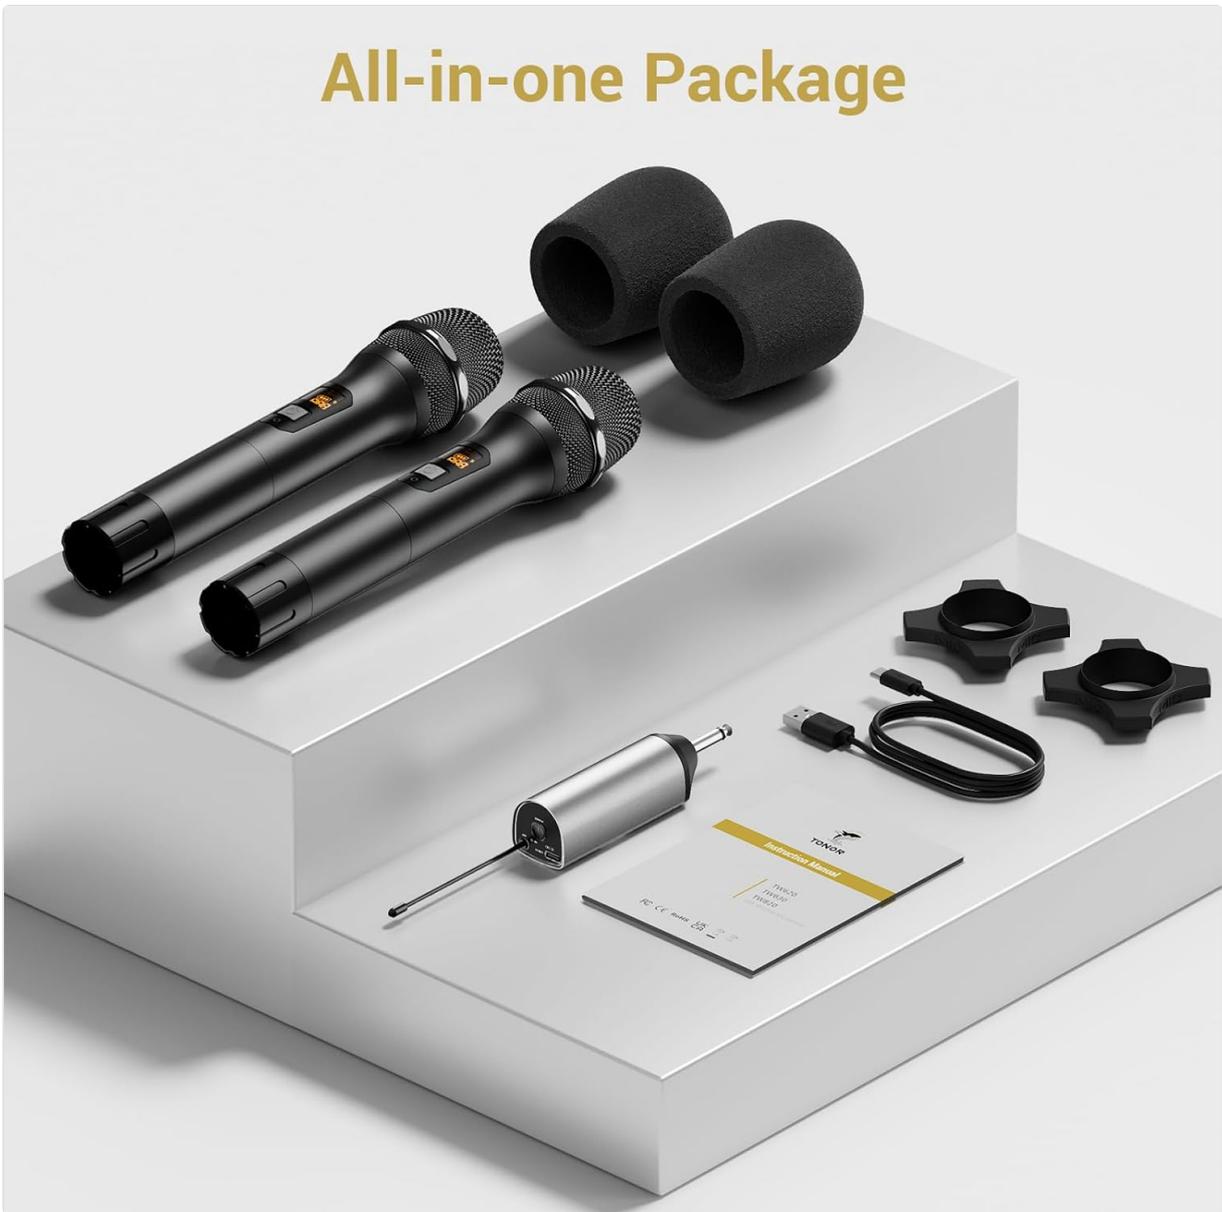


Image: All components included in the TONOR TW630 package.

## PRODUCT OVERVIEW

The TONOR TW630 system features two durable metal handheld microphones and a compact plug-in receiver, designed for clear audio transmission over a UHF frequency band.



Image: Detailed view of the microphone, showing its display, power button, and channel switch button.



Image: Detailed view of the receiver, highlighting its charging port, antenna, and indicator lights.

## Key Features:

- **Wireless Freedom:** Up to 200ft (60m) operating range (line of sight).
- **Stable Signal:** 15 adjustable channels to minimize interference.
- **Durable Construction:** Microphones and receiver are made of rugged metal.
- **Extended Battery Life:** Receiver provides up to 6 hours of use on a 2-3 hour charge.

## SETUP GUIDE

### 1. Power Supply

- **Microphones:** Each microphone requires 2 x AA batteries (not included). Open the battery compartment at the bottom of the microphone and insert the batteries, observing polarity.
- **Receiver:** The receiver has a built-in rechargeable battery. Charge it using the provided USB cable and a 5V adapter (not included). A full charge takes approximately 2-3 hours and provides up to 6 hours of operation.

# Microphone & Receiver Power Supply



Image: Instructions for powering the microphone with AA batteries and charging the receiver via USB.

## 2. Pairing the Microphones and Receiver

The system is designed for automatic pairing:


1. Turn on both the microphone(s) and the receiver.
2. The receiver will automatically sync its frequency with the microphone(s). The RF light on the receiver will illuminate when a stable connection is established.

# Two-Step Pairing

Plug and Play

1

Turn on the microphone and receiver to auto pairing.

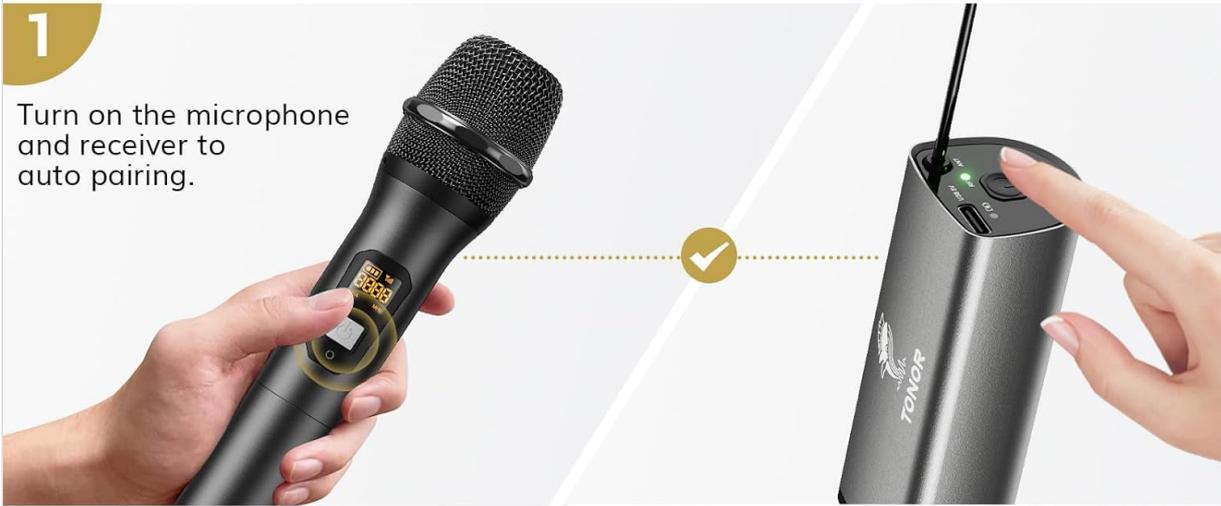

2

Plug the receiver into the speaker.



Image: Visual guide for the two-step pairing process and connecting the receiver.

## 3. Connecting to Audio Devices

Plug the 6.35mm receiver directly into the "MIC IN" input of compatible audio equipment.

- **Compatible Devices:** Powered speakers, karaoke machines, amplifiers, mixers, and audio interfaces.
- **Incompatible Devices:** This system is not compatible with phones, computers, or tablets directly. An additional 3.5mm (1/8") adapter is required for these devices (not included).

# Support Multiple Devices

Suitable for equipment with 6.35mm (1/4") interface



**Power Amplifier**

**Outdoor Speaker**

**Car Audio System**

**Mixer**

**Karaoke Machine**

**MIC** **AUX**

Plug it into the "MIC IN" input!

Note: To connect to a mobile phone, computer or tablet, an additional 3.5mm (1/8") interface is needed (but not included in the package).

Image: Examples of compatible audio devices and correct input connection.

## OPERATING INSTRUCTIONS

### Channel Switching

The TW630 system offers 15 adjustable channels to avoid interference. If you experience signal issues or are using multiple sets simultaneously, you can change the microphone's channel:

- To switch channels, briefly press the "Channel Switch Button" located inside the microphone's battery compartment (after unscrewing the bottom part).
- The display on the microphone will show the current channel (CHA) and frequency (MHz).
- The receiver will automatically adjust to the new channel.

## 15 Channels per Mic



Image: Guide to changing microphone channels.

### Using Multiple Microphone Sets

Up to 15 sets of TONOR TW630 systems can be used simultaneously without interference. Ensure each set operates on a different channel to prevent signal conflicts.

## Multiple Microphone Support in the Same Environment

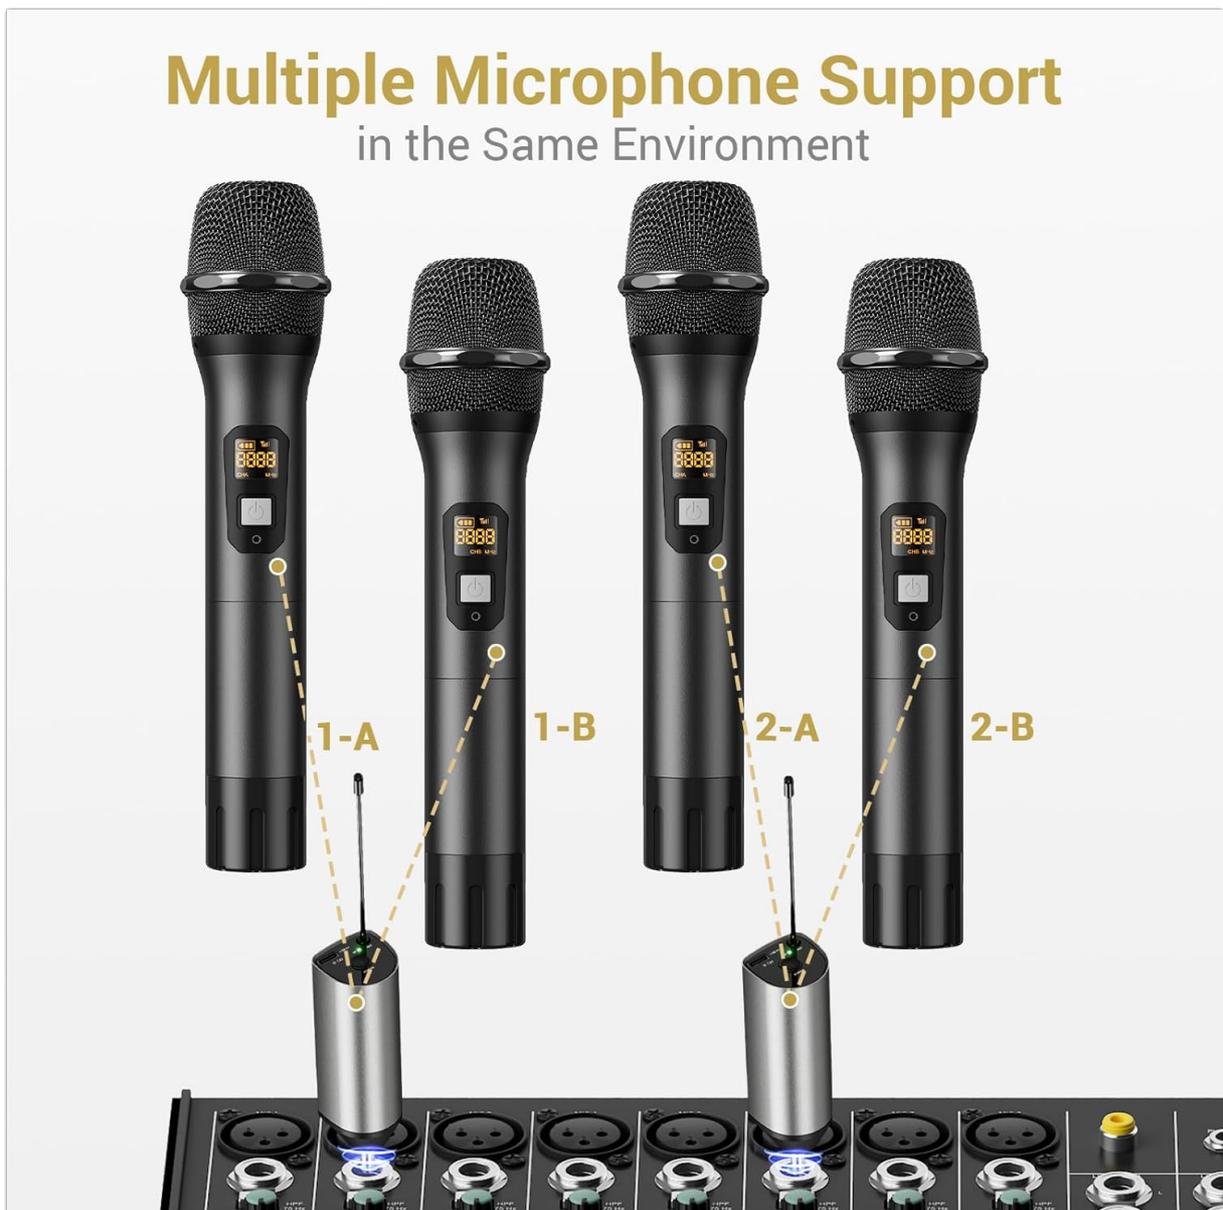


Image: Setup for using multiple microphone systems in the same environment.

## MAINTENANCE

- **Cleaning:** Wipe the microphones and receiver with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Battery Care:** Remove AA batteries from microphones if not in use for extended periods to prevent leakage. Recharge the receiver regularly to maintain battery health.
- **Storage:** Store the system in a cool, dry place away from direct sunlight and extreme temperatures.
- **Microphone Covers:** Use the provided foam mic covers to protect against wind noise and moisture.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from microphone	Microphone or receiver not powered on. Microphone batteries are dead or incorrectly inserted. Receiver not properly connected to audio device. Microphone and receiver not paired. Volume on audio device is too low.	Ensure both are turned on. Replace AA batteries in microphone; check polarity. Verify receiver is securely plugged into the "MIC IN" port. Turn both devices off and on again to re-initiate auto-pairing. Increase volume on your connected audio device.
Interference or poor sound quality	Other wireless devices operating on similar frequencies. Operating range exceeded. Obstructions between microphone and receiver.	Change the channel on the microphone. Reduce distance between microphone and receiver (within 200ft/60m line of sight). Ensure clear line of sight; avoid large metal objects.
Receiver not charging	Faulty USB cable or adapter. Receiver battery fully charged.	Try a different USB cable or 5V adapter. Check the charging indicator light.

## SPECIFICATIONS

Feature	Detail
Brand	TONOR
Model Name	TW630
Item Model Number	TN120106
Connectivity Technology	UHF
Connector Type	6.35 mm Jack

Feature	Detail
Microphone Form Factor	Handheld
Material	Metal
Number of Channels	15
Audio Sensitivity	52 Decibels
Signal-to-Noise Ratio	70 dB
Polar Pattern	Unidirectional
Power Source	Battery Powered (Microphones: 2x AA each; Receiver: Rechargeable Lithium Ion)
Receiver Charging Time	2-3 hours
Receiver Working Time	Up to 6 hours
Operating Range	200ft / 60m (line of sight)
Item Weight	1.32 pounds (600 Grams)
Package Dimensions	11.18 x 6.42 x 2.99 inches

## SAFETY INFORMATION

---

- Do not expose the product to water or excessive moisture.
- Avoid dropping or subjecting the product to strong impacts.
- Use only a 5V adapter for charging the receiver to prevent damage.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the unit yourself. Contact qualified service personnel.

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the official TONOR website or contact TONOR customer service directly. Keep your purchase receipt for warranty claims.

You can visit the TONOR store on Amazon for more information: [TONOR Store](#)