

[Manuals.plus](#) /

› [Canyon](#) /

› Canyon BSP-8 Portable Speaker User Manual

Canyon CNE-CBTSP8B

Canyon BSP-8 Mono Portable Speaker User Manual

Model: CNE-CBTSP8B

INTRODUCTION

Thank you for purchasing the Canyon BSP-8 Mono Portable Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and keep it for future reference.

SAFETY INSTRUCTIONS

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and other liquids.
- Use only the specified charging cable and power adapter.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Dispose of the battery and speaker responsibly according to local regulations.

PACKAGE CONTENTS

Please check the box for the following items:

- Canyon BSP-8 Portable Speaker
- USB Charging Cable
- User Manual (this document)



Image: The Canyon BSP-8 speaker shown inside its retail box, indicating typical package contents.

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Canyon BSP-8 speaker.



Image: Front view of the Canyon BSP-8 speaker, showcasing its black fabric finish, top control panel with LED lighting, and integrated carrying handle.



Image: Top view of the Canyon BSP-8 speaker, highlighting the circular control panel with various buttons and the surrounding LED light ring.



Image: Rear view of the Canyon BSP-8 speaker, revealing a protective flap covering the various input ports, including USB, MicroSD, and AUX.

Control Panel Layout:

1. **Power Button:** Press and hold to turn on/off.
2. **Play/Pause Button:** Press to play or pause music. Answer/end calls.
3. **Volume Down / Previous Track:** Short press for volume down, long press for previous track.
4. **Volume Up / Next Track:** Short press for volume up, long press for next track.
5. **Mode Button:** Press to switch between Bluetooth, AUX, USB, and MicroSD modes.
6. **Light Mode Button:** Press to cycle through different LED light effects.

Rear Port Layout (under protective flap):

1. **USB-A Port:** For USB flash drive playback.
2. **MicroSD Card Slot:** For MicroSD card playback.
3. **AUX-in Port:** For connecting external audio devices via 3.5mm audio cable.
4. **USB-C Charging Port:** For charging the speaker.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the USB-C charging port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off when fully charged.

2. Powering On/Off

Press and hold the **Power Button** for approximately 3 seconds to turn the speaker on or off. A voice prompt will indicate the power status.

3. Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light and a voice prompt.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for "Canyon BSP-8" in the list of available devices.
4. Select "Canyon BSP-8" to connect. Once paired, the LED light will stop flashing, and a voice prompt will confirm the connection.
5. If pairing fails, turn off the speaker and your device's Bluetooth, then repeat the steps.

OPERATING INSTRUCTIONS

Music Playback (Bluetooth Mode)

- **Play/Pause:** Press the **Play/Pause Button**.
- **Volume Up:** Short press the **Volume Up Button**.
- **Volume Down:** Short press the **Volume Down Button**.
- **Next Track:** Long press the **Volume Up Button**.
- **Previous Track:** Long press the **Volume Down Button**.

Call Functions

- **Answer/End Call:** Press the **Play/Pause Button**.
- **Reject Call:** Press and hold the **Play/Pause Button**.
- **Redial Last Number:** Double-press the **Play/Pause Button**.

Mode Switching

Press the **Mode Button** to cycle through available modes: Bluetooth, AUX-in, USB Flash Drive, and MicroSD Card. The speaker will announce the current mode.

LED Light Modes

Press the **Light Mode Button** to change the LED light effects on the top panel. Continue pressing to cycle through different patterns or turn the lights off.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the speaker's surface. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or depleted.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; Bluetooth is off on device; device is too far.	Ensure speaker is in pairing mode. Turn Bluetooth on/off on your device. Move device closer to speaker (within 10 meters).
No sound.	Volume is too low; incorrect mode selected; device not connected.	Increase volume on speaker and connected device. Press Mode button to select correct input. Re-pair Bluetooth or check AUX cable connection.
Sound distortion.	Volume too high; low battery; interference.	Lower volume. Charge speaker. Move speaker away from other electronic devices.

SPECIFICATIONS

Feature	Detail
Model Name	Canyon BSP-8
Model Number	CNE-CBTSP8B
Brand	Canyon
Output Power	10 W
Connectivity	Bluetooth, AUX-in, USB-A, MicroSD
Battery Type	Lithium Polymer
Item Weight	1.52 pounds (approx. 0.69 kg)
Human Interface Input	Buttons

WARRANTY AND SUPPORT

Canyon products are covered by a limited warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Canyon website. For technical support or customer service inquiries, please contact

your local retailer or the Canyon support team through their official channels.
Website: canyon.eu

© 2024 Canyon. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question