

CANYON CNE-CBTSP8R

CANYON BSP-8 Bluetooth Speaker User Manual

Model: CNE-CBTSP8R

1. INTRODUCTION

Thank you for purchasing the CANYON BSP-8 Bluetooth Speaker. This manual provides essential information for the safe and efficient use of your device. Please read it thoroughly before operation and retain it for future reference.

Key Features:

- **10W Audio Output:** Delivers clear and powerful sound.
- **Bluetooth 5.2:** For stable and energy-efficient wireless connection up to 10 meters.
- **RGB Backlight:** Integrated lighting for enhanced ambiance.
- **True Wireless Stereo (TWS):** Connect two BSP-8 speakers for a full stereo sound experience.
- **Multiple Playback Options:** Supports Bluetooth, AUX, USB, and MicroSD card inputs.
- **Portable Design:** Compact size with a convenient hanger for easy transport.
- **Long Battery Life:** Up to 3 hours of playtime on a single charge.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the speaker yourself. Contact qualified service personnel.
- Keep the speaker away from water and other liquids. It is not waterproof.
- Use only the provided charging cable or a certified Type-C cable for charging.
- Dispose of the battery and speaker according to local regulations.

3. PACKAGE CONTENTS

- CANYON BSP-8 Bluetooth Speaker
- USB Type-C Charging Cable
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Image 1: Top view of the CANYON BSP-8 speaker, showing the control buttons, RGB backlight, and integrated hanger.

Control Buttons (Top Panel):

- **Power Button:** Press and hold to turn on/off. Short press to play/pause.
- **Volume Down / Previous Track Button:** Short press for volume down. Long press for previous track.
- **Volume Up / Next Track Button:** Short press for volume up. Long press for next track.
- **Mode Button (M):** Short press to switch between Bluetooth, AUX, USB, and MicroSD modes.

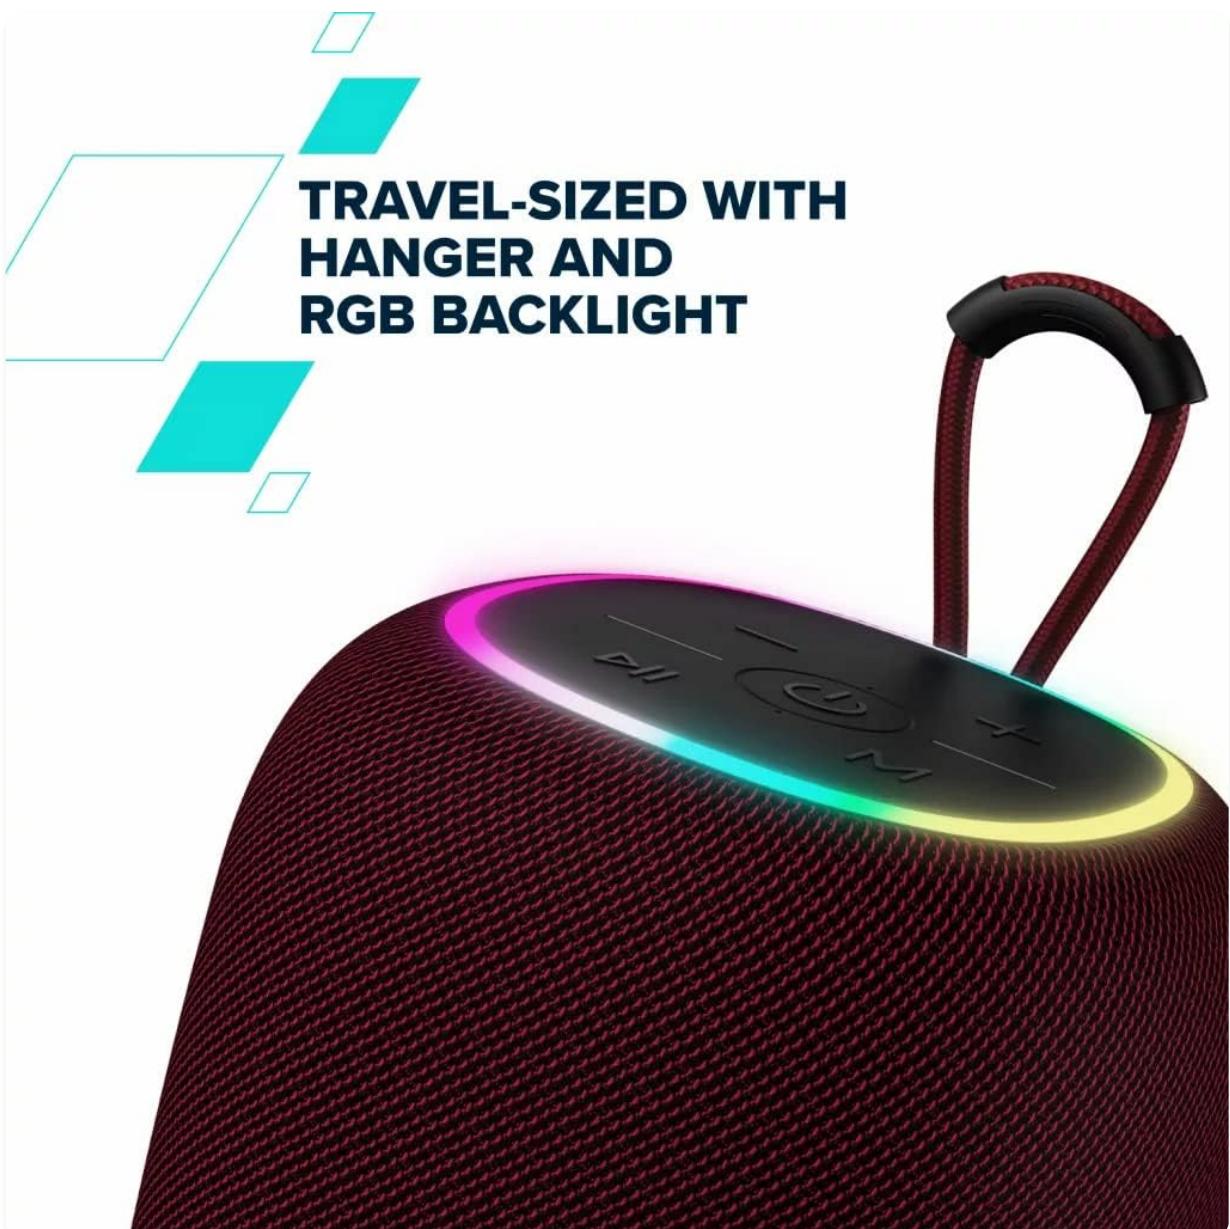


Image 2: Rear view of the CANYON BSP-8 speaker, illustrating the various input ports including AUX, USB, TF (MicroSD) card slot, and DC5V Type-C charging port.

Input Ports (Rear Panel):

- **AUX Port:** For connecting external audio devices via a 3.5mm audio cable.
- **USB Port:** For playing audio from a USB flash drive.
- **TF Card Slot (MicroSD):** For playing audio from a MicroSD card.
- **DC5V (Type-C) Port:** For charging the speaker.

5. SETUP

5.1 Charging the Speaker

1. Connect the provided USB Type-C cable to the DC5V port on the speaker.
2. Connect the other end of the cable to a USB power adapter (5V/1A recommended) or a computer's USB port.
3. The charging indicator light will illuminate. It will turn off or change color once fully charged.

Note: For optimal battery life, fully charge the speaker before first use.

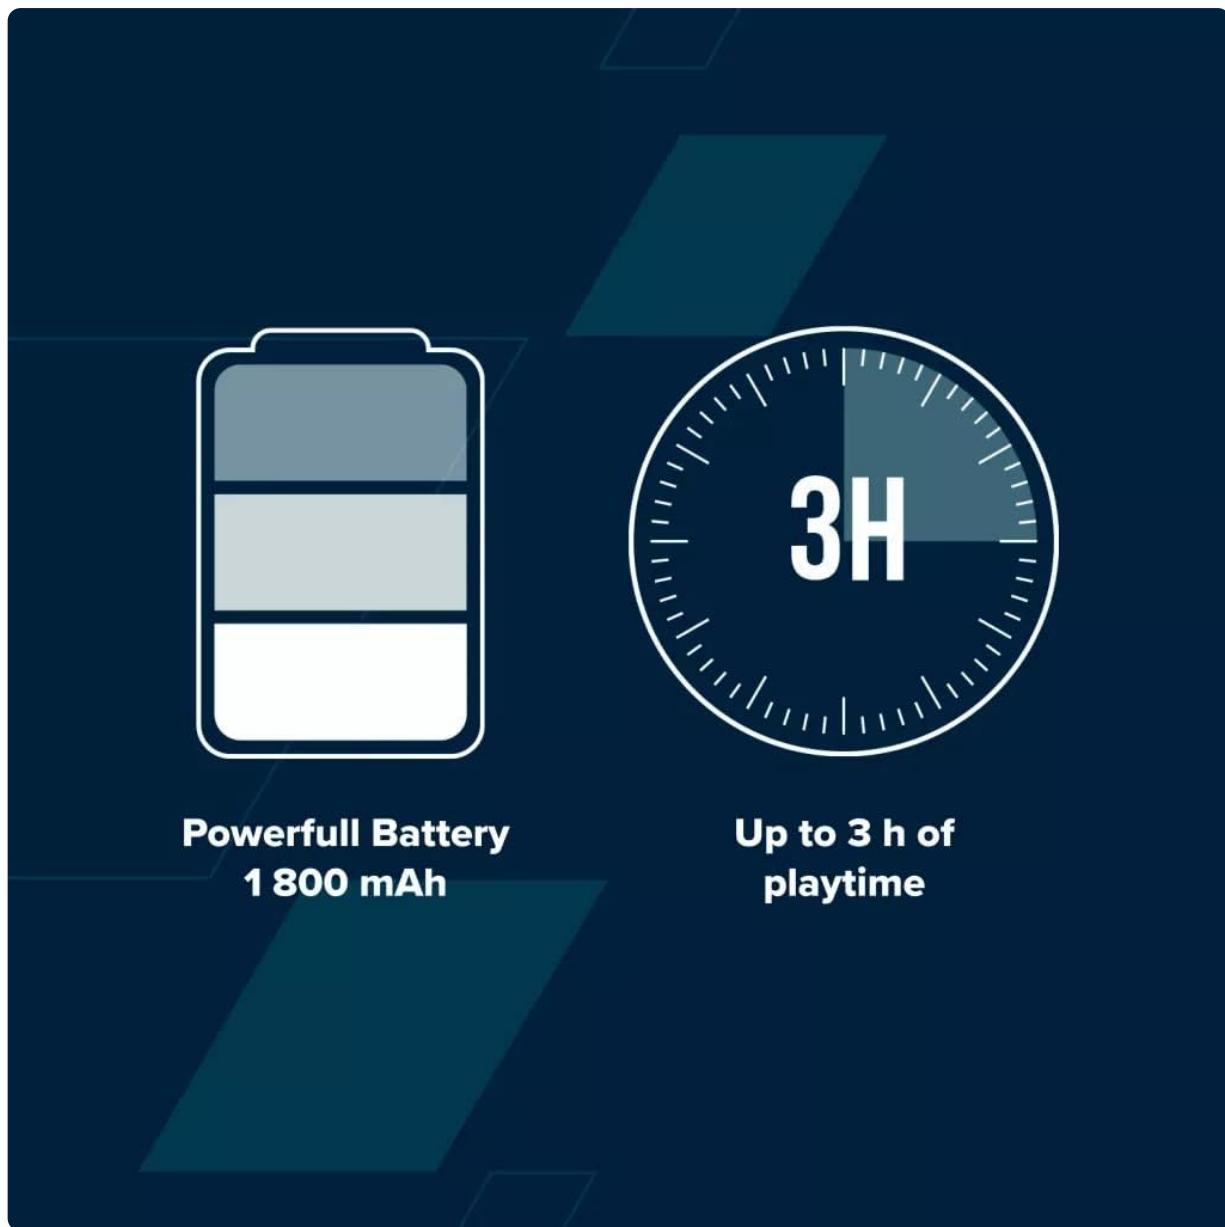


Image 3: Illustration showing the 1800 mAh battery capacity and up to 3 hours of playtime for the CANYON BSP-8 speaker.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button for approximately 3 seconds. You will hear an audible prompt.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds. You will hear an audible prompt.

5.3 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. Enable Bluetooth on your mobile device (smartphone, tablet, computer).
3. Search for available Bluetooth devices and select "CANYON BSP-8" from the list.
4. Once paired, the LED light will stop flashing, and you will hear a confirmation sound.

Note: The speaker will automatically reconnect to the last paired device if it is within range and Bluetooth is enabled.



**Supports BT, AUX, USB,
MicroSD types of connection**

Image 4: Illustration highlighting the stable and energy-efficient Bluetooth 5.2 connection with an operating range of up to 10 meters.

5.4 True Wireless Stereo (TWS) Pairing

To connect two CANYON BSP-8 speakers for a stereo sound experience:

1. Ensure both BSP-8 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. It will enter TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. You will hear a confirmation sound once connected.
4. Once TWS is established, connect your mobile device to the primary speaker via Bluetooth as described in section 5.3.

Note: TWS mode only works with two identical CANYON BSP-8 speakers.

6. OPERATING INSTRUCTIONS

6.1 Playing Audio

- **Bluetooth Mode:** After successful pairing, audio from your connected device will play through the speaker.
- **AUX Mode:** Connect a 3.5mm audio cable from your external audio device to the AUX port on the speaker. Press the 'M' button to switch to AUX mode.
- **USB Mode:** Insert a USB flash drive into the USB port. The speaker will automatically switch to USB mode and begin playing audio files. If not, press the 'M' button.
- **MicroSD Card Mode:** Insert a MicroSD card into the TF card slot. The speaker will automatically switch to MicroSD mode and begin playing audio files. If not, press the 'M' button.

6.2 Playback Control

- **Play/Pause:** Short press the Power button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.

6.3 RGB Backlight

The speaker features an integrated RGB backlight on the top panel. The backlight activates automatically when the speaker is powered on. There are no specific controls for changing the RGB pattern or turning it off/on independently of the speaker's power state.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on	Low battery; Power button not pressed long enough	Charge the speaker; Press and hold the Power button for 3 seconds
No sound	Volume too low; Incorrect mode; Device not paired	Increase volume; Press 'M' to change mode; Re-pair Bluetooth device
Bluetooth connection unstable	Device too far; Obstructions; Interference	Move device closer (within 10m); Remove obstructions; Avoid strong electromagnetic fields

Problem	Possible Cause	Solution
TWS pairing fails	Speakers already paired to other devices; Not BSP-8 models	Disconnect speakers from other devices; Ensure both are BSP-8 models
Cannot play from USB/MicroSD	Incorrect file format; Corrupted media; Incorrect mode	Ensure files are compatible (e.g., MP3); Try different media; Press 'M' to select correct mode

9. SPECIFICATIONS

Feature	Specification
Model Name	CNE-CBTSP8R
Brand	CANYON
Speaker Type	Multimedia, Portable Bluetooth Speaker
Max Output Power	10 Watts
Wireless Technology	Bluetooth 5.2
Operating Range	Up to 10 meters
Connectivity Options	Bluetooth, AUX (3.5mm), USB, MicroSD (TF Card)
Power Source	Battery Powered (1 Lithium-polymer battery included)
Battery Capacity	1800 mAh (<i>Inferred from product description</i>)
Playtime	Up to 3 hours
Special Features	RGB Backlight, TWS Function
Compatible Devices	MP3 Player, Laptop, Smartphone, Tablet
Waterproof	No

10. WARRANTY AND SUPPORT

CANYON products are designed and manufactured to the highest quality standards. For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official CANYON website. Please retain your proof of purchase for warranty claims.