

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [HelloBaby](#) /

> [HelloBaby Monitor Mount Instruction Manual for HB65, HB66, HB6250, HB6550, HB6339 Baby Monitor Cameras](#)

## HelloBaby HelloBaby Monitor Mount

# HelloBaby Monitor Mount User Manual

Compatible Models: HB65, HB66, HB6250, HB6550, HB6339

## INTRODUCTION

---

This manual provides detailed instructions for the installation, operation, and maintenance of your HelloBaby Monitor Mount. This flexible mount is specifically designed for use with HelloBaby monitor cameras, including models HB65, HB66, HB6250, HB6550, and HB6339. It offers a versatile solution for positioning your baby monitor without the need for tools or causing damage to walls or furniture.



The HelloBaby Monitor Mount securely holds your baby monitor camera on a crib railing.

Please read this manual thoroughly before installation and retain it for future reference.

## SAFETY INFORMATION

---

- Ensure the mount is securely attached to a stable surface to prevent the camera from falling.
- Keep the monitor mount and camera power cords out of reach of children to avoid strangulation hazards.
- Do not place the mount or camera directly above the baby's sleeping area. Position it to the side, ensuring a clear view.
- Regularly check the mount's stability and the camera's attachment.
- This product is intended for indoor use only.

## PACKAGE CONTENTS

---

Verify that all components are present:

- 1 x HelloBaby Flexible Monitor Mount

Note: Baby monitor camera is sold separately.

## SETUP INSTRUCTIONS

---

Follow these steps to install your HelloBaby Monitor Mount:

1. **Attach the Camera:** Locate the 1/4-inch screw on the mount. Align the screw with the threaded hole on the bottom of your HelloBaby monitor camera. Twist the camera clockwise onto the screw until it is securely fastened. Ensure the camera is stable and does not wobble.

### The mount is compatible with multiple base types for HelloBaby cameras



1/4" screw



The mount is compatible with multiple HelloBaby camera base types via a standard 1/4-inch screw.

2. **Position the Mount:** Identify a suitable location such as a crib railing, shelf, or metal pole. The flexible gooseneck design allows it to wrap around various surfaces.
3. **Secure the Mount:** Bend and rotate the flexible gooseneck to wrap it firmly around the chosen surface. Ensure the mount is tight and stable, preventing any movement or slippage. The mount should be positioned so that the camera has a clear and unobstructed view of the desired area.

## Patented product(s), counterfeiting not allowed

All the products of the company have been authorized patent, one who counterfeits them will have to assume lawful responsibilities.



The flexible gooseneck allows for versatile positioning without drilling.

4. **Adjust Camera Angle:** Once the mount is secure, adjust the camera's angle to achieve the optimal viewing perspective of your infant.

### OPERATING INSTRUCTIONS

---

The HelloBaby Monitor Mount is designed for ease of use and flexibility:

- **Adjusting View:** To change the camera's position or angle, gently bend and reshape the flexible gooseneck. Always ensure the mount remains securely attached to its surface after adjustment.
- **Repositioning:** If you need to move the camera to a different location, carefully unwrap the mount from its current position and re-secure it at the new desired spot following the setup instructions.

### MAINTENANCE

---

- **Cleaning:** Wipe the mount with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect the mount for any signs of wear or damage. If any damage is observed, discontinue use and replace the mount.

### TROUBLESHOOTING

---

**Issue: Mount is not stable or slips.**

**Solution:** Ensure the gooseneck is wrapped tightly around the surface. Try repositioning it on a surface with better grip. Avoid overly smooth or narrow surfaces that may not provide adequate friction.

**Issue: Camera view is obstructed.**

**Solution:** Adjust the gooseneck to change the camera's position. Ensure no crib bumpers, blankets, or other objects are blocking the camera's line of sight.

**Issue: Camera feels loose on the mount.**

**Solution:** Tighten the camera onto the 1/4-inch screw by twisting it clockwise until it is firm. Do not overtighten.

---

**SPECIFICATIONS**

---

|                             |  |
|-----------------------------|--|
| <b>Brand</b>                | HelloBaby  |
| <b>Model Name</b>           | HelloBaby Monitor Mount  |
| <b>Material</b>             | Metal  |
| <b>Mounting Type</b>        | Twist Mount (No tools, no wall damage)                         |
| <b>Compatible Devices</b>   | HelloBaby Monitor Cameras (HB65, HB66, HB6250, HB6550, HB6339) |
| <b>Item Weight</b>          | 3.52 ounces  |
| <b>Product Dimensions</b>   | 3.94 x 3.94 x 3.94 inches (approximate, flexible)              |
| <b>Indoor/Outdoor Usage</b> | Indoor   |

---

**WARRANTY AND SUPPORT**

---

For warranty information and customer support, please refer to the official HelloBaby website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

You can visit the official HelloBaby store for more products and support:[HelloBaby Official Store](#)