

Manuals.plus /

- › GOURMETmaxx /
- › GOURMETmaxx Dual-Chamber Hot Air Fryer User Manual

GOURMETmaxx GOURMETmaxx Doppelkammer Air fryer

GOURMETmaxx Dual-Chamber Hot Air Fryer User Manual

Model: GOURMETmaxx Dual-Chamber Air Fryer (2x 3.5L Capacity)

1. INTRODUCTION

Thank you for choosing the GOURMETmaxx Dual-Chamber Hot Air Fryer. This appliance is designed to provide a healthier way to prepare your favorite fried foods, using hot air circulation instead of oil. With its dual chambers, advanced features, and intuitive touch display, you can enjoy versatile and efficient cooking. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The GOURMETmaxx Dual-Chamber Hot Air Fryer, showcasing its sleek design, digital control panel, and two independent cooking baskets.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.
- The appliance features Cool-Touch-Technology for safe handling of the baskets during operation.
- Equipped with non-slip feet for stable placement and an automatic shut-off function for enhanced safety.

SecureCook-Features für **MAXIMALE SICHERHEIT**



**Automatische
Abschaltfunktion**



Cool-Touch-Technologie

Mehrschichtige Isolierung &
hochtemperaturbeständige
Materialien



Rutschfeste Standfüße



Kein Wärmerückstoß

Image: Illustration highlighting the safety features of the air fryer, including automatic shut-off, cool-touch handles, and stable non-slip feet.

3. PRODUCT OVERVIEW AND FEATURES

The GOURMETmaxx Dual-Chamber Hot Air Fryer is designed for efficient and healthy cooking. It features two independent cooking zones, allowing you to prepare different dishes simultaneously or larger quantities of a single dish.

Key Components:

- **Main Unit:** Houses the heating elements, fan, and control panel.
- **Control Panel:** Intuitive touch display for setting time, temperature, and selecting programs.
- **Cooking Baskets (2x 3.5L):** Removable, non-stick coated baskets for food preparation.
- **Insert Grids:** Placed inside the baskets to allow air circulation and separate food from excess oil.

Advanced Features:

- **Dual-Chamber Technology:** Two independent 3.5-liter cooking zones for versatile cooking.
- **360° Rapid Air Technology:** Ensures optimal heat distribution for crispy exteriors and juicy interiors with up to 80% less fat.
- **10 Pre-set Programs:** Dedicated programs for various dishes like fries, poultry, bacon, baked goods, roasted vegetables, grilled items, fried snacks, and functions for warming and thawing.
- **Timer Function:** Set precise cooking times.
- **Touch Display:** Easy-to-use digital interface.
- **Keep-Warm Function:** Maintains food temperature after cooking.
- **High-Speed Warm-up:** Reduces pre-heating time.
- **Energy Efficient:** Up to 1.5 times faster cooking and significant energy savings compared to conventional ovens.

DOPPELTER GENUSS – MEHR FEATURES

9 + 10

9 Funktionen **10 Voreinstellungen**

2 x 3,5 Liter Kapazität

2400 Watt

40–230 °C

Timer-Funktion

**Easy Clean:
Anti-Haftbeschichtung**

LCD-Touchdisplay



Image: Overview of the air fryer's features, including its dual 3.5L capacity, 2400W power, temperature range, and easy-to-clean non-stick coating.

9 Funktionen in einem Gerät




 FRITTIEREN


 GRILLEN

 BRATEN

 GRATINIEREN

 BACKEN

 AUFTAUEN

 DÖRREN

 ERHITZEN

 WARMHALTEN

Image: Visual representation of the 9 versatile cooking functions available with the appliance.

4. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the air fryer and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels.
3. Check that all components are present: 1 x Fritteuse, 2 x Schublade (baskets), 2 x Einsatzgitter (insert grids).

Before First Use:

1. Wipe the exterior of the appliance with a damp cloth.
2. Wash the cooking baskets and insert grids thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely.
3. Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.

4. Plug the power cord into a grounded wall outlet.
5. For the first use, it is recommended to run the appliance empty for about 10-15 minutes at 200°C (390°F) to eliminate any manufacturing odors. A slight odor or smoke may be present, which is normal and will dissipate. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

General Operation:

1. Place the insert grids into the cooking baskets.
2. Place food into the cooking baskets. Do not overfill.
3. Slide the baskets back into the main unit until they click into place.
4. Press the Power button () to turn on the appliance. The display will light up.
5. Select your desired cooking mode or pre-set program using the touch controls.
6. Adjust temperature and time as needed using the +/- buttons.
7. Press the Start/Pause button to begin cooking.
8. During cooking, you can pull out the baskets to shake or flip food. The appliance will automatically pause and resume when the basket is reinserted.
9. Once cooking is complete, the appliance will beep and automatically shut off. Carefully remove the baskets and transfer food to a serving dish.



High-Speed-Aufwärmzeit

RAPID-AIR- TECHNOLOGIE

außen kross – innen zart



**360° STARKER
LUFTSTROM**



**GLEICHMÄSSIGE
WÄRMEVERTEILUNG**

220 °C

**VARIABLE
TEMPERATURKONTROLLE**

Image: Explanation of the Rapid-Air-Technology, detailing its 360° airflow, even heat distribution, and precise temperature control for optimal cooking results.

Using Pre-set Programs:

The GOURMETmaxx air fryer comes with 10 pre-installed programs for common dishes. Simply select the desired program from the touch display, and the appliance will automatically set the optimal temperature and time. You can manually adjust these settings if desired.



10 Lieblingsgerichte

mit nur einem Knopfdruck

 manueller Modus



Image: The control panel displaying the 10 pre-set programs, each with an intuitive icon for easy selection.

Dual-Chamber Functionality (Sync Cook & Smart Finish):

This air fryer offers advanced dual-zone cooking capabilities:

- **Sync Cook:** Use one program for both chambers to prepare double the quantity of the same dish simultaneously. This ensures both baskets finish cooking at the same time with identical settings.
- **Smart Finish:** Set different programs or settings for each chamber, and the appliance will automatically synchronize the cooking times so that both dishes finish at the exact same moment. This is ideal for preparing a complete meal with different components.

Mit **2** GARZONEN- TECHNOLOGIE



SMART FINISH:

Individuelles Programm pro Seite wählen – Speisen werden punktgenau gleichzeitig fertig

**SYNC-
BEENDEN**

links

rechts

**FRITTIEREN
205 °C
20 MINUTEN**

**GRILLEN
200 °C
8 MINUTEN**



MATCH COOK:

Ein Programm für beide Kammern – doppelte Menge in gleicher Zeit zubereiten

**SYNC-
KOCHEN**

links

rechts

**FRITTIEREN
205 °C
22 MINUTEN**

Image: Visual explanation of the "Smart Finish" and "Sync Cook" functions, demonstrating how to cook different foods to finish simultaneously or double quantities of the same food.

VOLLE FLEXIBILITÄT

für doppelte Köstlichkeiten

2-4
PERSONEN



Image: The dual chambers filled with different foods, illustrating the capacity suitable for 2-4 persons.

6. CLEANING AND MAINTENANCE

Regular cleaning of your GOURMETmaxx Dual-Chamber Hot Air Fryer will ensure its longevity and optimal performance.

Before Cleaning:

- Always unplug the appliance from the power outlet and allow it to cool down completely before cleaning.

Cleaning the Baskets and Insert Grids:

- The cooking baskets and insert grids have a non-stick coating. Wash them with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residue, soak the baskets in hot water with dish soap for about 10-15 minutes before cleaning.
- Do not use metal utensils or abrasive cleaning materials, as these can damage the non-stick coating.

- Rinse thoroughly and dry completely before reassembling or storing.

Cleaning the Main Unit:

- Wipe the exterior of the air fryer with a damp cloth.
- Never immerse the main unit in water or any other liquid.
- Clean the heating element inside the appliance with a cleaning brush to remove any food residue.

Storage:

- Ensure the appliance is clean and dry before storing.
- Store the air fryer in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your GOURMETmaxx Dual-Chamber Hot Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
The air fryer does not turn on.	The appliance is not plugged in. The power outlet is not working. The basket is not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance. Push the basket firmly until it clicks into place.
Food is not cooked evenly.	Too much food in the basket. Food not shaken or flipped during cooking.	Reduce the amount of food per batch. Shake or flip food halfway through cooking time.
White smoke comes from the appliance.	Fat residue from previous use. High-fat food being cooked.	Clean the basket and heating element thoroughly after each use. Drain excess fat from food before cooking.
Fresh fries are not crispy.	Not enough oil used. Incorrect potato type. Potatoes not properly dried.	Add a small amount of oil (e.g., 1/2 tablespoon) to the fries. Use a potato type suitable for frying. Ensure potatoes are thoroughly dried before adding oil and cooking.

8. SPECIFICATIONS

Feature	Detail
Brand	GOURMETmaxx
Model Number	GOURMETmaxx Doppelkammer Air fryer
Color	Stainless Steel / Black
Product Dimensions	38.8 x 36.3 x 31.3 cm
Capacity	7 Liters (2x 3.5 Liters)
Power	2400 Watt
Voltage	240 Volt (AC)
Material	Polypropylene, Stainless Steel, ABS, PA
Item Weight	8 Kilograms
Special Features	Timer, Touch-Display, 10 pre-installed programs, Keep-warm function
Included Components	1 x Air Fryer, 2 x Drawers (Baskets), 2 x Insert Grids

9. WARRANTY AND SUPPORT

Your GOURMETmaxx Dual-Chamber Hot Air Fryer comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, spare parts, or warranty claims, please contact the GOURMETmaxx customer service. Contact information can typically be found on the product packaging, the official GOURMETmaxx website, or the retailer's support page where you purchased the appliance.

Always retain your proof of purchase (receipt or invoice) as it will be required for any warranty claims.