

Jada 253074008

Jada RC Cinderella Princess Carriage with Figure - Model 253074008 Instruction Manual

1. INTRODUCTION

This instruction manual provides essential information for the safe and proper use of your Jada RC Cinderella Princess Carriage with Figure, Model 253074008. Please read this manual thoroughly before operating the product and retain it for future reference.

1.1 Safety Information

WARNING: Not suitable for children under 3 years (36 months) due to small parts. Choking hazard.

- Adult supervision is recommended during play.
- Keep away from water and moisture to prevent damage to electronic components.
- Do not operate near stairs, roads, or other hazardous areas.
- Ensure batteries are inserted with correct polarity.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries from the toy and remote control when not in use for extended periods.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Cinderella Princess Carriage
- 1 x Cinderella Figure
- 1 x Remote Control (2.4GHz)
- 1 x Instruction Manual (this document)



Image: The product packaging showing the Cinderella carriage, horse, figure, and remote control.

3. SETUP

3.1 Battery Installation (Carriage)

1. Locate the battery compartment on the underside of the carriage.
2. Using a screwdriver, open the battery compartment cover.
3. Insert the required batteries (refer to specifications for type and quantity), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

3.2 Battery Installation (Remote Control)

1. Locate the battery compartment on the back of the remote control.
2. Using a screwdriver, open the battery compartment cover.
3. Insert the required batteries (refer to specifications for type and quantity), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Image: The remote control for the Cinderella carriage, showing two pink control buttons and a Cinderella graphic.

3.3 Attaching the Cinderella Figure

Place the Cinderella figure securely inside the carriage seat.



Image: Side view of the Cinderella carriage with the horse attached, and the Cinderella figure seated inside the carriage.

4. OPERATING INSTRUCTIONS

The Jada RC Cinderella Princess Carriage operates using a 2.4GHz remote control, allowing for simple forward and backward turning movements.

4.1 Powering On

- Ensure batteries are correctly installed in both the carriage and the remote control.
- Locate the ON/OFF switch on the carriage and set it to the "ON" position.
- The remote control should automatically connect to the carriage.

4.2 Basic Controls

The remote control features two main buttons for movement:

- **Left Button:** Press and hold to move the carriage forward in a straight line.
- **Right Button:** Press and hold to move the carriage backward while turning.



Image: Front view of the Cinderella carriage and horse, ready for operation.

4.3 Powering Off

When finished playing, set the ON/OFF switch on the carriage to the "OFF" position to conserve battery life.

5. MAINTENANCE

5.1 Cleaning

- Wipe the carriage and remote control with a soft, dry cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Avoid getting water into the electronic components.

5.2 Storage

- Store the product in a cool, dry place away from direct sunlight.
- Remove batteries from both the carriage and remote control if storing for an extended period to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Carriage does not move.	Batteries are dead or incorrectly installed. Carriage ON/OFF switch is OFF. Remote control batteries are dead.	Check and replace batteries in carriage and remote. Ensure correct polarity. Turn the carriage ON/OFF switch to "ON". Replace remote control batteries.
Carriage moves erratically or range is poor.	Low batteries in carriage or remote. Interference from other 2.4GHz devices.	Replace batteries in both units. Move to an area with less electronic interference.

7. SPECIFICATIONS

Brand	Jada
Model Number	253074008
Product Type	Toy Car (RC Cinderella Princess Carriage)
Recommended Age	36 months to 96 months (3 to 8 years)
Power Source	Battery Powered (Batteries required)
Operating Mode	Remote Control (2.4GHz)
Material Type	Plastic
Item Dimensions (L x W x H)	27.9 x 12.7 x 18.8 cm (11 x 5 x 7.4 inches)

Color	Multicolor
Educational Objective	Fine motor skill development, hand-eye coordination, cause and effect understanding, imaginative play, storytelling.



Image: Side view of the Cinderella carriage and horse, with a ruler placed below to indicate its approximate size.

8. WARRANTY INFORMATION

This product is covered by the manufacturer's legal warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the documentation provided with your purchase or contact the manufacturer directly.

9. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact Jada customer support. Contact information can typically be found on the product packaging or the official Jada website.

Manufacturer: Jada

Model Number: 253074008