

manuals.plus /

- › [Magic Chef](#) /
- › [Magic Chef Compact Countertop Microwave Oven User Manual](#)

## Magic Chef MC110MB

# Magic Chef Compact Countertop Microwave Oven

MODEL: MC110MB

Brand: Magic Chef

## INTRODUCTION

Thank you for choosing the Magic Chef Compact Countertop Microwave Oven. This appliance is designed for convenient and efficient cooking and reheating in various settings, including homes and offices. With its compact size and versatile features, it offers a practical solution for your daily cooking needs.

This manual provides essential information for the safe and effective operation of your microwave oven. Please read it thoroughly before use and retain it for future reference.



Front view of the Magic Chef Compact Countertop Microwave Oven.

## SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This microwave oven generates microwave energy, and improper use can cause exposure to microwave energy. It is crucial to operate the oven only according to the instructions in this manual.

- Do not attempt to operate this oven with the door open or if the door is damaged.
- Do not place any object between the oven front face and the door.
- Do not allow soil or cleaner residue to accumulate on sealing surfaces.
- Only allow qualified service personnel to service this appliance.
- Ensure proper ventilation around the unit.

## SETUP AND INSTALLATION

---

### Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including the turntable, turntable support, and instruction manual. Inspect the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.

### Placement

Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate space for ventilation: at least 4 inches (10 cm) of clearance on the top, sides, and rear of the oven. Do not block air vents.



## Countertop Microwave Oven (1.1 Cu. Ft.)

## Dimensions

The microwave oven with its dimensions: 20.3 inches wide, 12 inches high, and 15.6 inches deep.

### Electrical Connection

Plug the microwave oven into a properly grounded 3-prong outlet. Do not use an extension cord or adapter. Ensure the voltage and frequency match the specifications on the rating label of the oven.

### Turntable Assembly

Place the turntable support ring in the center of the oven cavity. Position the glass turntable securely on top of the support ring, ensuring it sits properly in the center hub.



Interior view of the microwave oven, highlighting the glass turntable for even cooking.

## OPERATING INSTRUCTIONS

---

The Magic Chef microwave oven features an intuitive control panel with an LED display for easy operation.



Detailed view of the microwave oven's control panel with various cooking options.

## Setting the Clock

1. Press the **CLOCK** button once.
2. Use the number pad to enter the current time (e.g., 12:30).
3. Press **CLOCK** again to confirm.

## Time Cook

For manual cooking, enter the desired cooking time using the number pad, then press **START/+30SEC.** The maximum cooking time is 99 minutes and 99 seconds.

## Power Levels

This microwave offers 10 power levels for precise cooking control. After entering the cooking time, press the **POWER** button, then use the number pad (1-10) to select the desired power level (10 for 100%, 9 for 90%, etc.). Press **START/+30SEC** to begin.



The microwave features ten power levels, allowing for precise control over cooking intensity.

## One-Touch Cooking

Utilize the convenient one-touch settings for popular food items:

- **Popcorn:** For a standard bag of popcorn.
- **Baked Potato:** For baking potatoes.
- **Pizza:** For reheating pizza slices.
- **Beverage:** For heating drinks.
- **Dinner Plate:** For reheating a full dinner plate.
- **Frozen Vegetable:** For cooking frozen vegetables.

## Defrost Functions

The microwave offers two defrost options:

- **Weight Defrost:** Enter the weight of the food in ounces. The oven automatically calculates the defrosting time.
- **Time Defrost:** Manually enter the desired defrosting time.

## Child Lock

To activate the child lock, press and hold the **STOP/CANCEL** button for 3 seconds. The display will show "LOCK". To deactivate, press and hold **STOP/CANCEL** again for 3 seconds.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.



## Interior Cleaning

Wipe the interior cavity with a damp cloth after each use to prevent food splatter from drying. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue, then wipe clean.

## Exterior Cleaning

Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or scouring pads that could scratch the finish.

## Turntable Cleaning

The glass turntable and turntable support can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

## TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Ensure door is securely closed; Check power cord connection; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level; Door not closed properly.	Adjust cooking time/power; Ensure door is securely closed.
Turntable not rotating	Turntable not properly seated; Debris under turntable.	Re-seat turntable; Clean under turntable and support ring.
Display shows error message	Internal malfunction.	Unplug the oven for 5 minutes, then plug back in. If error persists, contact customer support.

If the problem persists after trying these solutions, please contact Magic Chef customer support.

## SPECIFICATIONS

Feature	Specification
Brand	Magic Chef
Model Number	MC110MB
Capacity	1.1 Cubic Feet
Wattage	1000 Watts
Product Dimensions (D x W x H)	15.6 x 20.3 x 12 inches
Installation Type	Countertop
Color	Black

Feature	Specification
Material Type	Glass (Turntable), Steel (Inner)
Special Features	One-Touch Cooking, Child Lock, Timer, Reheat, Defrost, 10 Power Levels

## WARRANTY AND SUPPORT

Magic Chef is committed to providing reliable products. This microwave oven is backed by Magic Chef's quality assurance. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official Magic Chef website.

For technical assistance, troubleshooting not covered in this manual, or to inquire about parts and service, please contact Magic Chef Customer Support. Contact information can typically be found on the product packaging, the official website, or your purchase receipt.