

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Zenith](#) /

› [Zenith Versa Grill Non-Stick Pizza Maker Instruction Manual Model 77373](#)

Zenith 77373

Zenith Versa Grill Non-Stick Pizza Maker Instruction Manual

Model: 77373

INTRODUCTION

Thank you for purchasing the Zenith Versa Grill Non-Stick Pizza Maker. This appliance is designed for versatile indoor cooking, allowing you to prepare a variety of dishes including pizzas, calzones, quesadillas, omelets, and more. Please read this manual thoroughly before first use to ensure safe and efficient operation.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Zenith Versa Grill is a compact and versatile electric cooking appliance featuring non-stick cooking surfaces. It is designed to function as a pizza maker, calzone maker, and an indoor grill, capable of preparing a wide range of dishes.



Image: The Zenith Versa Grill in its open position, revealing the circular non-stick upper and lower cooking plates. The red exterior and handle are visible.

Key Features:

- **Non-Stick Cooking Surface:** Ensures easy food release and simplified cleaning.
- **Versatile Cooking:** Ideal for pizzas, calzones, quesadillas, omelets, pancakes, and more.
- **Compact Design:** Suitable for countertop use and small spaces.
- **Indicator Light:** Signals when the appliance is powered on and ready for use.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the Zenith Versa Grill from its packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly. Do not immerse the appliance in water.

3. **Placement:** Place the appliance on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a standard 220V electrical outlet. The indicator light will illuminate, signaling the unit is heating up.
5. **Preheating:** Allow the appliance to preheat for approximately 5-7 minutes, or until the indicator light changes (if applicable) or the cooking surfaces are hot. For first use, a slight odor or smoke may occur; this is normal and will dissipate.



Image: The Zenith Versa Grill in a closed position, viewed from the top, with its power cord visible extending from the back. The red exterior and Zenith logo are prominent.

OPERATING INSTRUCTIONS

General Operation:

1. Ensure the appliance is preheated as described in the "Setup" section.

2. Carefully open the lid using the handle.
3. Place your food item onto the lower non-stick cooking plate. For best results, lightly grease the plates with cooking spray or a small amount of oil, especially for items like pancakes or omelets.
4. Close the lid. The appliance will begin cooking.
5. Cooking times will vary depending on the food item and desired doneness. Monitor food closely to prevent overcooking.
6. Once cooking is complete, carefully open the lid and remove the food using a heat-resistant, non-metallic utensil to avoid damaging the non-stick coating.
7. Unplug the appliance from the wall outlet when finished cooking.

Specific Applications:

- **Pizza:** Place a 12-inch pizza (fresh or frozen) directly onto the lower cooking plate. Close the lid. Cooking time for fresh pizza typically ranges from 8-15 minutes, and for frozen pizza, it may take longer. Adjust based on crust preference.
- **Calzones/Quesadillas:** Place your filled dough or tortilla onto the lower plate. Close the lid and cook until golden brown and heated through.
- **Omelets/Pancakes:** Pour batter onto the lightly greased lower plate. Close the lid and cook until set and browned.
- **Grilling:** The appliance can be used to grill sandwiches or other small items. Ensure food is not too thick to allow the lid to close properly.



Image: The Zenith Versa Grill open, showcasing a freshly cooked pizza with various toppings on the lower non-stick plate. The red exterior is visible.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Zenith Versa Grill. Always ensure the appliance is unplugged and completely cooled before cleaning.

1. **Cool Down:** Allow the appliance to cool completely after each use.
2. **Cleaning Cooking Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn food residue, a small amount of mild dish soap can be used. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
3. **Exterior Cleaning:** Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive materials.
4. **Do Not Immerse:** Never immerse the appliance, power cord, or plug in water or any other liquid.

5. **Storage:** Once clean and dry, store the appliance in a cool, dry place. The compact design allows for upright storage to save space.



Image: The Zenith Versa Grill shown standing upright with its lid open, demonstrating its compact storage capability. The non-stick plates are visible.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction; internal fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food sticks to the cooking plates.	Plates not properly greased; food residue buildup; damaged non-stick coating.	Lightly grease the plates before each use. Ensure plates are clean. Avoid using metal utensils that can scratch the coating.

Problem	Possible Cause	Solution
Smoke or unusual odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. The odor should dissipate after a few minutes. If it persists or is excessive, unplug and contact support.
Food is not cooking evenly.	Uneven food placement; insufficient preheating.	Ensure food is centered on the cooking plate. Allow the appliance to fully preheat before adding food.

SPECIFICATIONS

Brand: Zenith

Model Number: 77373

Special Feature: Non-Stick Coating

Color: Red

Material: Metal with Non-Stick Coating

Product Dimensions: 14.76"D x 12.59"W x 3.93"H

Wattage: 1440 watts

Item Weight: 6.4 Pounds (approx. 2.9 kg)

Voltage: 220 Volts

Number of Settings: 6

UPC: 810173034746

WARRANTY AND SUPPORT

This Zenith Versa Grill comes with **alimited warranty**. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage duration and limitations.

For technical support, troubleshooting assistance, or warranty claims, please contact Zenith Customer Service. Contact information can typically be found on the product packaging or the official Zenith website.

Please retain your proof of purchase for warranty purposes.