

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Dolphin](#) /
- › [Dolphin DR-60 30W Waterproof Portable Bluetooth Speaker User Manual](#)

Dolphin DR-60

Dolphin DR-60 30W Waterproof Portable Bluetooth Speaker

User Manual

Model: DR-60 | Brand: Dolphin

INTRODUCTION

The Dolphin DR-60 is a 30W Waterproof Portable Bluetooth Speaker designed for robust audio performance in various environments. Its durable construction and versatile connectivity options make it ideal for outdoor adventures, home use, and more. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your DR-60 speaker.



Image: The Dolphin DR-60 speaker, demonstrating its waterproof capability with water splashing around its black and orange exterior.

PRODUCT FEATURES

- **Portable and Versatile:** Features a flexible elastic carry handle for easy transport, making it suitable for hiking, biking, or relaxing by the pool.
- **Enhanced Connectivity Options:** Supports multiple connection methods including Bluetooth, USB, TF (MicroSD) card, FM radio, and AUX input, allowing for diverse audio sources.

- **Immersive Audio Experience:** Equipped with dual 3-inch full-range drivers, delivering 30 watts of power for crisp highs, rich mids, and deep, powerful bass.
- **Long-Lasting Battery Life:** A built-in 4500mAh 3.7V lithium-ion battery provides extended hours of uninterrupted playtime.
- **Durable and Waterproof:** Boasts an IPX6 waterproof rating, designed to withstand splashes, rain, and even temporary submersion, making it perfect for outdoor use.



Image: The Dolphin DR-60 speaker positioned outdoors by a stream, emphasizing its 30W power and waterproof portability.

WHAT'S IN THE BOX

- Dolphin DR-60 Portable Bluetooth Speaker
- USB-C Charge Cable
- Auxiliary Cable
- User Manual (this document)

SETUP

1. Charging the Speaker

Before first use, fully charge the Dolphin DR-60 speaker. Connect the included USB-C charge cable to the speaker's charging port and the other end to a compatible USB power adapter (not included) or a computer USB port. The LED indicator will show charging status and turn off or change color when fully charged.



Image: The Dolphin DR-60 speaker illustrating its long-lasting battery life, with a visual representation of charging.

2. Powering On/Off

- To power on, press and hold the **Power button** until the LED indicator lights up and you hear an audible prompt.
- To power off, press and hold the **Power button** again until the LED indicator turns off and you hear an audible prompt.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the LED indicator will typically flash blue rapidly).
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.

3. Select "Dolphin DR-60" from the list of found devices.
4. Once connected, the LED indicator will turn solid blue, and you will hear a confirmation sound.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

OPERATING INSTRUCTIONS

Button Functions

Button/Port	Function
Power Button	Press and hold to Power On/Off. Short press to change LED light modes.
Play/Pause Button	Press to Play/Pause music. Press and hold to activate voice assistant (if supported by device).
Volume Up (+)	Short press to increase volume. Long press for next track.
Volume Down (-)	Short press to decrease volume. Long press for previous track.
Mode Button (M)	Press to switch between Bluetooth, TF Card, USB, FM Radio, and AUX modes.
USB Port	For playing music from a USB drive or charging external devices (power bank function).
TF Card Slot	For playing music from a MicroSD (TF) card.
AUX Input	For connecting devices via a 3.5mm audio cable.
USB-C Charging Port	For charging the speaker.

DOLPHIN

Connectivity



BLUETOOTH

Wireless streaming from your devices.



TF CARD

Insert a TF card for stored tunes.



FM RADIO

Tune in to your favorite stations



USB

Play music directly from a USB drive.

Image: Rear view of the Dolphin DR-60 speaker, highlighting its various connectivity options including USB, TF card, and charging port.

Playing Music

- **Bluetooth Mode:** After successful pairing, music played on your connected device will stream through the speaker.
- **TF Card/USB Mode:** Insert a TF card or USB drive with MP3 audio files into the respective slot. The speaker will automatically switch to the correct mode and begin playback.
- **FM Radio Mode:** Press the Mode button to switch to FM radio. Use the Volume Up/Down buttons (long press) to scan for stations.
- **AUX Mode:** Connect your audio device to the speaker's AUX input using a 3.5mm audio cable. The speaker will automatically switch to AUX mode.

LED Light Modes

The Dolphin DR-60 features dynamic LED lights. Short press the Power button to cycle through different light modes or to turn the lights off.



Image: A close-up of the Dolphin DR-60 speaker being held, highlighting its dual 3-inch full-range drivers and vibrant LED lighting.

Dual
3"
*Full-range drivers deliver
impressive audio quality.*

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to wipe the speaker's surface. Do not use abrasive cleaners or solvents.
- **Waterproof Care:** Ensure the rubber flap covering the ports is securely closed before exposing the speaker to water. After exposure to water, wipe the speaker dry before opening the port cover or charging.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery every 3-6 months to maintain its lifespan.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the USB-C cable and try again.

Problem	Solution
Cannot pair with Bluetooth device.	<p>Ensure the speaker is in pairing mode (flashing blue LED).</p> <p>Make sure Bluetooth is enabled on your device.</p> <p>Move the speaker closer to your device (within 10 meters).</p> <p>Forget "Dolphin DR-60" from your device's Bluetooth list and try pairing again.</p> <p>Restart both the speaker and your device.</p>
No sound or distorted sound.	<p>Adjust the volume on both the speaker and your connected device.</p> <p>Ensure the speaker is in the correct mode (Bluetooth, AUX, TF, USB, FM).</p> <p>Check audio cables for secure connection if using AUX.</p> <p>If using TF/USB, ensure audio files are in a compatible format (e.g., MP3).</p> <p>Move away from sources of interference.</p>
FM radio reception is poor.	Adjust the speaker's position or location to improve signal reception.

SPECIFICATIONS

Feature	Detail
Model Name	DR-60
Speaker Type	Waterproof Bluetooth Speaker
Speaker Maximum Output Power	30 Watts
Woofer Diameter	3 Inches (Dual)
Water Resistance Level	IPX6 Waterproof
Battery Capacity	4500mAh 3.7V Lithium-Ion
Connectivity Technology	Bluetooth, USB, TF Card, AUX, FM Radio
Bluetooth Range	10 Meters
Product Dimensions	4.3"D x 9.1"W x 4"H
Item Weight	1.5 Pounds
Power Source	Battery Powered
Included Components	USB-C Charge Cable



Image: The Dolphin DR-60 speaker with its physical dimensions clearly marked.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the features and capabilities of the Dolphin DR-60 30W Waterproof Portable Bluetooth Speaker, including its sound quality, connectivity, and durability.

WARRANTY AND SUPPORT

The Dolphin DR-60 speaker comes with a **Limited Warranty** provided by General Sound Co. For specific warranty terms, conditions, and support inquiries, please refer to the warranty card included with your product or contact the manufacturer directly. Manufacturer: General Sound Co.

For further assistance, please visit the official Dolphin website or contact their customer support.

© 2024 Dolphin. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.