

[Manuals.plus](#) /

› [Hotpoint](#) /

› Hotpoint H2I HD526 UK Built-In 14 Place Settings Dishwasher User Manual

Hotpoint H2I HD526 UK

Hotpoint H2I HD526 UK Built-In Dishwasher User Manual

Model: H2I HD526 UK

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Hotpoint H2I HD526 UK Built-In Dishwasher. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before installation and operation, and keep it for future reference.

Important Safety Instructions:

- Always disconnect the appliance from the power supply before cleaning or maintenance.
- This appliance is intended for household use only.
- Do not allow children to play with the appliance or operate the controls.
- Ensure the electrical installation is compliant with local safety standards.
- Do not open the door during operation, especially during the hot wash cycle.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.

2. SETUP AND INSTALLATION

The Hotpoint H2I HD526 UK is a fully integrated dishwasher designed to blend seamlessly into your kitchen cabinetry. Professional installation is recommended.

2.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any transport damage. If damage is found, do not install or operate the appliance, and contact your retailer immediately.

2.2 Placement

The dishwasher must be installed in a dry, well-ventilated area. Ensure there is sufficient space for the door to open fully and for proper ventilation around the appliance once integrated.



Figure 2.1: Hotpoint H2I HD526 UK Built-In Dishwasher integrated into kitchen cabinetry with the door slightly ajar, revealing the interior racks. This image shows the dishwasher seamlessly integrated into a modern kitchen. The dishwasher door is partially open, providing a view of the stainless steel interior and the upper and lower racks, ready for loading dishes. The control panel is visible along the top edge of the door.

2.3 Water and Electrical Connections

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa.
- Ensure the drain hose is properly connected to a suitable drain, avoiding kinks or blockages.
- Connect the appliance to a grounded electrical outlet. The voltage must match the rating plate on the appliance.

2.4 Initial Use

Before the first wash cycle, ensure the salt and rinse aid dispensers are filled. Run an empty cycle with detergent to clean the interior.

3. OPERATING THE DISHWASHER

3.1 Control Panel Overview

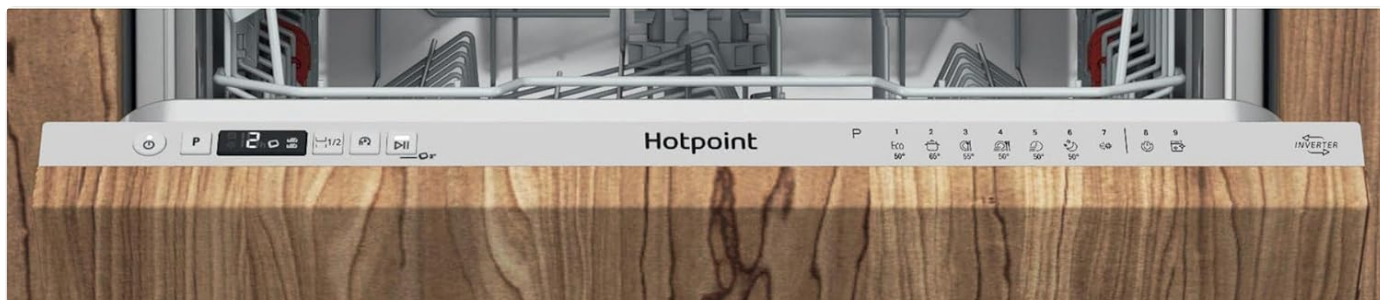


Figure 3.1: Close-up of the Hotpoint H2I HD526 UK Dishwasher control panel with buttons and program indicators. This image provides a close-up of the intuitive control panel located on the top edge of the dishwasher door. It features clearly labeled buttons for power, program selection (P and numbers 1-9), delay start, and indicators for rinse aid and salt levels. The Hotpoint logo is prominently displayed. The control panel is located on the top edge of the dishwasher door. It features:

- **Power Button:** To switch the appliance on/off.
- **Program Selector (P and 1-9):** To choose the desired wash program.
- **Delay Start Button:** To postpone the start of a cycle.
- **Indicators:** For salt level, rinse aid level, and program status.

3.2 Loading the Dishwasher

Proper loading ensures optimal cleaning results and prevents damage to dishes. Place larger items in the lower basket and delicate items in the upper basket. Ensure spray arms can rotate freely.



Figure 3.2: Interior view of the Hotpoint H2I HD526 UK Dishwasher showing the upper and lower racks, and cutlery basket. A detailed view of the dishwasher's interior, highlighting the adjustable upper rack, the spacious lower rack, and the removable cutlery basket. The spray arms are also visible, designed to ensure thorough cleaning.

3.3 Adding Detergent and Rinse Aid

- Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser lid securely.
- Fill the rinse aid dispenser when the indicator light illuminates. Rinse aid helps with drying and prevents spots.
- If using all-in-one tablets, you may not need separate salt or rinse aid, depending on your water hardness.

3.4 Program Selection and Start

Refer to the program chart (usually inside the door or in the full manual) for detailed descriptions of each program (e.g., Eco, Intensive, Daily, Quick Wash). To start a cycle:

1. Load the dishwasher and add detergent.
2. Press the Power button to turn on the appliance.
3. Use the Program Selector (P and numbers) to choose your desired wash program.
4. Close the dishwasher door firmly. The cycle will begin automatically.

3.5 Interrupting a Cycle

To interrupt a cycle, carefully open the door. The program will pause. To resume, close the door. If the cycle needs to be cancelled, consult the full user manual for specific instructions, as this may vary by program.

4. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your dishwasher.

4.1 Cleaning the Filters

The filter system prevents food particles from recirculating and clogging the pump. Clean the filters regularly (e.g., weekly or bi-weekly) by removing them, rinsing under running water, and scrubbing with a brush if necessary. Reassemble correctly.

4.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages (e.g., from limescale or food debris). If blocked, remove the spray arms and clear the holes with a thin object like a toothpick.

4.3 Exterior and Interior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the interior periodically with a dishwasher cleaner or a mixture of vinegar and baking soda to remove grease and odors.

5. TROUBLESHOOTING

Before contacting service, try the following solutions for common issues:

Problem	Possible Cause	Solution
Dishwasher does not start	No power; Door not closed properly; Program not selected.	Check power supply; Ensure door is latched; Select a program.
Poor cleaning results	Improper loading; Clogged spray arms/filters; Insufficient detergent.	Reload dishes correctly; Clean filters/spray arms; Add more detergent.
Water not draining	Clogged drain hose/filter; Drain pump issue.	Clear drain hose/filter; Consult a technician if pump is faulty.
Excessive noise	Dishes hitting spray arms; Foreign object in pump.	Rearrange dishes; Check for foreign objects.

For more complex issues or error codes displayed on the control panel, please refer to the comprehensive troubleshooting guide in the full user manual or contact customer support.

6. SPECIFICATIONS

Key technical specifications for the Hotpoint H2I HD526 UK Dishwasher:

Feature	Specification
Model	H2I HD526 UK
Capacity	14 Place Settings
Dimensions (H x W x D)	82 cm x 59.8 cm x 55.5 cm
Noise Level	46 dB
Installation Type	Built-In
Energy Rating	E (New Energy Label)
Control Console	Push Button
Weight	37.5 kg

7. WARRANTY AND SUPPORT

Your Hotpoint H2I HD526 UK Dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance or visit the official Hotpoint website for detailed terms and conditions.

Customer Support:

For technical assistance, spare parts, or to schedule a service appointment, please contact Hotpoint customer service. Have your model number (H2I HD526 UK) and serial number ready when you call. You can typically find contact information on the Hotpoint official website or in the documentation provided with your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question