

[Manuals.plus](#) /

› [Focket](#) /

› Compact Spin Dryer User Manual

Focket Focketg3mx09kz8b-12

Compact Spin Dryer User Manual

Model: Focketg3mx09kz8b-12

INTRODUCTION

Thank you for purchasing the Focket Compact Spin Dryer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

This non-electric manual clothes dryer is designed for quick water removal from various fabrics, making it ideal for small living spaces, camping, RVs, and dorms. Its high spin speed and energy-efficient design offer a convenient solution for drying clothes without electricity.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Ensure the dryer is placed on a stable, flat surface before operation. The four suction cup feet at the bottom provide stability.
- Do not overload the spin basket. Refer to the "Operating Instructions" for recommended load sizes.
- Keep hands and loose clothing away from the spinning basket during operation.
- This product is designed for drying water from clothes only. Do not attempt to dry other items or use it for purposes other than its intended use.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support if issues arise.
- After use, ensure all water is drained from the unit.

PRODUCT OVERVIEW


Familiarize yourself with the components of your Compact Spin Dryer:



Main Unit: The primary body of the spin dryer, housing the spin mechanism and water collection area.




Transparent Top Cover: Allows visibility into the spin basket during operation and keeps dust out.**Portable Handle:** Integrated handle for easy transport of the unit.

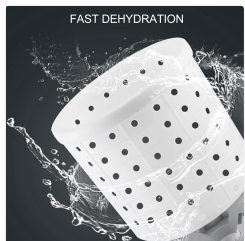

Detachable Spin Basket: The perforated inner basket where clothes are placed for spinning. It is removable for easy cleaning and can also serve as a storage container or water bucket.



Pull Handles & Drawstring: Ergonomically designed handles connected to a high-quality nylon drawstring, used to manually operate the spin mechanism.

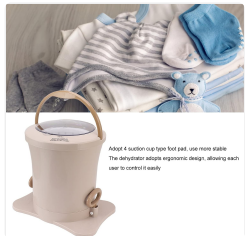

Suction Cup Feet: Four suction cups located at the base of the dryer to ensure stability during use.



Drain Pipe: A 150cm telescopic pipe for convenient water drainage after spinning.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the dryer on a flat, stable, and dry surface. Ensure the suction cup feet are firmly attached to the surface for maximum stability.
3. **Insert Basket:** Place the detachable spin basket inside the main unit.
4. **Attach Drain Pipe:** Connect the telescopic drain pipe to the designated outlet on the dryer. Ensure it is securely attached to prevent leaks. Position the other end of the drain pipe into a sink or bucket for water collection.

OPERATING INSTRUCTIONS

Follow these steps to effectively dry your clothes:

1. **Load Clothes:** Open the transparent top cover. Place wet, washed clothes into the detachable spin basket. Do not overload the basket; ensure clothes are evenly distributed to maintain balance during spinning. The dryer can accommodate small clothes, underwear, socks, and towels.
2. **Close Cover:** Securely close the transparent top cover.
3. **Prepare for Spin:** Pull out the two pull handles from their resting positions at the base of the unit.
4. **Spin Operation:**




Hold one handle in each hand. Pull the handles upwards and then push them downwards in a continuous, rhythmic motion. This action will cause the inner basket to spin rapidly. The dryer can reach speeds of up to 2500 RPM.

Spin Duration: The time required for drying depends on the material and initial wetness.

- For small fleece blankets: Approximately 10 seconds.
- For bath towels and similar materials: Approximately 30-45 seconds.

5. **Drain Water:** As the clothes spin, water will be extracted and collected at the bottom of the unit. Ensure the drain pipe is positioned to direct this water away.
6. **Remove Clothes:** Once spinning is complete and the basket has stopped, open the top cover and carefully remove the clothes.

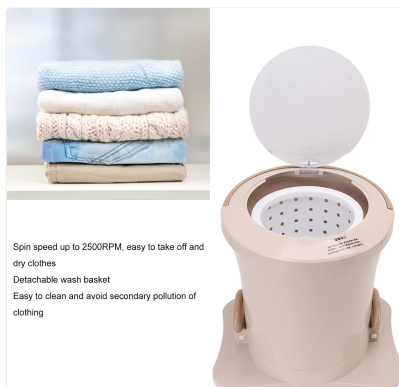

The high spin speed efficiently removes excess water, significantly reducing drying time compared to air drying. The

detachable wash basket helps prevent secondary contamination of clothes.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your spin dryer:

- **Cleaning the Basket:** The detachable spin basket can be easily removed for cleaning. Rinse it with water and mild soap if necessary. Ensure it is completely dry before reinserting.
- **Cleaning the Main Unit:** Wipe the interior and exterior of the main unit with a damp cloth. Do not use abrasive cleaners or solvents.
- **Drain Pipe:** Periodically check the drain pipe for any blockages and rinse it thoroughly.
- **Storage:** When not in use, store the dryer in a cool, dry place. Ensure all components are dry before storage to prevent mold or mildew.

TROUBLESHOOTING

If you encounter any issues with your spin dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer shakes excessively during operation.	Uneven distribution of clothes in the basket. Dryer not on a stable, flat surface. Suction cup feet not properly engaged.	Redistribute clothes evenly in the basket. Ensure the dryer is on a firm, level surface. Press down on the dryer to ensure suction cups adhere to the surface.
Clothes are still very wet after spinning.	Insufficient spinning time. Overloaded basket. Very thick or absorbent fabric.	Increase spinning duration (e.g., 45-60 seconds). Reduce the amount of clothes in the basket. Spin in smaller batches or for longer periods.
Water does not drain properly.	Drain pipe is kinked or blocked. Drain pipe not positioned correctly.	Check the drain pipe for kinks or debris and clear any blockages. Ensure the drain pipe is angled downwards into a suitable receptacle.
Pull handles are stiff or difficult to operate.	Internal mechanism might be dry or have minor friction.	Ensure the unit is clean and free of debris. If the issue persists, contact customer support. Do not apply lubricants unless specified by the manufacturer.

If the problem persists after trying these solutions, please contact Focket customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Focket

Feature	Detail
Model Number	Focketg3mx09kz8b-12
Spin Speed	Up to 2500 RPM
Spin Efficiency	40-50% water removal rate
Operation Type	Non-electric, Manual
Capacity	Suitable for small clothes, underwear, socks, towels, etc.
Material	Acrylonitrile Butadiene Styrene (ABS), Poly
Color	Beige (Apricot)
Item Weight	8.82 pounds
Drain Pipe Length	150 cm (telescopic)
Stability	Four suction cup feet

WARRANTY AND SUPPORT

Focket is confident in the quality of its portable clothes dryer. For any quality-related issues, the manufacturer provides a refund or replacement. Please refer to your purchase documentation for specific warranty terms and conditions. For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Focket customer service through the retailer where the product was purchased or visit the official Focket store online.

Online Store: [Focket Store on Amazon](#)

© 2023 Focket. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question