

[Manuals.plus](#) /

› [KRIB BLING](#) /

› KRIB BLING 17.7 lbs Full Automatic Washing Machine KB03-GREY6-3 User Manual

KRIB BLING KB03-GREY6-3

KRIB BLING 17.7 lbs Full Automatic Washing Machine (Model KB03-GREY6-3) User Manual

INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your KRIB BLING 17.7 lbs Full Automatic Washing Machine, Model KB03-GREY6-3. Please read these instructions carefully before use and retain them for future reference. This appliance is designed for convenient laundry care in compact living spaces such as dorms, apartments, and RVs.



Image: The KRIB BLING 17.7 lbs Full Automatic Washing Machine, showcasing its compact design suitable for various living environments.

SETUP AND INSTALLATION

Before operating your washing machine, ensure proper setup and installation. This includes connecting water hoses, positioning the drain hose, and leveling the appliance.

Unpacking and Components

Carefully remove the washing machine from its packaging. Verify that all included components are present:

- Cover
- Drain Hose
- Fill Hose
- Venting Duct (if applicable)

Your browser does not support the video tag.

Video: This video demonstrates the setup and connection of the drain pump and other components for the KRIB BLING Full-Automatic Washing Machine.

Placement and Leveling

Place the washing machine on a firm, level surface. Use the adjustable leveling legs to ensure the machine is stable and balanced. Proper leveling minimizes vibration and noise during operation.



Image: Product dimensions (19.7"D x 20.9"W x 34.7"H) for proper placement consideration.

Water and Drain Connections

Connect the fill hose to a cold water tap and securely attach it to the water inlet on the back of the machine. Position the drain hose to allow for proper water drainage. Ensure the drain hose is not elevated more than 10cm above the machine's

base to prevent drainage issues. Consider using a sink or bathtub for drainage if a dedicated floor drain is unavailable.

OPERATING INSTRUCTIONS

Your KRIB BLING washing machine features a user-friendly control panel with various programs and settings to suit your laundry needs.

Control Panel Overview

The LED display and push-button controls allow for easy selection of wash programs and water levels.



Image: Detailed view of the smart control panel with LED display, showing program and water level selections.

Wash Programs and Water Levels

The machine offers 10 wash programs and 8 water levels. Select the appropriate program and water level based on the type and amount of laundry.

- **10 Wash Programs:** Standard, Soft, Quick Wash, Heavy Duty, Soak Wash, Wash Only, Spin Only, Tub Clean, Tub Air Dry, Water Recycle.
- **8 Water Levels:** Choose from High (7/8), Middle (5/6), Low (3/4), Minimum (1/2) to optimize water usage.

Full-Automatic & Intelligent Washing Machine

17.7lbs

Wash Capacity

8

Programs

10

Water Levels



Image: Visual representation of the washing machine's capacity, programs, water levels, and the stages of a wash cycle (Wash, Rinse, Spin, Air Dry).

Loading Laundry and Detergent

Load clothes into the stainless steel inner tub. Add appropriate detergent according to the load size and water hardness. Close the lid before starting a cycle.

Your browser does not support the video tag.

Video: This video provides a step-by-step guide on operating the KRIB BLING Full-Automatic Washing Machine, including adding detergent and selecting programs.

Delay Washing Function

Utilize the 24-hour delay washing function to schedule your laundry cycles at a convenient time. This feature allows you to set the machine to start automatically after a specified delay.

24 Hours Delay Washing Function

Make Your Daily Washing More Intelligent!



Image: The washing machine with its lid open, highlighting the control panel and the 24-hour delay washing function.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Auto Tub Cleaning Function

The machine is equipped with an Auto Tub Cleaning function to help maintain a clean and hygienic washing environment. Use this program periodically to clean the inner tub.

Auto Tub Cleaning Function

6kg

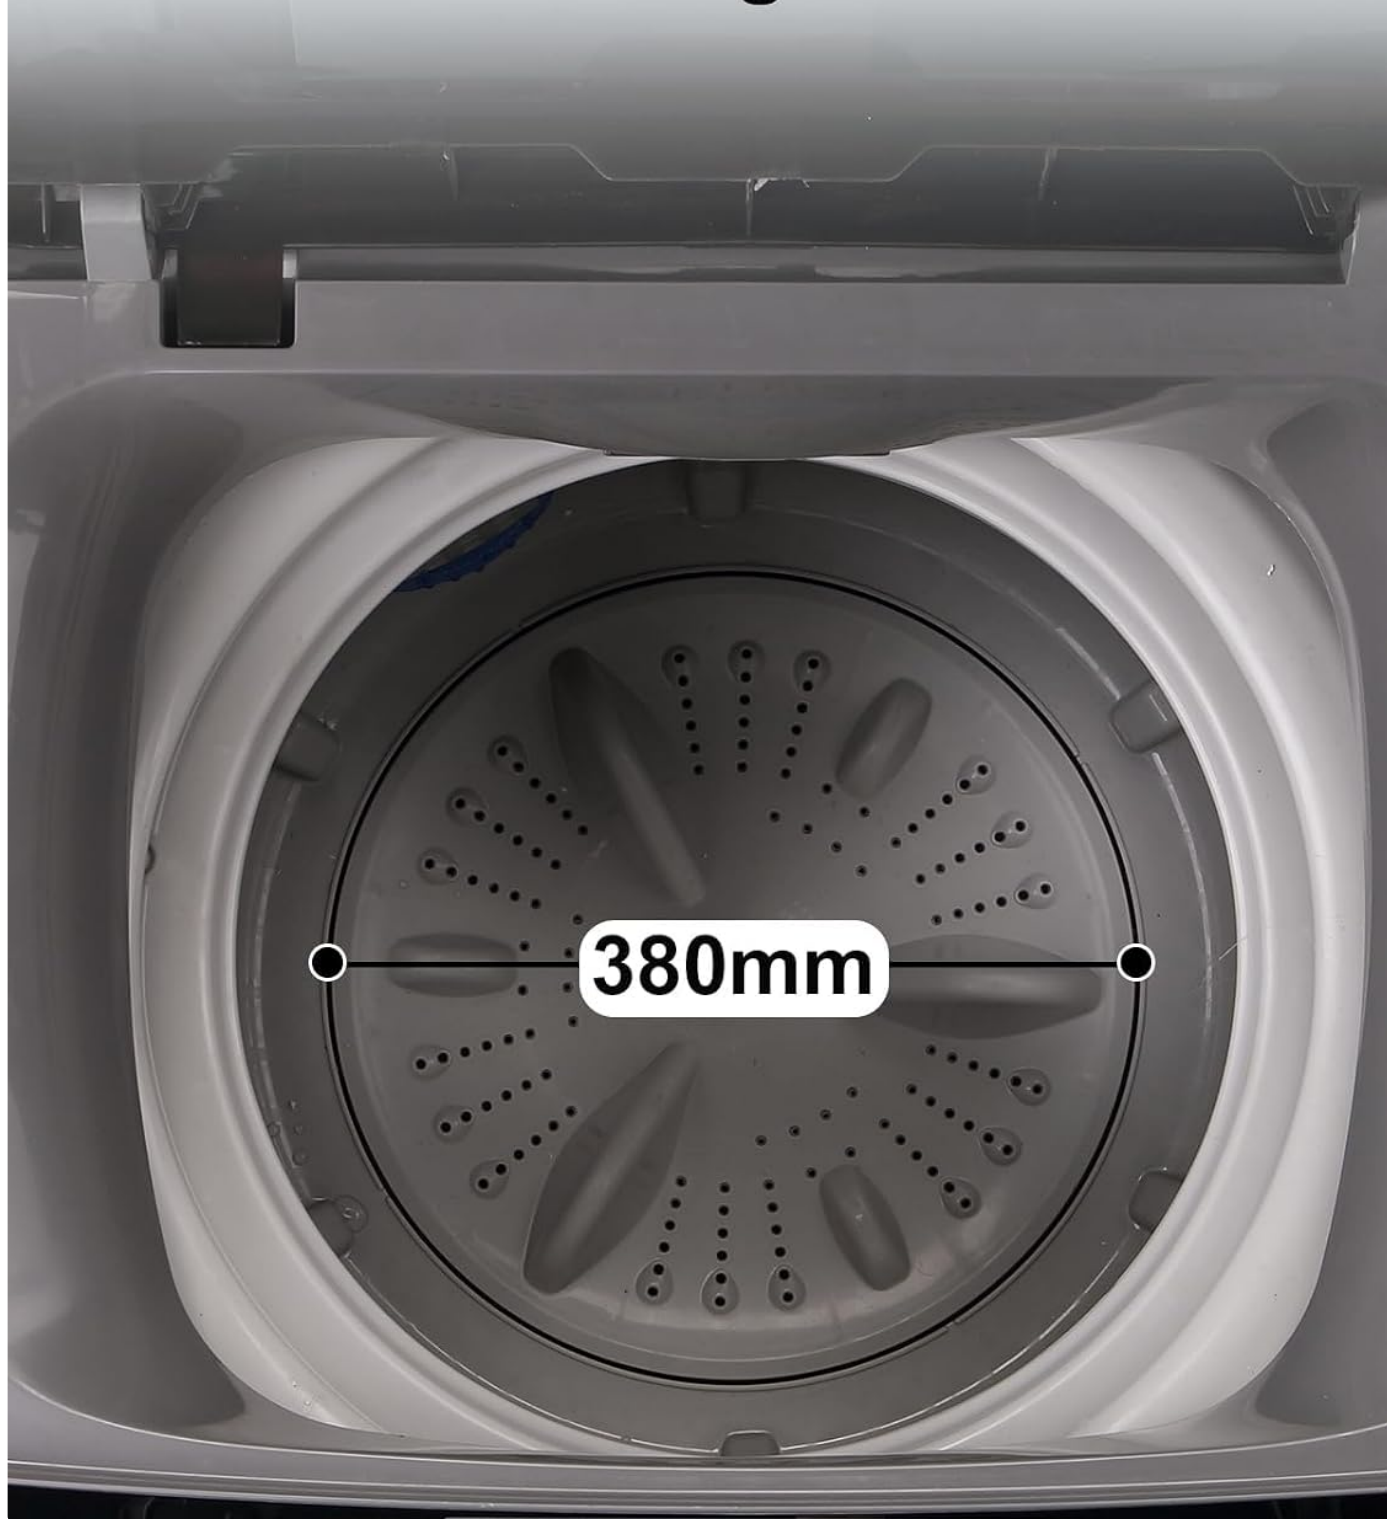


Image: The stainless steel inner tub, illustrating the auto tub cleaning feature.

General Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Clean the detergent dispenser regularly to prevent residue buildup. Periodically check and clean the lint filter if your model includes one.

TROUBLESHOOTING

Refer to the following common issues and solutions before contacting customer support.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Program not selected.	Ensure power is connected; Close the lid securely; Select a wash program and press Start.
Water does not fill or fills slowly	Water tap closed; Water inlet hose kinked or blocked; Water pressure too low.	Open the water tap; Straighten the hose; Check household water pressure.
Water does not drain	Drain hose kinked or blocked; Drain hose positioned too high.	Straighten the drain hose; Ensure the drain hose outlet is not more than 10cm above the machine's base.
Excessive vibration or noise	Machine not level; Load unbalanced.	Adjust leveling legs; Redistribute laundry evenly in the tub.
Clothes not clean	Too much laundry; Insufficient detergent; Incorrect program selected.	Reduce load size; Use recommended amount of detergent; Select appropriate wash program.

SPECIFICATIONS

Feature	Detail
Brand	KRIB BLING
Model Number	KB03-GREY6-3
Product Dimensions (D x W x H)	19.7"D x 20.9"W x 34.7"H
Capacity	17.7 Pounds
Item Weight	59 Pounds
Color	Grey
Material	Plastic (Body), Stainless Steel (Drum)
Access Location	Top Load
Operation Mode	Fully Automatic
Number of Programs	10
Water Levels	8
Display	LED

Feature	Detail
Voltage	110 Volts
Noise Level	59 Decibels
Special Features	Adjustable Leveling Legs, Protective Rat Mesh, Auto Tub Cleaning, Delay Start

WARRANTY INFORMATION

This KRIB BLING washing machine comes with a **1 Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

CUSTOMER SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact KRIB BLING customer support:

- Email: support@krib-bling.com
- Email: contact@krib-bling.com
- Email: mushroom2023@outlook.com
- Email: duofangda6789@outlook.com

Please provide your model number (KB03-GREY6-3) and purchase details when contacting support.



After Sales Guide

1. 356 day warranty period

2. Contact information:

mushroom2023@outlook.com

duofangda6789@outlook.com

support@krib-bling.com

contact@krib-bling.com

3. Quality assurance



Image: After Sales Guide providing warranty and contact information for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C6XN6529>

More documents and user manuals: <https://manuals.plus/>