



Manuals.plus /

› NIKICAM /

› NIKICAM 5K 80MP Digital Camera K8 Instruction Manual

NIKICAM K8

NIKICAM 5K 80MP Digital Camera K8 Instruction Manual

Model: K8

INTRODUCTION

Thank you for purchasing the NIKICAM 5K 80MP Digital Camera, Model K8. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your camera. Please read this manual thoroughly before using the camera to ensure proper operation and to maximize its performance.

PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact NIKICAM customer support.

- NIKICAM 5K 80MP Digital Camera (Model K8)
- 32GB TF Card
- 2 x Lithium-Ion Batteries (BL-5L, BL-5B)
- Lanyard
- Type-C USB Cable
- Storage Bag
- Instruction Manual



Webcam & USB Transfer

Perfect for live streaming, video calls and vlogging

Image: The NIKICAM K8 Digital Camera and its complete set of included accessories, such as the 32GB TF card, two batteries, lanyard, Type-C cable, storage bag, and the instruction manual.

SETUP

1. Battery and Micro SD Card Installation

- 1. Open the Battery Cover:** Locate the battery compartment on the bottom or side of the camera and slide the cover open.
- 2. Insert Battery:** Insert the Lithium-Ion battery into the compartment, ensuring the correct orientation according to the polarity indicators.
- 3. Insert Micro SD Card:** Insert the 32GB Micro SD (TF) card into the designated slot until it clicks into place. Ensure the card is facing the correct direction.
- 4. Close the Battery Cover:** Securely close the battery compartment cover.
- 5. Remove TF Card (when needed):** To remove the TF card, push the battery lock lever and gently press the TF card until it ejects, then pull it out.

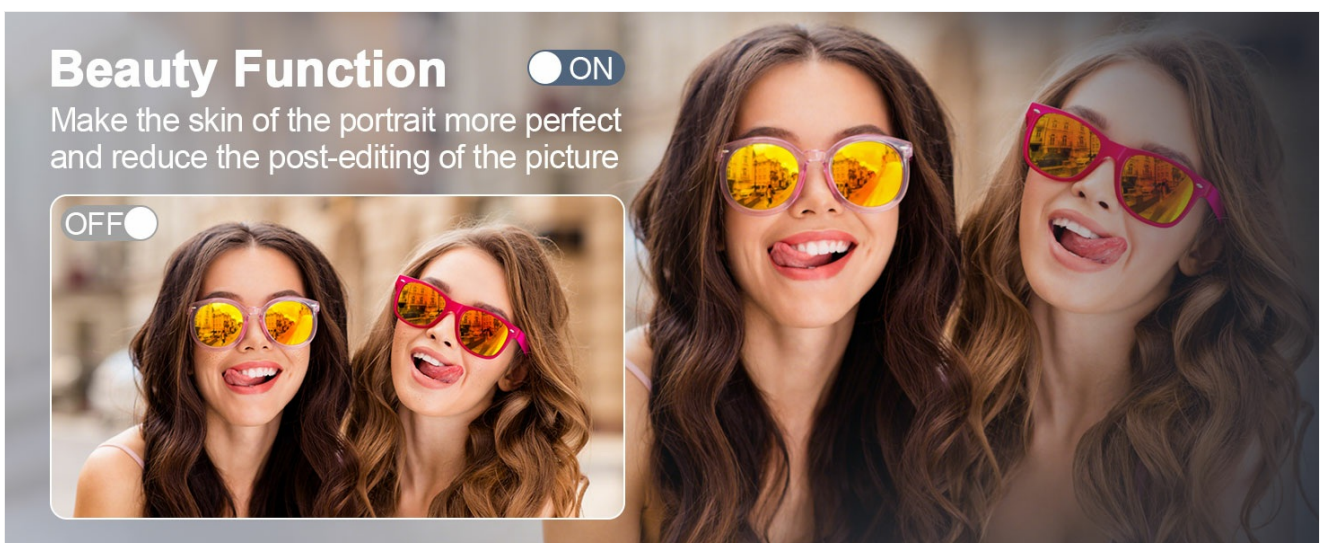


Image: Visual instructions demonstrating the process of installing the battery and Micro SD card into the camera, and how to remove the TF card.

2. Charging the Battery

Connect the camera to a power source using the provided Type-C USB cable. The charging/working indicator light will

illuminate during charging. A full charge typically takes 1-2 hours. Ensure the camera is turned off during charging for optimal battery life.

OPERATING THE CAMERA

1. Camera Overview: Buttons and Functions

Familiarize yourself with the camera's buttons and their respective functions:



Image: A detailed diagram illustrating the layout and functions of the NIKICAM K8 Digital Camera's buttons and features.

- **Power Button:** Turns the camera on or off.
- **Photo Button:** Press to capture a still image.
- **Fill Light:** Activates the built-in flash for low-light conditions.
- **Lens:** The primary optical component for capturing images.
- **1.5" Front Screen:** Used for selfies and vlogging.
- **2.8" Rear Screen:** Main display for framing shots, reviewing, and menu navigation.
- **Digital Zoom In/Out:** Use the Up/Down buttons to adjust digital zoom.
- **OK/Mode Button:** Confirms selections or switches between shooting modes.
- **Down/DISP/Delete/Switch Selfies Button:** Navigates menus, changes display information, deletes files, or switches to selfie mode (press and hold for 3 seconds).
- **Menu Button:** Accesses camera settings and options.
- **Playback Button:** Enters playback mode to view photos and videos.
- **Left Button/Burst:** Navigates menus or activates burst shooting mode.

2. Taking Photos

The camera captures 80MP still images. Ensure the camera is in photo mode (indicated on the screen) and press the Photo Button to capture.

- **Digital Zoom:** Use the Up/Down buttons to zoom in or out (up to 18X digital zoom).
- **Autofocus:** The camera features autofocus. Press the shutter button halfway to allow the camera to focus before fully pressing to capture the image.
- **Built-in Flash:** For low-light conditions, activate the built-in fill light. The flash is most effective within 5 feet.
- **Self-Timer:** Set a delay before taking a photo (e.g., 2s, 5s, 10s) via the menu.
- **Burst Shooting:** Capture a series of photos rapidly by activating burst mode.

- **Filters and Effects:** Access various filters and special effects through the menu to enhance your photos.



Image: Examples of camera features in use, including autofocus, built-in flash, smile capture, pause function, and playback mode.



Image: A user holding the NIKICAM K8 camera, highlighting its compact design and user-friendly interface for photography.

3. Recording Videos

The camera records videos in 5K resolution at 30 frames per second (FPS). Switch to video mode and press the Photo Button to start/stop recording.

- **Slow Motion:** Capture video at a higher frame rate for slow-motion playback.
- **Loop Recording:** Continuously record video, overwriting older footage when the memory card is full.
- **Time-Lapse Photography:** Capture images at set intervals to create a time-lapse video.

NEWEST 5K 80MP DIGITAL CAMERA

Capture excellent moments in your daily life

- 5K Video
- 80MP Photo
- Wi-Fi
- 18X Zoom
- Flash Light
- Webcam
- Pause Video
- Selfie Mode



Image: The camera's screen showing the 5K UHD video recording feature, indicating its high-resolution video capabilities.

4. Dual Screen Function (Selfie Mode)

The camera features a 1.4" front screen for selfies and a 2.8" rear screen for general use. To switch to selfie mode, press and hold the "Down" button for 3 seconds. The front screen will activate, allowing you to frame yourself for photos or videos.

Built-in WiFi & App Control

Search and download "HDV CAM" in your mobile

Scan the code to connect to WIFI
WIFI ID:5K-WIFI
WIFI pwd:12345678



Image: A user demonstrating the dual-screen feature, showing how to activate selfie mode by holding the 'Down' button for 3 seconds.

5. Webcam Function and Live Streaming

The NIKICAM K8 can function as a webcam for video calls, live streaming, and online learning. Connect the camera to your computer using the Type-C USB cable. Select the webcam option on the camera when prompted. The camera will then be recognized as a webcam by your computer's software.




18X Digital Zoom

Capture the details of life more closely

Image: The camera connected to a laptop, demonstrating its functionality as a webcam for video calls and live streaming.

6. Wi-Fi Connectivity and App Control

The camera supports Wi-Fi connectivity for easy transfer of photos and videos to your smartphone or computer. Download the "HDV CAM" app from your mobile app store. Follow the in-app instructions to connect your camera via Wi-Fi (SSID: 5K-WIFI, Password: 12345678).

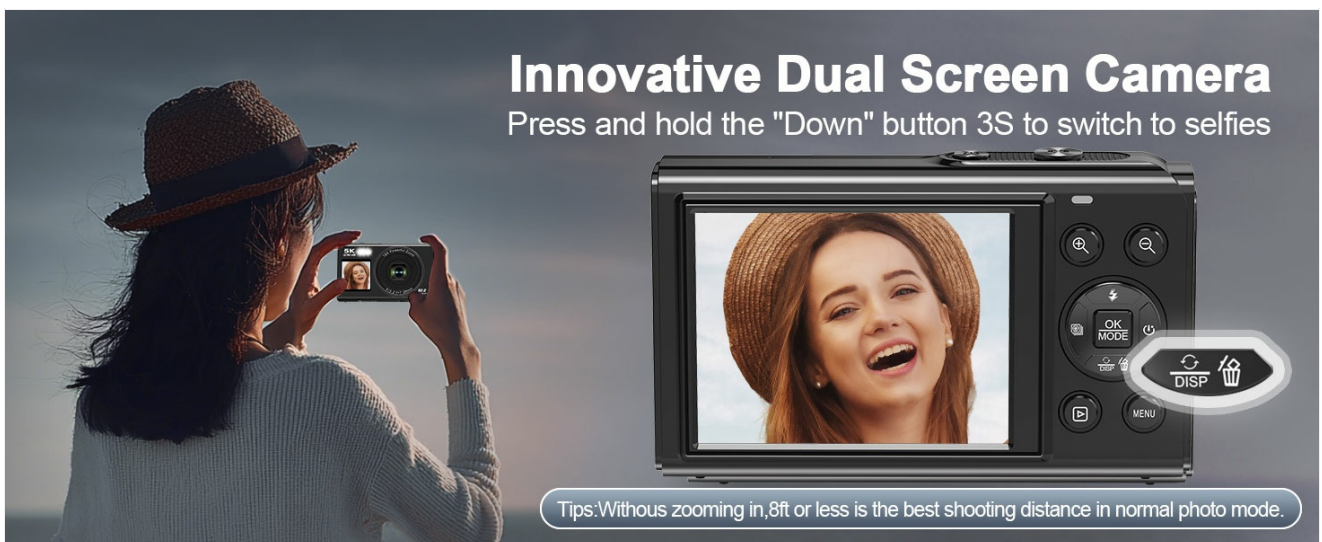

Innovative Dual Screen Camera

Press and hold the "Down" button 3S to switch to selfies

Tips: Without zooming in, 8ft or less is the best shooting distance in normal photo mode.

Image: A smartphone screen showing the 'HDV CAM' app connected to the camera, enabling live preview and instant sharing of media.

7. Transferring Files

You can transfer your photos and videos using several methods:

- **Wi-Fi Transfer:** Use the "HDV CAM" app to wirelessly transfer files to your smartphone.
- **USB Cable:** Connect the camera to your computer using the Type-C USB cable. The camera will appear as a removable drive, allowing you to copy files.
- **Card Reader:** Remove the Micro SD card from the camera and insert it into a compatible card reader connected to your computer.

MAINTENANCE

1. Cleaning the Camera

- **Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Gently wipe the lens in a circular motion. Avoid using harsh chemicals or abrasive materials.
- **Screen:** Wipe the LCD screens with a soft, dry microfiber cloth. For stubborn smudges, a slightly dampened cloth with water can be used, followed by a dry wipe.
- **Camera Body:** Use a soft, dry cloth to clean the camera body. A small brush can be used to remove dust from crevices.

2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently.
- Do not expose batteries to extreme temperatures.
- If the camera will not be used for an extended period, remove the battery.

3. Storage

When not in use, store the camera in the provided storage bag to protect it from dust, scratches, and minor impacts. Keep the camera in a dry environment away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on	Battery is depleted or incorrectly inserted.	Charge the battery fully. Ensure the battery is inserted with correct polarity.
Cannot take photos/videos	Micro SD card is full, locked, or not inserted.	Check if the Micro SD card has sufficient space. Ensure the card is unlocked and properly inserted. Format the card if necessary (this will erase all data).
Poor image/video quality	Low light conditions, dirty lens, incorrect settings.	Ensure adequate lighting. Clean the lens. Adjust exposure settings or use the built-in flash. Avoid shooting in extremely dark or bright environments.
Wi-Fi connection issues	Incorrect password, camera not in Wi-Fi mode, app issues.	Verify Wi-Fi SSID (5K-WIFI) and password (12345678). Restart the camera and the app. Ensure the camera's Wi-Fi is enabled.
Camera freezes or becomes unresponsive	Software glitch or low battery.	Remove and reinsert the battery to reset the camera. Ensure the battery is charged.

SPECIFICATIONS

Feature	Detail
Brand	NIKICAM
Model Name	K8
Effective Still Resolution	80 MP
Video Resolution	5K UHD (2880p) at 30 FPS
Digital Zoom	18X
Screens	1.4" Front Display, 2.8" Rear LCD Display
Image Stabilization	Digital
Connectivity	Wi-Fi, USB Type-C
Storage Media	Micro SD Card (up to 32GB included)
Battery Type	Lithium Ion (2 included)
Special Features	Dual Screens, Webcam Function, Built-in Flash, Autofocus, Multiple Filters, Self-Timer, Burst Shooting, Slow Motion, Time-Lapse
Dimensions (approx.)	3.94 inches (height) x 2.36 inches (width) x 0.98 inches (depth)
Weight (approx.)	0.24 lbs



Built-in Fill Light

Capture detailed photos even in low-light conditions

Image: The camera's compact size and dimensions are illustrated, emphasizing its portability and ease of carrying.

WARRANTY AND SUPPORT

1. Warranty Information

Your NIKICAM K8 Digital Camera comes with a standard manufacturer's warranty. Please refer to the warranty card

included in your package for specific terms and conditions. Retain your proof of purchase for warranty claims.

2. Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact NIKICAM customer support. You can typically find contact information on the NIKICAM official website or through the retailer where you purchased the product. If purchased through Amazon, you can contact the seller directly:

1. Go to the product page on Amazon.
2. Locate the "Sold by NIKICAM DIRECT" section.
3. Click on "Ask a question" to send a message to the seller.



Image: Steps to contact the seller on Amazon for customer support.