

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Selens](#) /
- › [Selens Shadowless Bottom Light Panel Instruction Manual](#)

Selens Shadowless Light Panel

Selens Shadowless Bottom Light Panel Instruction Manual

Model: Shadowless Light Panel

1. INTRODUCTION

The Selens Shadowless Bottom Light Panel is designed to provide diffused and even illumination for product photography, eliminating shadows and reflections. This ultra-thin LED panel is suitable for various small products such as jewelry, cosmetics, and crafts, enhancing the clarity and quality of your photographs. This manual provides essential information for the proper setup, operation, and maintenance of your Shadowless Bottom Light Panel.



Image 1.1: The Selens Shadowless Bottom Light Panel, showcasing its illuminated surface with a jewelry item.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Shadowless Light Panel x 1
- Type-C USB Cable x 1
- Instruction Manual (this document)



Image 2.1: Contents of the product package, showing the Shadowless Light Panel and its Type-C USB cable.

3. SETUP INSTRUCTIONS

1. **Unpack the Device:** Carefully remove the Shadowless Light Panel and all accessories from the packaging.
2. **Connect Power:** Locate the USB-C port on the side of the light panel. Connect the provided Type-C USB cable to this port.
3. **Power Source:** Connect the other end of the USB-C cable to a DC 5V USB power source (e.g., a USB wall adapter, computer USB port, or power bank). Ensure the power source can provide sufficient power for stable operation.
4. **Placement:** Place the light panel on a flat, stable surface. It can be used as a bottom light within a lightbox or as a standalone fill light.

Product List



Shadowless Light x 1



Package x 1



Type C Cable x 1

Image 3.1: Diagram illustrating the product dimensions and the location of the USB-C power port and touch switch.

4. OPERATING INSTRUCTIONS

1. **Power On/Off:** After connecting to a power source, press the touch switch located on the front edge of the panel to turn the light on or off.
2. **Usage as Bottom Light:** For shadowless product photography, place the light panel at the bottom of a photography lightbox. Position your product directly on the illuminated surface.
3. **Usage as Fill Light:** The panel can also be used vertically or at an angle as a fill light to illuminate specific areas of your subject or background.

Note: This light panel features a single brightness level. Brightness is not adjustable directly on the device.


Multiple Usage Scenarios



Shadowless bottom light



Match with light box

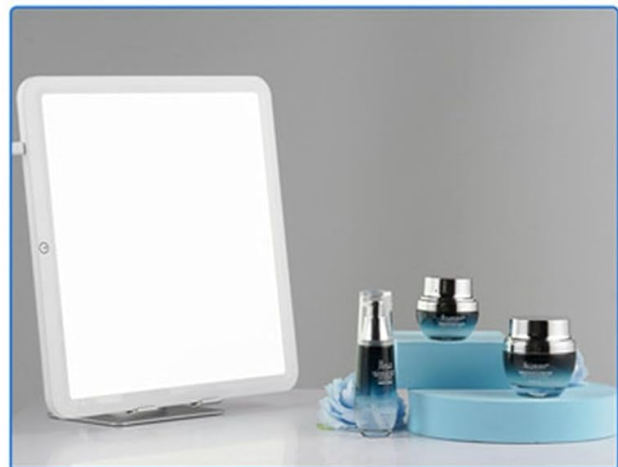

Fill light

Image 4.1: The light panel integrated into a photography lightbox for product shooting.

Harmonious Photo Background

Clearly photo shooting with bottom light



With Shadowless Light

Without Shadowless Light

Image 4.2: Multiple usage scenarios for the light panel, including bottom lighting and fill lighting.

Product Size

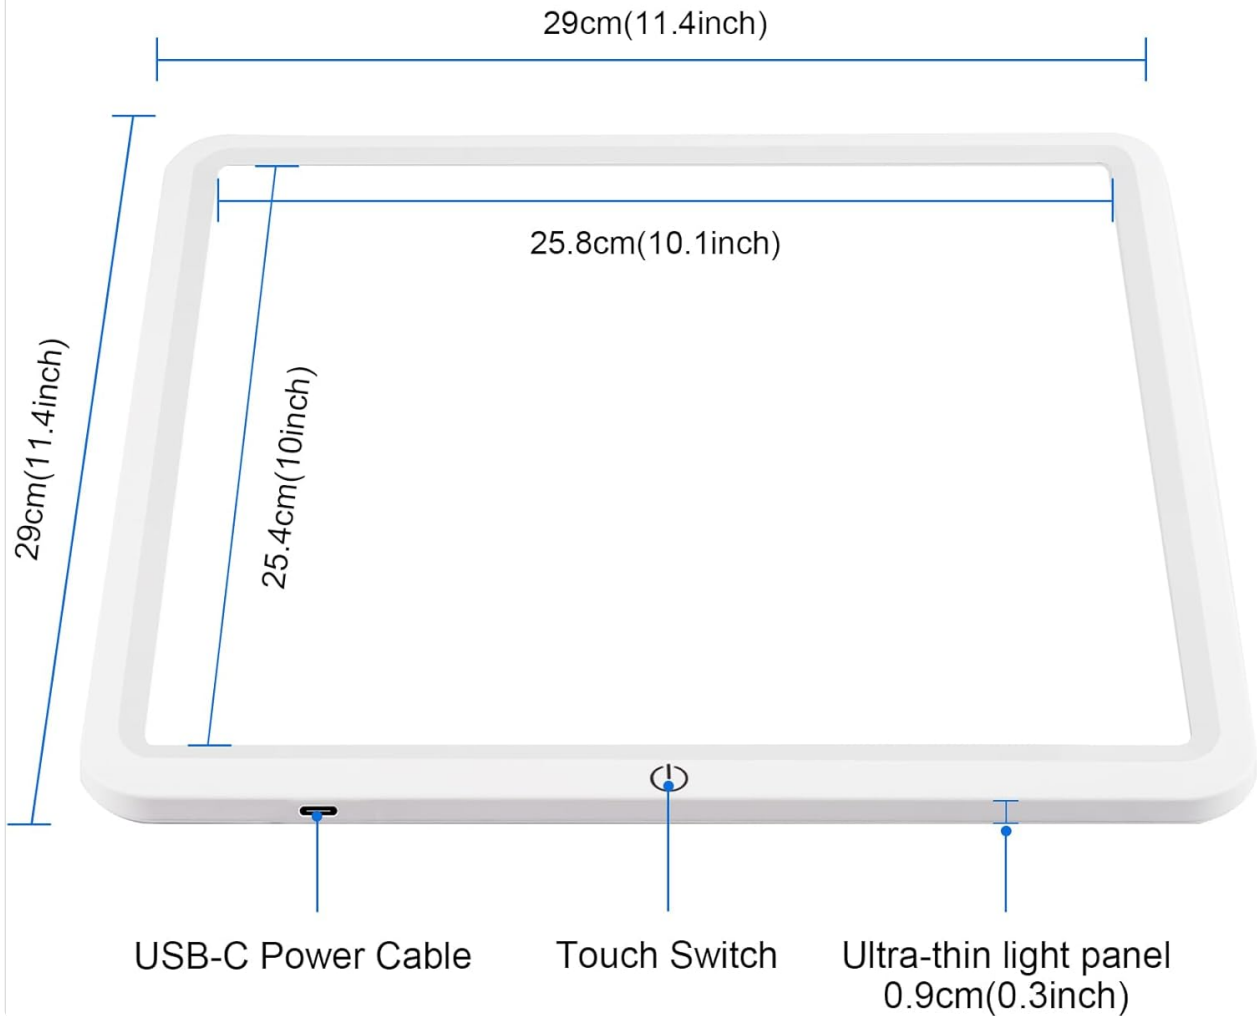


Image 4.3: Demonstration of harmonious photo backgrounds achieved with the shadowless light.

5. MAINTENANCE

- **Cleaning:** Gently wipe the surface of the light panel with a soft, dry, or slightly damp cloth. Avoid using abrasive cleaners or solvents that could damage the acrylic surface.
- **Storage:** When not in use, store the light panel in a dry, dust-free environment. Avoid placing heavy objects on top of it.
- **Handling:** Handle the panel with care to prevent scratches or damage to the illuminated surface.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light panel does not turn on.	<ul style="list-style-type: none"> No power supply. Faulty USB-C cable. Faulty power source. Defective unit. 	<ul style="list-style-type: none"> Ensure the USB-C cable is securely connected to both the panel and a working DC 5V USB power source. Try a different USB-C cable. Try a different USB power adapter or port. If the issue persists, contact customer support.
Light turns off unexpectedly or requires replugging to turn on.	<ul style="list-style-type: none"> Unstable power connection. Insufficient power from the USB source. 	<ul style="list-style-type: none"> Check all cable connections for looseness. Ensure your USB power source provides stable DC 5V output. Try a different, higher-quality USB power adapter.
Uneven illumination.	<ul style="list-style-type: none"> External light interference. Product placement. 	<ul style="list-style-type: none"> Ensure the photography environment is free from other strong light sources that could cause unevenness. Adjust the product's position on the panel.

7. SPECIFICATIONS

Feature	Detail
Model Name	Shadowless Light Panel
Dimensions (L x W x H)	11.5" x 11.5" x 0.3" (29cm x 29cm x 0.9cm)
Material	Acrylic
Light Source Type	LED (Light Emitting Diode)
Power Source	Corded Electric (USB-C, DC 5V)
Item Weight	1.85 pounds (approx. 839g)
Recommended Use	Product photography (jewelry, cosmetics, crafts, small items)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

You can visit the official Selens store for more information: [Selens Store on Amazon](#)