

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Beldray](#) /

› [Beldray Cordless Window Vac BEL0749TT Instruction Manual](#)

Beldray BEL0749TT

Beldray Cordless Window Vac BEL0749TT

Instruction Manual

[Overview](#) [Setup](#) [Operation](#) [Safety Instructions](#) [Product](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Please read these instructions carefully before using the Beldray Cordless Window Vac. Retain this manual for future reference.

- This appliance is intended for domestic use only.
- Do not immerse the appliance in water or any other liquid.
- Keep the appliance away from heat sources, direct sunlight, humidity, sharp edges, and other hazards.
- Ensure the charging cable is not damaged. If damaged, it must be replaced by the manufacturer or a qualified service agent.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only use the charger supplied with the appliance.
- Do not use the appliance to vacuum flammable or combustible liquids, hot ashes, or sharp objects.
- Always switch off and unplug the appliance before cleaning or maintenance.

2. PRODUCT OVERVIEW

The Beldray Cordless Window Vac is designed for efficient and streak-free cleaning of windows, mirrors, and other smooth surfaces.



Image: The Beldray Cordless Window Vac, showing its ergonomic design and main components.





Image: Side view of the window vac, highlighting the water tank and power button.

Components:

1. Squeegee Head (with silicone blade)
2. Suction Nozzle
3. Water Collection Tank
4. Power Button
5. Charging Port
6. Indicator Light

3. SETUP

3.1 Initial Charge

Before first use, fully charge the window vac. This typically takes 2-3 hours.

- Connect the charging cable to the charging port on the appliance.
- Plug the charger into a suitable mains outlet.
- The indicator light will illuminate during charging and change color or turn off when fully charged (refer to specific model indicator behavior in packaging).
- Do not operate the appliance while it is charging.

3.2 Assembly

The Beldray Cordless Window Vac usually comes pre-assembled. Ensure the squeegee head is securely attached to the main body.

4. OPERATING INSTRUCTIONS

4.1 Preparing the Surface

For best results, pre-clean the surface with a spray bottle containing water and a cleaning solution. Wipe away any excess dirt with a cloth.

4.2 Using the Window Vac

1. Press the power button to turn on the appliance. The motor will start, and the suction will activate.
2. Place the squeegee head flat against the top of the wet surface.
3. Draw the appliance downwards in a straight, even motion, allowing the squeegee to collect the liquid and the vacuum to suck it into the collection tank.
4. For wider surfaces, overlap each stroke slightly to ensure complete coverage.
5. After each stroke, lift the appliance slightly, wipe the squeegee blade if necessary, and reposition for the next stroke.
6. When finished, press the power button to turn off the appliance.

Beldray^{est 1872}[®]

3 YEAR
GUARANTEE*

CORDLESS WINDOW VAC

◆ TITANIUM EDITION ◆



**No drips. No streaks.
Quick & easy.**

Perfect for removing
condensation



**CORDLESS &
RECHARGEABLE**
Convenient, tangle-free cleaning



**30 MINUTES
OPERATING TIME**
Clean all of your windows
with one charge



SQUEEGEE HEAD
No smears for a sparkling finish




**less than
1kg**
**LIGHTWEIGHT
& COMPACT**
Versatile and effective
around the home

Image: The window vac being used to clean a window, demonstrating the downward motion.



CLEAN, VACUUM & SQUEEGEE

Perfect for cleaning car windows

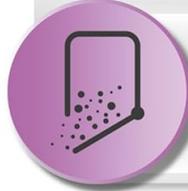

EASY TO EMPTY

Simple to pour dirty water away



DRIP & STREAK FREE

Leaves mirrors, showers and windows spotless



SQUEEGEE HEAD

No smears for a sparkling finish

Image: The window vac effectively cleaning a car window, removing soap and water.



Image: The window vac being used on a shower screen, showing its versatility for various smooth surfaces.

4.3 Emptying the Water Collection Tank

Empty the water collection tank when it is full or after each use.

- Ensure the appliance is switched off.
- Locate the water collection tank release mechanism (usually a clip or button).
- Carefully remove the tank from the main body.
- Pour the collected dirty water into a sink.
- Rinse the tank with clean water and reattach it securely to the appliance.



Image: A hand demonstrating how to empty the water collection tank into a sink.

5. MAINTENANCE

5.1 Cleaning the Squeegee Blade

Regularly clean the silicone squeegee blade to ensure optimal performance.

- Wipe the blade with a damp cloth after each use to remove any residue.
- Ensure the blade is free from nicks or damage, as this can affect streak-free cleaning.

5.2 Cleaning the Appliance Body

Wipe the exterior of the window vac with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.3 Storage

Store the appliance in a cool, dry place, away from direct sunlight and out of reach of children.



Image: The window vac stored neatly on a shelf, demonstrating its compact size.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is flat.	Charge the appliance fully.
Appliance leaves streaks.	Squeegee blade is dirty or damaged.	Clean the squeegee blade. Check for damage and replace if necessary.
Appliance has low suction.	Water collection tank is full.	Empty the water collection tank.
Appliance has low suction.	Suction nozzle is blocked.	Check and clear any blockages in the suction nozzle.
Water leaks from the appliance.	Water collection tank not properly secured.	Ensure the water collection tank is correctly and securely attached.

7. SPECIFICATIONS

- **Model Number:** BEL0749TT
- **Brand:** Beldray
- **Color:** Titanium
- **Material:** Plastic (body), Silicone (blade)
- **Dimensions (L x W x H):** 18 x 28 x 31.5 cm
- **Item Weight:** 900 g
- **Operating Time:** Approximately 30 minutes (on a full charge)
- **Charging Time:** 2-3 hours
- **Water Tank Capacity:** 60 ml

8. WARRANTY AND SUPPORT

Beldray products are manufactured with quality and reliability in mind. For information regarding warranty, returns, or technical support, please refer to the warranty card included with your purchase or visit the official Beldray website.

Keep your proof of purchase for any warranty claims.

Contact Information: Please refer to the contact details provided in your product packaging or on the official Beldray website for customer service.