

Manuals.plus /

› HORI /

› HORI Wireless HORIPAD (The Legend of Zelda Edition) Pro Controller - Instruction Manual

HORI NSW-479U

HORI Wireless HORIPAD (The Legend of Zelda Edition) Pro Controller

Model: NSW-479U

Brand: HORI

PRODUCT OVERVIEW

The HORI Wireless HORIPAD (The Legend of Zelda Edition) Pro Controller is designed for use with the Nintendo Switch. This controller offers wireless freedom through Bluetooth technology, providing a range of up to 32 feet. It features a lightweight and ergonomic design for comfortable extended play sessions. Equipped with an accelerometer and gyroscope, it supports full motion control for compatible games. The controller includes a built-in rechargeable lithium-ion battery and charges via a USB-C cable.



SETUP AND CONNECTIVITY

1. Initial Charging

Before first use, fully charge the controller. Connect the included USB-C cable to the USB-C port on the top of the controller and the other end to a Nintendo Switch dock, a USB wall adapter, or a compatible USB port on a computer. The charging indicator light will show the charging status.



Figure 2: Side view of the controller, highlighting the USB-C charging port located on the top edge.

2. Pairing with Nintendo Switch

To pair the controller with your Nintendo Switch console:

1. From the Nintendo Switch HOME Menu, select **Controllers**, then **Change Grip/Order**.
2. While on the "Change Grip/Order" screen, press and hold the **Sync Button** on the top of the HORI Wireless HORIPAD for a few seconds until the player LEDs begin to flash.
3. Once paired, the player LED(s) corresponding to the controller number will remain lit.

The controller utilizes Bluetooth wireless technology for a stable connection up to 32 feet from the console.



Figure 3: The controller emitting Bluetooth wireless signals, indicating its connectivity feature.

OPERATING THE CONTROLLER

Button Layout and Functions

The HORI Wireless HORIPAD features a standard Nintendo Switch Pro Controller button layout:

- **Left Analog Stick:** For character movement and camera control.
- **Right Analog Stick:** For camera control or specific in-game actions.
- **Directional Pad (D-Pad):** For precise directional input.
- **A/B/X/Y Buttons:** Standard action buttons.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Buttons:** Trigger buttons.
- **Minus (-) Button:** Typically opens in-game menus or performs specific actions.
- **Plus (+) Button:** Typically opens pause menus or performs specific actions.
- **Home Button:** Returns to the Nintendo Switch HOME Menu.
- **Capture Button:** Takes screenshots or video clips (depending on game/system settings).



Figure 4: Top-down view of the controller, illustrating the placement of all buttons and analog sticks.

Motion Control Functionality

The controller is equipped with an accelerometer and gyroscope, enabling full motion control in games that support this feature. This allows for intuitive gameplay where tilting or moving the controller translates into in-game actions.



Figure 5: Visual representation of the controller's motion control capabilities, indicated by directional arrows.

MAINTENANCE

Cleaning

To clean the controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and wipe gently. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the controller's finish or internal components.

Battery Care

- Avoid exposing the controller to extreme temperatures (hot or cold) as this can affect battery life and performance.
- If storing the controller for an extended period, ensure it is partially charged (around 50%) to preserve battery health.
- Do not attempt to replace the built-in battery yourself. Contact HORI customer support if you suspect a battery issue.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not connect/pair.	Controller is out of range, battery is low, or pairing mode not activated correctly.	Ensure controller is within 32 feet of the console. Charge the controller fully. Re-attempt pairing by holding the Sync Button on the controller while on the "Change Grip/Order" screen on the Switch.
Buttons or sticks are unresponsive.	Low battery, interference, or a temporary software glitch.	Charge the controller. Move closer to the console. Restart the Nintendo Switch console. If issues persist, try re-pairing the controller.
Motion controls are inaccurate.	Controller calibration may be off.	Calibrate the motion controls through the Nintendo Switch system settings: System Settings > Controllers and Sensors > Calibrate Motion Controls . Follow on-screen instructions.
Controller does not charge.	Faulty USB-C cable, power source issue, or damaged charging port.	Try a different USB-C cable and a different power source (e.g., another USB wall adapter or a different USB port on the dock). Ensure the cable is fully inserted.

SPECIFICATIONS

- **Model Number:** NSW-479U
- **Connectivity:** Bluetooth Wireless Technology
- **Range:** Up to 32 feet (approx. 10 meters)
- **Battery:** Built-in Rechargeable Lithium-Ion
- **Charging Port:** USB Type-C
- **Motion Control:** Accelerometer and Gyroscope
- **Weight:** 10.9 ounces (approx. 309 grams)
- **Manufacturer:** HORI
- **Country of Origin:** China
- **Release Date:** July 28, 2023

WARRANTY AND SUPPORT

This HORI product is covered by a manufacturer's warranty. For specific warranty terms, duration, and conditions, please refer to the warranty card included with your product packaging or visit the official HORI website. Keep your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty service, please contact HORI customer support. Contact information can typically be found on the HORI official website or within the product packaging.

Note: Product specifications and features are subject to change without notice.