

[Manuals.plus](#) /

› [PlayBetter](#) /

› Bushnell Wingman Mini GPS Golf Speaker Instruction Manual

PlayBetter 362311 (Speaker), Z05 (Charger)

Bushnell Wingman Mini GPS Golf Speaker Instruction Manual

Model: 362311 (Speaker), Z05 (Charger)

Brand: PlayBetter

INTRODUCTION

The Bushnell Wingman Mini GPS Golf Speaker is a compact and versatile device designed to enhance your golf experience. It provides audible GPS distances, allows for music playback via Bluetooth, and features a strong integrated BITE magnetic mount for easy attachment to a golf cart. This manual provides essential information for setting up, operating, and maintaining your Wingman Mini.

WHAT'S IN THE BOX

- Bushnell Wingman Mini Golf GPS Speaker
- USB-C Charging Cable
- Carabiner
- PlayBetter USB-C Portable Charger



The Bushnell Wingman Mini speaker and its accompanying portable charger and carabiner.


KEY FEATURES

- **Instant Audible Distance Readings:** Get accurate audible distance readings for the front, center, and back of the green. Access over 38,000 courses and audible 1st tee introductions by pressing the 'B' button.
- **Effortless Mounting with BITE Magnetic Cart Mount:** Features Bushnell's innovative BITE magnetic mount for easy attachment to golf cart bars.
- **Convenient Attachment with Carabiner Clip:** Use the included carabiner clip to attach the speaker to your golf bag for easy access.
- **TWS (True Wireless Stereo) Technology:** Sync two Wingman Mini speakers together for a superior, simultaneous audio experience.

**HIT THE BUTTON FOR
AUDIBLE FRONT, CENTER,
BACK OF GREEN
CALL-OUTS**



The 'B' button on the speaker provides instant audible distance call-outs.

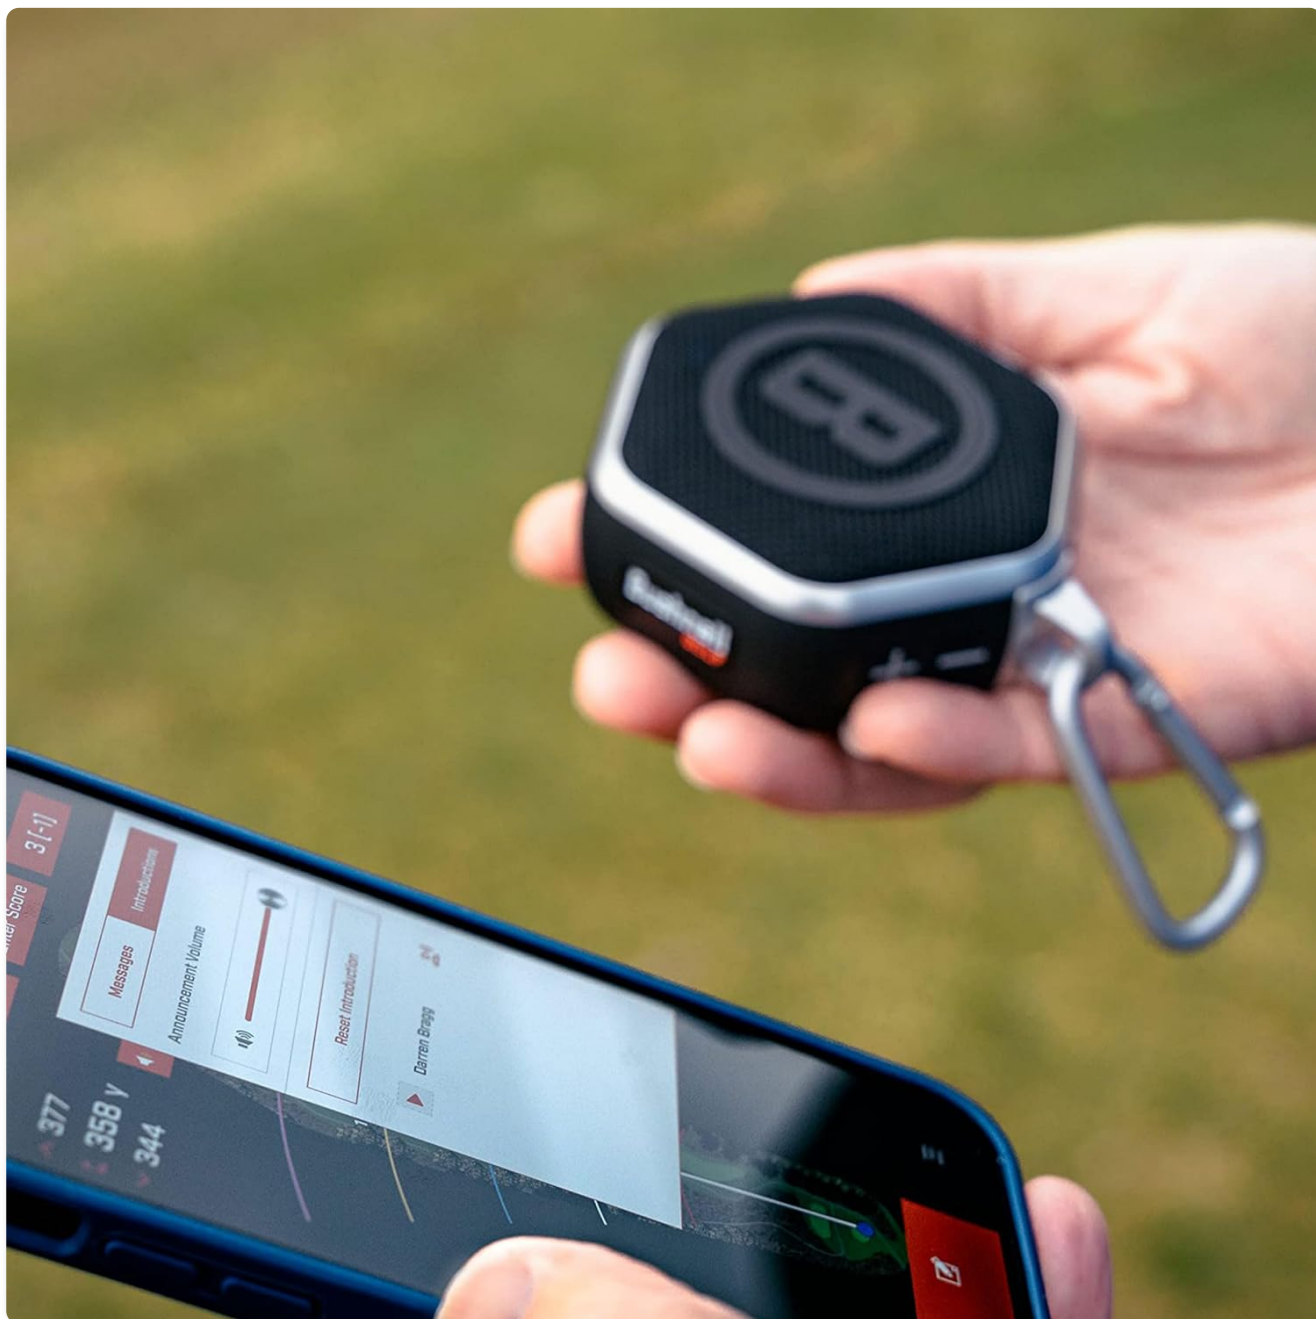

The integrated BITE magnetic mount allows for secure attachment to metal surfaces like golf cart frames.



Two Wingman Mini speakers can be paired using TWS technology for a stereo sound experience.

SETUP

Charging the Speaker

Before first use, fully charge your Wingman Mini speaker and the portable charger using the provided USB-C cable. The speaker has a battery life of approximately 10 hours.

- Connect the USB-C cable to the charging port on the speaker.
- Connect the other end to a USB power adapter (not included) or a computer USB port.
- The LED indicator will show charging status and turn off when fully charged.

Initial Bluetooth Pairing

- Power on the Wingman Mini by pressing and holding the power button.

- The speaker will enter pairing mode, indicated by a flashing LED.
- On your smartphone or other Bluetooth device, go to Bluetooth settings and select "Wingman Mini" from the list of available devices.
- Once connected, the LED indicator will become solid.

Course Data

The Wingman Mini comes preloaded with over 38,000 golf courses worldwide. No additional setup is required for course recognition. Ensure you are in an open area for optimal GPS signal acquisition.

OPERATING INSTRUCTIONS

Audible Distance Readings

- Once powered on and a course is recognized, simply press the large 'B' button on the speaker.
- The speaker will audibly announce the distances to the front, center, and back of the green.
- It also provides audible 1st tee introductions and custom sound bites.

Music Playback

- After Bluetooth pairing, open your preferred music streaming app on your connected device.
- Use the volume buttons (+/-) on the speaker to adjust the audio level.
- The speaker supports basic playback controls (play/pause, skip track) via its control buttons.

TWS (True Wireless Stereo) Pairing

- Ensure both Wingman Mini speakers are powered on and not connected to any other Bluetooth device.
- On one speaker, press and hold the TWS pairing button (refer to speaker diagram for exact location).
- The speakers will automatically search for and connect to each other.
- Once paired, they will play audio simultaneously, creating a stereo effect.

Mounting Options

- **Magnetic Mount:** Utilize the strong BITE magnet on the back of the speaker to securely attach it to any metal surface on your golf cart.
- **Carabiner Clip:** Attach the included carabiner to the speaker's loop and clip it to your golf bag, belt loop, or other convenient location.

TWS TECHNOLOGY

PLAY TWO
WINGMANS
SIMULTANEOUSLY



The carabiner clip allows for easy attachment to a golf bag.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place when not in use. Avoid extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly, even if not in constant use.
- **Water Resistance:** The speaker is water resistant, meaning it can withstand splashes and light rain. Do not submerge it in water.

TROUBLESHOOTING

Issue	Possible Cause	Solution
No power	Battery is drained	Charge the speaker using the USB-C cable.
Cannot pair via Bluetooth	Speaker not in pairing mode; Device Bluetooth off; Too far from device	Ensure speaker is in pairing mode (flashing LED). Turn Bluetooth on your device. Move device closer to speaker (within 10 meters).
No audible distances	Not on a recognized course; GPS signal weak; 'B' button not pressed	Ensure you are on a golf course listed in the 38,000+ preloaded courses. Move to an open area for better GPS signal. Press the 'B' button firmly.
Poor sound quality	Low battery; Obstruction; Distance from device	Charge the speaker. Ensure no obstructions between speaker and device. Move device closer.
TWS pairing fails	Speakers already connected to other devices; Not in TWS pairing mode	Disconnect both speakers from any other Bluetooth devices. Ensure both are in TWS pairing mode.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	Wingman Mini
Mounting Type	Clip On, Freestanding, Magnetic Mount
Speaker Type	Surround Sound, Soundbar
Special Feature	Hi Res Audio
Connectivity Technology	Bluetooth
Bluetooth Range	10 Meters
Battery Life	10 Hours
Charging Time	10 Hours (for full charge)
Water Resistance Level	Water Resistant
Product Dimensions	1.57"D x 3.23"W x 4"H
Item Weight	6 Ounces

Feature	Specification
Speaker Maximum Output Power	30 Watts

WARRANTY AND SUPPORT

The Bushnell Wingman Mini GPS Golf Speaker comes with a Limited Warranty. For specific details regarding warranty coverage, duration, and claims, please refer to the warranty information provided in the product packaging or visit the official Bushnell Golf website.

For technical support, troubleshooting assistance beyond what is covered in this manual, or service inquiries, please contact Bushnell Golf customer support directly. Contact information can typically be found on the manufacturer's website or in the product documentation.

© 2024 PlayBetter. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question