

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [COBIZI](#) /
- › [COBIZI 10x20 Pop Up Canopy Tent with Sidewalls Instruction Manual](#)

COBIZI 47

COBIZI 10x20 Pop Up Canopy Tent with Sidewalls Instruction Manual

Model: 47

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your COBIZI 10x20 Pop Up Canopy Tent with Sidewalls. Please read all instructions carefully before setup and retain this manual for future reference. This canopy is designed to provide a large shaded area, accommodating approximately 6 tables and 15-20 people, making it suitable for various outdoor events.

SAFETY INFORMATION

Important Safety Warning:

- Do not use this canopy in heavy rain, strong winds, or snowfall.
- Always stow away the canopy during adverse weather conditions to prevent damage to the product and potential injury.
- Ensure all stakes and ropes are properly secured to prevent the canopy from lifting or collapsing.
- Keep children and pets away from the canopy during assembly and disassembly.

PACKAGE CONTENTS

Please verify that all components listed below are included in your package:

- 10 x 20 Pop-up Canopy Frame x 1
- 10x20 Gazebo Cover x 1
- Sidewalls with Window x 4
- Sidewalls with Zipper x 2
- Ropes x 6
- Tent Stakes x 12

- Carrying Bag x 1

Figure 1: Included Components and Assembly Overview

SETUP INSTRUCTIONS

The COBIZI 10x20 Pop Up Canopy Tent is designed for easy assembly by two individuals without the need for tools.

Step 1: Unfold the Frame

With two people, carefully pull the frame apart from opposite ends until it is partially extended. Ensure the canopy top is draped over the frame before fully extending.

Your browser does not support the video tag.

Video 1: Detailed Assembly Process of the 10x20 Pop Up Canopy

Step 2: Secure the Canopy Top

Once the frame is partially open, place the canopy cover over the top. Secure the cover to the frame using the integrated Velcro straps at each corner and along the frame bars. This ensures the cover is taut and prevents water accumulation.



Figure 2: Securing the Canopy Foot Wrap

Step 3: Extend the Legs and Adjust Height

Extend each leg of the canopy frame by pressing the red button on the leg mechanism and pulling the inner leg downwards until it locks into place. The canopy offers three adjustable height settings. Repeat for all legs to achieve the desired height.

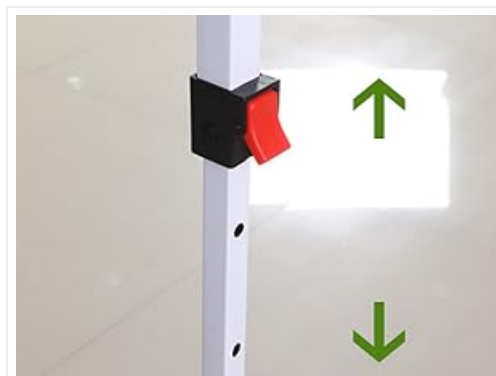


Figure 3: Adjustable Height Mechanism

Step 4: Install Sidewalls (Optional)

Attach the sidewalls using the Velcro strips along the top edge of the canopy and around the vertical legs. The sidewalls include both windowed and zippered panels for versatile configuration.

Your browser does not support the video tag.

Video 2: How to Install the Canopy (without sidewalls)



Figure 4: Canopy with Sidewalls Installed

Step 5: Secure with Stakes and Ropes

For stability, especially in outdoor conditions, use the provided tent stakes to anchor each leg to the ground. Additionally, attach the ropes to the canopy corners and secure them to the ground with stakes, pulling them taut to provide extra stability.



Figure 5: Securing with Tent Stakes

OPERATING INSTRUCTIONS

Your COBIZI canopy tent is designed for versatile use in various outdoor settings. Once fully assembled and secured, it provides a large, shaded, and waterproof area.

Adjusting Height

The canopy features three adjustable height settings. To change the height, press the red button on each leg and slide the inner leg to the desired position until it clicks into place. Ensure all legs are adjusted to the same height for stability.

Using Sidewalls

The included sidewalls can be attached or removed as needed. They provide additional protection from sun, wind, and light rain. The zippered sidewalls allow for easy entry and exit, while windowed sidewalls offer visibility.

Your browser does not support the video tag.

Video 3: Application Scenes of the 10x20 Pop Up Canopy

MAINTENANCE

Proper maintenance will extend the lifespan of your COBIZI canopy tent.

- **Cleaning:** Clean the canopy fabric and sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Inspect the metal frame regularly for any signs of rust or damage. Clean any dirt or debris from the frame. If rust appears, gently remove it and apply a rust-inhibiting paint.
- **Storage:** Always ensure the canopy fabric and frame are completely dry before folding and storing them in the provided carrying bag. Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Here are some common issues and their solutions:

- **Canopy is unstable:** Ensure all legs are fully extended and locked, and that the canopy is properly anchored with stakes and ropes. Check that the frame is fully expanded and the fabric is taut.
- **Water accumulation on canopy top:** This can occur if the canopy is not set up correctly or if the height is not adjusted properly. Ensure the fabric is stretched tightly over the frame to allow water to run off. The foot wraps can be adjusted to tighten the cover and prevent water pooling.
- **Difficulty with assembly/disassembly:** Ensure two people are involved in the process. Refer to the setup videos for visual guidance. Do not force any parts; if resistance is met, re-check the alignment.

SPECIFICATIONS

Feature	Detail
Brand	COBIZI
Model Number	47
Material	210D Oxford Fabric, Alloy Steel
Color	Blue
Item Weight	64.7 Pounds
Product Dimensions	236"L x 118"W x 126"H (10x20ft)
Ultraviolet Light Protection	Yes
Water Resistance Level	Water Resistant
Number of Guylines	6
Assembly Required	No (refers to tools, but assembly is required)

WARRANTY AND SUPPORT

For warranty information or customer support regarding your COBIZI 10x20 Pop Up Canopy Tent, please refer to the documentation included with your purchase or contact COBIZI customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.