

[manuals.plus](#) /

- › [C idea](#) /
- › [C idea 8 Inch Tablet CM825 Android 13 User Manual](#)

**C idea CM825**

# C idea 8 Inch Tablet CM825 Android 13 User Manual

Model: CM825

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the C idea 8-inch Tablet, Model CM825, running on the Android 13 operating system. Please read this guide thoroughly before using your device to ensure proper operation and to maximize its features. Keep this manual for future reference.



Image 1.1: The C idea 8-inch Tablet, highlighting its Android 13 operating system and memory configuration.

## 2. WHAT'S IN THE Box

Upon opening your C idea Tablet package, please verify that all the following items are included:

- 1 x Tablet PC (C idea 8 Inch Tablet CM825)
- 1 x User's Manual (This document)
- 1 x Charger
- 1 x TYPE-C cable

## 3. PRODUCT OVERVIEW

Familiarize yourself with the physical components and ports of your C idea CM825 tablet.



Image 3.1: Labeled diagram of the C idea CM825 Tablet's external features.

## Key Components:

- **Type-C USB Port:** For charging and data transfer.
- **TF Card Slot:** Insert a MicroSD (TF) card to expand storage up to 512GB.
- **3.5mm Audio Jack:** Connect headphones or external speakers.
- **Rear Camera:** 5 MP camera for photos and videos.
- **Front Camera:** 2 MP camera for video calls and selfies.
- **Volume Buttons:** Adjust the device's volume.
- **Power On/Off Button:** Press and hold to power on/off or restart. Short press to turn the screen on/off.
- **Reset Button:** A small pinhole button for force restarting the device if it becomes unresponsive.
- **Speaker:** Audio output.
- **Microphone:** Audio input for voice commands and calls.

## 4. SETUP

### 4.1 Initial Charging

Before first use, fully charge your tablet. Connect the provided Type-C cable to the tablet's Type-C USB port and the charger to a power outlet. The battery indicator on the screen will show charging status.

### 4.2 Power On/Off

- **To Power On:** Press and hold the Power On/Off button until the C idea logo appears.
- **To Power Off:** Press and hold the Power On/Off button until the power options appear on the screen. Select 'Power off'.
- **To Restart:** If the device is unresponsive, press and hold the Power On/Off button until the power options appear, then select 'Restart'. Alternatively, use a pin to press the Reset button.

## 4.3 Initial Configuration

Upon first power-on, the tablet will guide you through the initial setup process:

- Language Selection:** Choose your preferred language.
- Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet.
- Google Account:** Sign in with your Google account or create a new one. This is necessary for downloading apps from the Google Play Store.
- Date & Time:** Set the correct date and time, or allow the network to set it automatically.
- Security:** Set up a screen lock (PIN, pattern, or password) for device security.

## 5. OPERATING INSTRUCTIONS

### 5.1 Android 13 System

Your tablet runs on the Android 13 operating system, offering a personal, secure, and smooth user experience. It provides enhanced privacy controls and improved performance.

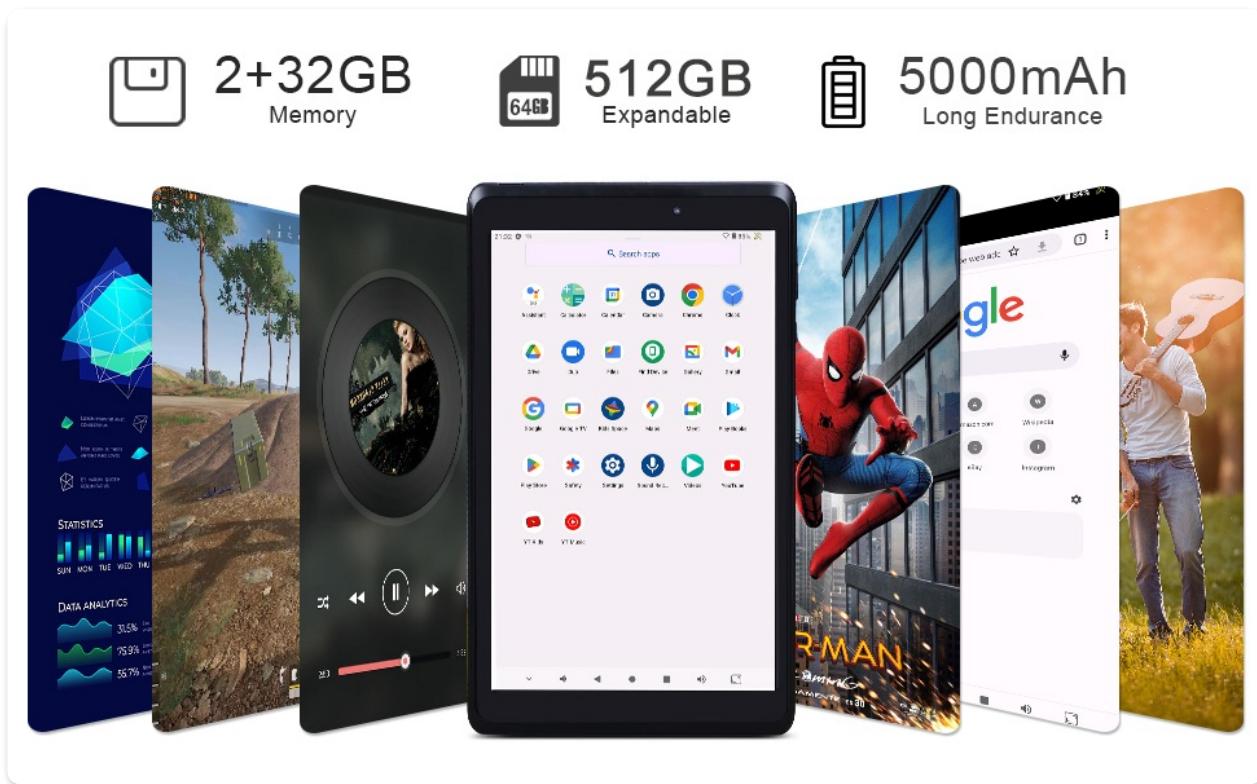


Image 5.1: Android 13 interface on the C idea tablet, illustrating its smooth operation.

### 5.2 Navigation

- Touch Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- Home Screen:** Access your apps and widgets.
- Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.
- App Drawer:** Swipe up from the bottom of the screen to access all installed applications.

### 5.3 Connecting to Wi-Fi

- Go to **Settings > Network & internet > Wi-Fi**.
- Toggle Wi-Fi on.
- Select your desired network from the list.

4. Enter the password if prompted and tap **Connect**.

## 5.4 Installing and Uninstalling Applications

- **Install:** Open the **Google Play Store** app, search for your desired application, and tap **Install**.
- **Uninstall:** Go to **Settings > Apps > See all apps**. Select the app you wish to uninstall and tap **Uninstall**.

## 5.5 Camera Usage

The tablet features a 5MP rear camera and a 2MP front camera.

Image 5.2: Details of the tablet's front and rear cameras.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo.
3. Switch between front and rear cameras using the camera switch icon.
4. Select video mode to record videos.

## 5.6 Storage Management

The tablet comes with 32GB of internal storage and supports expansion up to 512GB via a TF (MicroSD) card.

- **Insert TF Card:** Gently insert a TF card into the designated slot until it clicks into place.
- **Check Storage:** Go to **Settings > Storage** to view internal and external storage usage.

## 5.7 Parental Controls (Youth Mode)

The tablet is GMS certified, allowing for parental controls and youth mode setup to manage app access and screen time.

- Access parental control features through Google Family Link or similar apps available on the Google Play Store.
- Set time limits, filter inappropriate content, and manage app permissions for child users.

## 5.8 Blue Light Screen Protection

The tablet is equipped with an anti-blue light blocking screen designed to alleviate visual fatigue and protect your eyes during prolonged use.

# 800\*1280 HD IPS DISPLAY



With free Anti-Blue Light Screen Protector



178°

Image 5.3: The tablet's HD IPS display with blue light protection features.

## 6. MAINTENANCE

### 6.1 Cleaning

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals or abrasive materials.

### 6.2 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not let the battery completely drain frequently.
- Use only the provided charger and cable.

### 6.3 Software Updates

Periodically check for system updates to ensure optimal performance and security.

1. Go to **Settings > System > System update.**

- Follow the on-screen instructions to download and install any available updates.

## 7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

Problem	Possible Solution
Tablet does not power on	Ensure the battery is charged. Connect the charger and try again. If still unresponsive, press the Reset button with a pin.
Slow performance or lagging	Close unused apps. Clear cache from apps (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the tablet. Ensure sufficient storage space.
Wi-Fi connection issues	Restart your Wi-Fi router. Forget the network on the tablet and reconnect. Ensure you are within range of the Wi-Fi signal.
Screen is unresponsive	Restart the tablet. If the screen remains unresponsive, use the Reset button.
Battery drains quickly	Reduce screen brightness. Close background apps. Disable Wi-Fi/Bluetooth when not in use. Check battery usage in Settings to identify power-hungry apps.

## 8. SPECIFICATIONS

Detailed technical specifications for the C idea 8 Inch Tablet CM825:

- Model:** CM825
- Operating System:** Android 13
- Screen Size:** 8 Inches
- Screen Resolution:** 1280 x 800 pixels (HD IPS)
- Processor:** 1.6 GHz Quad-Core (Allwinner)
- RAM:** 2 GB DIMM DDR
- Internal Storage:** 32 GB
- Expandable Storage:** Up to 512 GB (via TF Card)
- Graphics Coprocessor:** PowerVR GE8300
- Rear Camera:** 5 MP
- Front Camera:** 2 MP
- Wireless Type:** 802.11a/b/g/n/ac Wi-Fi
- Average Battery Life:** Approximately 4 Hours (usage dependent)
- Power Source:** AC & Battery
- Item Weight:** 1.3 pounds
- Product Dimensions:** 9.1 x 8.6 x 1.5 inches
- Color:** Black

 
## 9. WARRANTY AND SUPPORT


Your C idea 8 Inch Tablet CM825 comes with a **12 Month After Sales Warranty**.

For warranty claims, technical support, or further assistance, please contact C idea customer service through the retailer where the product was purchased or refer to the contact information provided in your purchase documentation.

© 2025 C idea. All rights reserved.

## Related Documents - CM825

	<p><a href="#"><b>OSCAL Tablet PAD70 User Manual and Safety Guide</b></a></p> <p>Comprehensive guide for the OSCAL PAD70 tablet, covering setup, usage, safety precautions, and maintenance. Learn how to insert SIM/TF cards, boot the device, send SMS/MMS, change languages, and understand safety guidelines for optimal and secure operation.</p>
	<p><a href="#"><b>Lenovo Idea Tab Plus (TB361FU) Produktdatenblatt &amp; Technische Spezifikationen</b></a></p> <p>Umfassendes Produktdatenblatt und detaillierte technische Spezifikationen für das Lenovo Idea Tab Plus (TB361FU) Tablet, einschließlich Energieeffizienz, Reparierbarkeitsindex, Konnektivität und Leistung.</p>
	<p><a href="#"><b>Lenovo Idea Tab Pro User Guide</b></a></p> <p>Comprehensive user guide for the Lenovo Idea Tab Pro (TB373FU), covering setup, features, settings, accessibility, and safety information. Learn to maximize your device experience.</p>
	<p><a href="#"><b>Onn. 8" Tablet Product Guide and User Manual</b></a></p> <p>A comprehensive guide for the Onn. 8" Tablet (Model: 100011885), covering introduction, setup, features, safety instructions, and warranty information.</p>
	<p><a href="#"><b>User Manual for AUTOABC AI Box - Wireless CarPlay &amp; Android Auto</b></a></p> <p>Comprehensive user manual for the AUTOABC AI Box, detailing setup, features, technical specifications, and troubleshooting for wireless CarPlay and Android Auto integration in your car.</p>

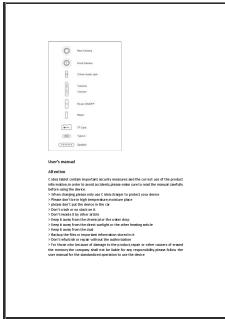

## C Idea CM861 Tablet PC User Manual

User manual for the C Idea CM861 Tablet PC, covering safety precautions, basic operations, battery management, OTG functionality, PC connectivity, and FCC compliance.