

[Manuals.plus](#) /

› [LITBLOOM](#) /

› LITBLOOM Lighted Olive Tree 6FT (Model HR-LMT300-OT-6FT-LB) User Manual

LITBLOOM HR-LMT300-OT-6FT-LB

LITBLOOM Lighted Olive Tree 6FT (Model HR-LMT300-OT-6FT-LB) User Manual

Your Guide to Setup, Operation, and Care

1. INTRODUCTION

Thank you for choosing the LITBLOOM Lighted Olive Tree. This artificial tree features 300 warm white fairy lights, a timer, and dimmer functions, designed to enhance your indoor or outdoor decor. This manual provides essential instructions for safe assembly, operation, and maintenance of your product. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the product is placed on a stable, level surface to prevent tipping.
- Do not expose the adapter or electrical connections to water or excessive moisture. This product is designed for indoor and covered outdoor use.
- Keep away from open flames, heat sources, and flammable materials.
- Do not attempt to modify or repair the product. Contact customer support for assistance.
- Unplug the power adapter from the outlet when not in use or before cleaning.
- Keep out of reach of children and pets.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged:

- 1 x Lighted Olive Tree (6FT)
- 1 x Power Adapter
- 1 x Remote Control
- 1 x Weighted Black Pot (Base)

4. SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Assemble the Tree:** The tree comes with a weighted black pot for stability. Insert the tree trunk firmly into the pot.
3. **Shape the Branches:** The branches are bendable. Gently spread and shape the branches to achieve your desired natural olive tree appearance. Ensure the fairy lights are evenly distributed.
4. **Connect Power:** Plug the power adapter into the tree's power input, then plug the adapter into a standard electrical outlet.



Image 1: The LITBLOOM 6FT Lighted Olive Tree, showcasing its overall appearance with the remote control and power adapter.



Image 2: A detailed view of the tree trunk, highlighting its realistic bark texture.



Image 3: A close-up of the olive tree's leaves and artificial fruits, with the integrated fairy lights visible.

5. OPERATING INSTRUCTIONS

Your LITBLOOM Lighted Olive Tree can be operated using either the remote control or the button on the power adapter.

5.1 Remote Control Functions

- **ON/OFF:** Press the 'ON' button to turn the lights on, and 'OFF' to turn them off.
- **TIMER:** Press the 'TIMER' button to activate the 6-hour ON / 18-hour OFF cycle. The green indicator LED on the adapter will illuminate when the timer is active. Press again to deactivate.
- **DIM+/-:** Use the 'DIM+' and 'DIM-' buttons to adjust the brightness levels (100%, 75%, 50%, 25%).
- **1-8 (Lighting Modes):** Select from 8 different lighting functions:
 - 1. Combination
 - 2. In Waves
 - 3. Sequential
 - 4. Slo-Glo
 - 5. Chasing/Flash
 - 6. Slow Fade

- 7. Twinkle/Flash
- 8. Steady On

5.2 Power Adapter Control Functions

- **Control Button:** Press the button on the adapter to cycle through the 8 different lighting modes.
- **Timer Set/Reset:** Press and hold the button for 3 seconds to activate or deactivate the 6-hour ON / 18-hour OFF timer function. The green indicator light on the adapter will show the timer status.

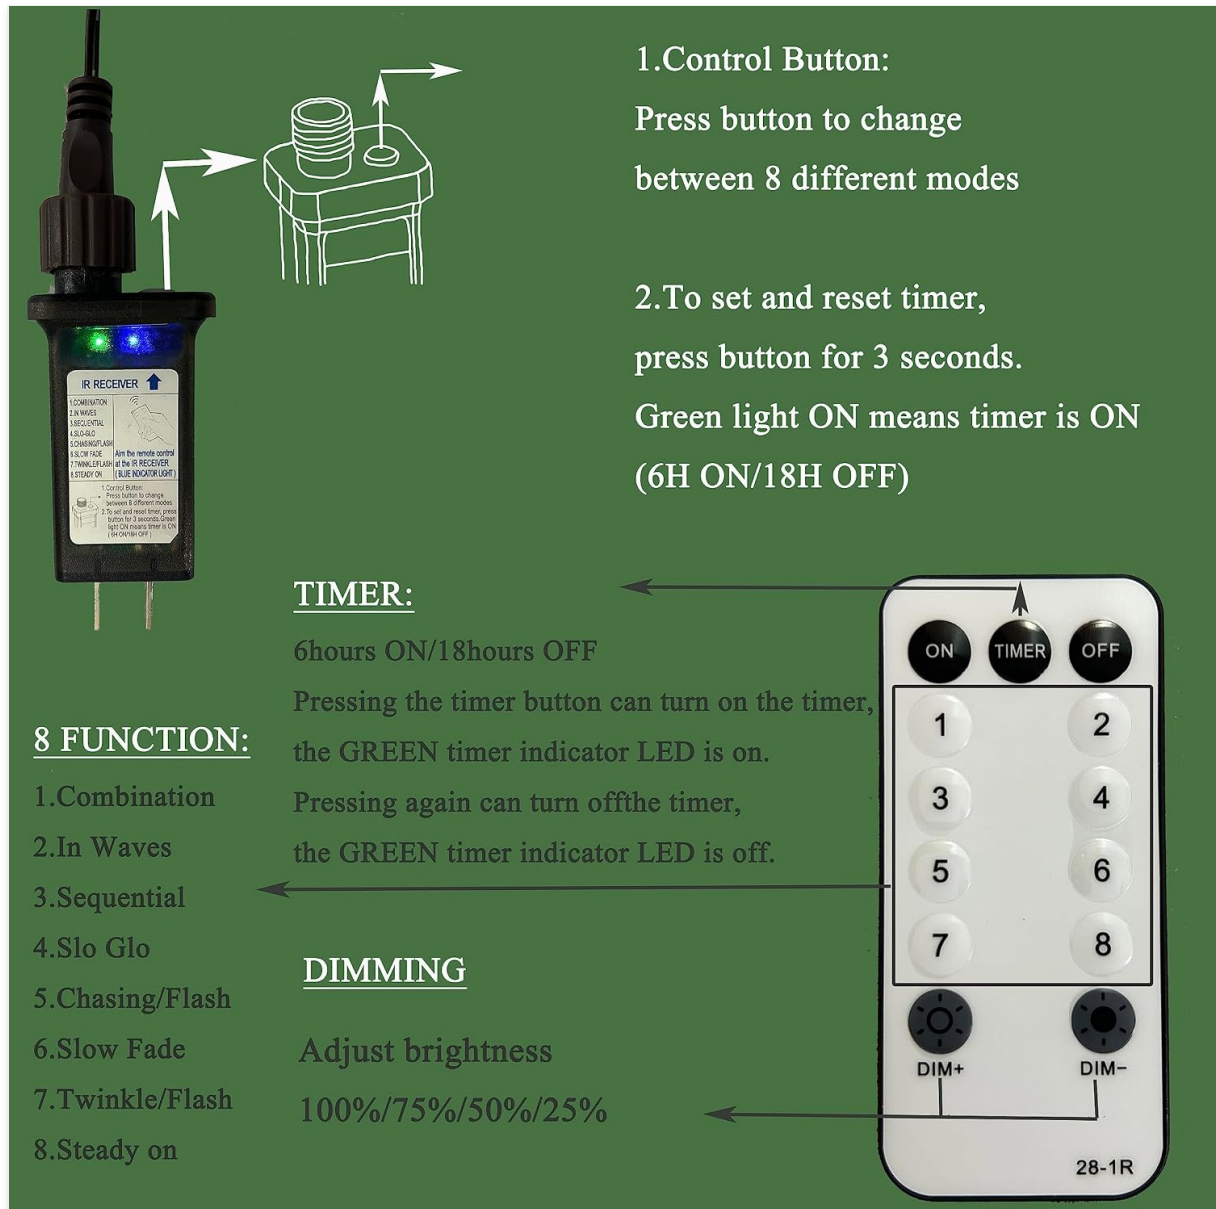


Image 4: A diagram detailing the functions of the remote control and the button on the power adapter for operating the tree's lights.

6. MAINTENANCE

- **Cleaning:** Dust the tree gently with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, unplug the tree and store it in a cool, dry place, preferably in its original packaging to protect the branches and lights.
- **Branch Adjustment:** Periodically adjust the bendable branches to maintain the desired shape.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Power adapter not connected or faulty outlet.	Ensure the adapter is securely plugged into the tree and a working power outlet. Test the outlet with another device.
Remote control not working.	Battery depleted or remote out of range.	Replace the remote control battery. Ensure you are within effective range and pointing the remote towards the tree's receiver.
Timer function not activating.	Incorrect activation or power interruption.	Press the 'TIMER' button on the remote or hold the adapter button for 3 seconds until the green LED illuminates. If power is interrupted, the timer may need to be reset.

8. SPECIFICATIONS

- **Brand:** LITBLOOM
- **Model Number:** HR-LMT300-OT-6FT-LB
- **Product Dimensions:** 18"D x 18"W x 72"H (6FT Tall)
- **Material:** Plastic
- **Light Color:** Warm White
- **Number of Lights:** 300 Fairy Lights
- **Features:** Timer (6H ON/18H OFF), Dimmer (100%/75%/50%/25%), 8 Lighting Functions
- **Item Weight:** 9.23 pounds
- **Tree Type:** Olive
- **Base Type:** Pot

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact LITBLOOM customer service. Refer to your purchase documentation for specific contact details or visit the official LITBLOOM website.