

## Kenstar SKS43UGTJ8

# Kenstar 43-inch 4K Ultra HD Smart LED Google TV SKS43UGTJ8 User Manual

Model: SKS43UGTJ8

## INTRODUCTION

---

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Kenstar 43-inch 4K Ultra HD Smart LED Google TV, model SKS43UGTJ8. Please read this manual thoroughly before using your television to ensure proper and safe operation.

## SAFETY INFORMATION

---

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury. Keep this manual for future reference.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Ensure proper grounding for the power cord.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

## WHAT'S IN THE BOX

---

Verify that all components are present upon unboxing:

- Kenstar 43-inch 4K Ultra HD Smart LED Google TV
- Remote Control (with 2 AAA batteries)
- User Manual (this document)
- Warranty Card
- Table Stand
- Wall Mount Kit

- Power Cord

## SETUP

---

### 1. Physical Installation

You can install your TV using the included table stand or a wall mount. Ensure the TV is placed on a stable, level surface or securely mounted to a sturdy wall.

#### Table Stand Installation

1. Carefully place the TV screen-down on a soft, clean surface.
2. Attach the table stands to the designated slots at the bottom of the TV using the provided screws.
3. Ensure the stands are firmly secured before carefully placing the TV upright.

#### Wall Mount Installation

1. Refer to the separate wall mount installation guide included in the box.
2. Ensure the wall can support the weight of the TV. Professional installation is recommended for wall mounting.



## 2. Connecting Peripherals

Connect your external devices to the TV using the available ports.

- **HDMI:** For connecting set-top boxes, gaming consoles, Blu-ray players. The TV supports multiple HDMI inputs.
- **USB:** For connecting USB storage devices to play media files. The TV has 2 USB ports.
- **Ethernet:** For a wired internet connection.
- **Audio Input (3.5mm):** For connecting external audio sources.

## 3. Power On and Initial Setup

1. Connect the power cord to the TV and then to a power outlet.
2. Press the power button on the remote control or on the TV.
3. Follow the on-screen instructions to complete the initial Google TV setup, including language selection, network connection (Wi-Fi or Ethernet), and Google account sign-in.

## OPERATING INSTRUCTIONS

---

### 1. Remote Control

The included smart remote control allows you to navigate the TV's features. Insert the 2 AAA batteries into the remote control, ensuring correct polarity.

### 2. Google TV Interface

Your Kenstar TV runs on Google TV, offering a personalized experience with content suggestions based on your viewing patterns. The interface provides easy access to movies, shows, apps, and your library.

Multi-Dimensional Audio  
For an immersive sound experience with  
Dolby Digital Plus



The Google TV interface with content recommendations and the Google Assistant prompt.


### 3. Google Assistant

Use the built-in Google Assistant for voice commands. Press the dedicated Google Assistant button on your remote and speak into the microphone to search for content, control smart home devices, or get information.

### 4. App Installation and Usage

Access the Google Play Store directly from your TV to download and install a wide variety of applications. Popular streaming services like Netflix, Prime Video, Disney+ Hotstar, YouTube, and Spotify are readily available.

# A faster way to the entertainment you love

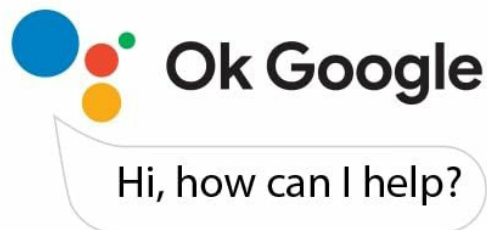

Access a wide range of applications through the Google Play Store on your Kenstar TV.

## 5. Casting and Screen Mirroring

The TV supports Chromecast for casting content from compatible mobile devices and AirPlay for Apple devices, allowing you to share photos, videos, and music directly to your TV screen.

## 6. Picture and Audio Quality

Experience stunning visuals with 4K Ultra HD resolution and HDR10 support, providing enhanced contrast and vibrant colors. The TV features Dolby Digital Plus for multi-dimensional audio, delivering an immersive sound experience.



## **AN IMMERSIVE VIEWING EXPERIENCE**

Experience crystal-clear video quality with stunning 4K Ultra HD resolution.

HDR10 technology enhances picture quality with greater detail and dynamic range.



Enjoy crystal-clear video quality with 4K Ultra HD resolution.



## ENJOY LIFE LIKE COLOURS

See details clearer with high dynamic range compatibility

Dolby Digital Plus provides an immersive audio experience.

### 7. Special Features

- **Art Mode:** Display artwork or photos when the TV is not in active use.
- **Bezel-Less Design:** Maximizes screen space for an immersive viewing experience.
- **Parental Controls:** Manage content access for children.
- **Wide Viewing Angle:** Ensures clear picture quality from various positions.

## MAINTENANCE

---

### 1. Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and TV body.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using harsh chemicals or abrasive materials.

## 2. Software Updates

Your Google TV may receive automatic software updates. Ensure your TV is connected to the internet to receive these updates, which can improve performance and add new features.

## TROUBLESHOOTING

---

If you encounter issues with your TV, refer to the following common solutions:

Problem	Possible Solution
No power	Check if the power cord is securely connected. Ensure the power outlet is working.
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly.
No sound, but picture is present	Check volume levels. Ensure external audio devices are connected correctly. Check audio output settings.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV.
Cannot connect to Wi-Fi	Check your router and internet connection. Re-enter the Wi-Fi password. Try restarting the TV and router.
Picture is distorted or unclear	Check the signal source. Adjust picture settings. Ensure cables are securely connected.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

---

Key technical specifications for the Kenstar SKS43UGTJ8 TV:

Feature	Detail
Model	SKS43UGTJ8
Screen Size	43 Inches (109 cm)
Resolution	4K Ultra HD (3840 x 2160 Pixels)
Display Technology	LED
Refresh Rate	60 Hz
Operating System	Google TV
Processor Count	1
RAM Memory	2 GB
Storage Capacity	16 GB
Graphics Coprocessor	Mali-G52MC1

<b>Feature</b>	<b>Detail</b>
Audio Output Mode	Stereo
Audio Encoding	Dolby Digital Plus
Speakers Maximum Output Power	24 Watts
Connectivity	Bluetooth, Ethernet, HDMI, USB, Wi-Fi
Total USB Ports	2
Viewing Angle	178 Degrees
Product Dimensions (LxWxH)	96.5 x 8.5 x 57 cm
Item Weight	5.9 kg
Special Features	Art Mode, Bezel-Less Design, Chromecast, Parental Controls, Wide Viewing Angle



Physical dimensions of the Kenstar 43-inch TV.

## WARRANTY AND SUPPORT

---

### Warranty Information

Your Kenstar TV comes with a limited warranty. Please refer to the included Warranty Card for detailed terms, conditions, and duration of the warranty coverage.

### Customer Support

For technical assistance, service requests, or any inquiries regarding your Kenstar TV, please contact the manufacturer:

- **Manufacturer:** Goldenarch Consumer Electronics Pvt. Ltd.
- **Contact Number:** 9115951595
- **Email:** [customercare@kenstar.in](mailto:customercare@kenstar.in)
- **Address:** 254, Udyog Vihar, Phase 4, Pin-122015

