

Yoidesu Yoidesukf0rt2wmdo-12

Yoidesu Unlocked Flip Phone for Elderly User Manual

Model: Yoidesukf0rt2wmdo-12

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Product](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This user manual provides comprehensive instructions for the Yoidesu Unlocked Flip Phone, Model Yoidesukf0rt2wmdo-12. This 2G senior flip cell phone is designed with ease of use in mind, featuring large buttons, a dual 3-inch HD screen, a strong flashlight, and clear sound, making it ideal for elderly users. Please read this manual thoroughly before using your device to ensure proper operation and to maximize its features.

2. PRODUCT OVERVIEW

The Yoidesu Flip Phone is engineered for simplicity and reliability. Key features include:

- **Large Buttons:** Designed for clear and accurate input, suitable for users with dexterity challenges.
- **Dual Screen:** Features an external screen for caller ID and time display, and an internal 1.8-inch screen for clear viewing.
- **LED Flashlight:** Integrated high-brightness, long-range LED flashlight for convenience.
- **Clear Loudspeaker:** Independent loudspeaker and vibration motor for enhanced audio and alerts.
- **Dual SIM Dual Standby:** Supports two SIM cards for flexible network usage.
- **Long Battery Life:** Equipped with a 5900mAh battery for extended standby time.
- **SOS Function:** One-click emergency help feature for quick assistance.
- **Family Number Dialing:** One-touch quick dial for up to 6 pre-set family contacts.



Image: Front and back view of the Yoidesu Flip Phone, showcasing its compact design and external screen.

EVERYTHING YOU WANT

The operation is simple and easy to understand



Image: Diagram highlighting key features such as flip design, big buttons, long standby, LED flashlight, dual SIM, and family number dialing.

3. SETUP

3.1. Inserting SIM Card(s) and Battery

1. **Open the Phone:** Gently open the back cover of the phone.
2. **Insert SIM Card(s):** Locate the SIM card slots. Insert your 2G compatible SIM card(s) into the designated slots, ensuring the gold contacts face downwards and the card is correctly oriented as per the diagram inside the phone. This phone supports dual SIM cards.
3. **Insert Battery:** Place the battery into its compartment, aligning the contacts with those in the phone.
4. **Close Cover:** Replace the back cover and ensure it clicks securely into place.

3.2. Charging the Phone

1. **Connect Charger:** Plug the small end of the USB cable into the phone's charging port.
2. **Connect to Power:** Plug the other end of the USB cable into a compatible USB power adapter (not always included) or a computer's USB port.
3. **Charge Fully:** Allow the phone to charge completely before first use. The battery indicator on the screen will show charging status.



Image: The Yoidesu Flip Phone, USB charging cable, and protective case, illustrating the components included for setup and protection.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

- **Power On:** Press and hold the Power/End Call button (usually red) until the screen lights up.
- **Power Off:** Press and hold the Power/End Call button until the power-off options appear, then select "Power Off" or confirm.

4.2. Making and Receiving Calls

- **Dialing:** Enter the phone number using the keypad and press the Call button (usually green).
- **Answering:** When the phone rings, press the Call button to answer.
- **Ending Call:** Press the Power/End Call button to end a call.

4.3. Setting Up Family Numbers (One-Touch Dialing)

This feature allows quick dialing of up to 6 pre-set contacts.

1. Navigate to the "Settings" or "Phonebook" menu.
2. Look for "Family Numbers," "Speed Dial," or a similar option.
3. Assign contacts to number keys (e.g., 1-6).
4. To use, simply long-press the assigned number key to dial the contact.



Image: Close-up of the phone's keypad, highlighting the large buttons and indicating the functionality of long-pressing keys for family numbers, record, mute, time, and calendar.

4.4. SOS Emergency Function

The SOS function allows you to quickly contact pre-set emergency numbers and send an automatic positioning SMS.

1. **Setting SOS Numbers:** Go to "Settings" > "SOS Settings" or "Emergency Contacts" to add up to 5 emergency contacts.
2. **Activating SOS:** In an emergency, press and hold the dedicated SOS button (if available) or a pre-assigned key (often '0' or a side button). The phone will automatically dial the emergency contacts in sequence and send an SMS with your location.

SOS ONE CLICK HELP

Emergency contact can be set up, call at the same time,
SMS automatically send positioning
Help comes more timely



Image: Illustration of the SOS One Click Help feature on the Yoidesu Flip Phone, showing a person in distress and the phone displaying "SOS One Click".

4.5. Using the LED Flashlight

- To turn on the flashlight, locate the dedicated flashlight button on the side of the phone or access it through the menu.
- Press the button once to turn it on, and again to turn it off.



Image: The Yoidesu Flip Phone with its LED flashlight illuminated, demonstrating its brightness and utility.

4.6. Other Functions

- **Messaging:** Access the "Messages" menu to compose and read SMS messages.
- **Camera:** The phone includes a basic camera. Access it from the main menu to take photos.
- **FM Radio:** Some models may include an FM radio. Check the menu for this option.
- **Alarm Clock:** Set alarms through the "Tools" or "Organizer" menu.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's exterior. Avoid liquid cleaners.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid overcharging and fully discharging the battery frequently.
- **Protection:** Use the provided phone case to protect the device from drops and scratches.

BIG SCREEN CHARACTERS ARE NOT AFRAID TO SEE CLEARLY

Key and font design, parents see more clearly
Press more accurately



2.8 inch large screen display
The color is mild and not dazzling
Big font, clearer

5 JKL
15mm



Image: The Yoidesu Flip Phone's protective leather case with a belt strap mounting buckle, designed for drop-proof and shock-proof protection.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on.	Low battery; battery not inserted correctly.	Charge the phone for at least 30 minutes. Ensure the battery is correctly seated.
Cannot make or receive calls.	No SIM card; SIM card not active; out of network coverage.	Ensure SIM card is inserted and active. Check network signal strength. Contact your service provider.

Problem	Possible Cause	Solution
Poor call quality.	Weak signal; obstruction; speaker/microphone issues.	Move to an area with better signal. Ensure nothing is blocking the speaker or microphone.
Phone not charging.	Faulty charger/cable; dirty charging port.	Try a different USB cable and power adapter. Clean the charging port gently.
Buttons unresponsive.	Software glitch; physical damage.	Restart the phone. If the issue persists, contact support.

7. SPECIFICATIONS

Feature	Detail
Brand	Yoidesu
Model Name	Yoidesukf0rt2wmndo-12
Wireless Carrier	Unlocked
Cellular Technology	2G
Connectivity Technology	Bluetooth
Operating System	[Proprietary Operating System]
Screen Size	1.8 Inches (Internal)
Resolution	480 x 800
Battery Capacity	5900 Milliamp Hours
Phone Talk Time	59 Hours
Memory Storage Capacity	32 MB
RAM Memory Installed Size	32 MB
Human Interface Input	Buttons
Form Factor	Flip
Color	Red
Audio Jack	3.5 mm
Other Camera Features	Front, Rear
Package Dimensions	5.51 x 3.54 x 2.76 inches
Date First Available	June 3, 2023

7.1. What's in the Box

- Yoidesu Unlocked Flip Phone (Model: Yoidesukf0rt2wm-do-12)
- USB Cable
- Phone Case



Image: The Yoidesu Flip Phone, USB charging cable, and protective case, illustrating the components included in the product package.

8. WARRANTY AND SUPPORT

Yoidesu products are manufactured with high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Yoidesu website. Keep your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or service inquiries, please contact Yoidesu customer service through

the contact information provided on the product packaging or the official brand website. When contacting support, please have your product model number (Yoidesukf0rt2wmdo-12) and purchase date available. You can visit the [Yoidesu Store on Amazon](#) for more information.

© 2023 Yoidesu. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question