



Manuals.plus /

- › OKD /
- › OKD 72" Tall Corner Bar Storage Cabinet Instruction Manual

OKD MBDC32CBU-ROWAW

OKD 72" Tall Corner Bar Storage Cabinet Instruction Manual

Model: MBDC32CBU-ROWAW

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your OKD 72" Tall Corner Bar Storage Cabinet. Please read all instructions carefully before beginning assembly and retain this manual for future reference. This cabinet is designed to offer ample storage for beverages, glassware, and decor in various living spaces.



Image 1.1: The OKD 72" Tall Corner Bar Storage Cabinet, showcasing its design and storage capabilities.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all hardware is securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the weight limit of **50 pounds** for any shelf or the overall unit.
- To prevent tipping, especially in households with children or pets, always use the provided wall anchors to secure the cabinet to a wall.
- Keep small parts and packaging materials away from children.



Image 2.1: Anti-tipping wall anchor kit for secure installation.

3. PACKAGE CONTENTS

Before assembly, verify that all components and hardware are present and undamaged. Refer to the included assembly guide for a detailed list of parts. If any parts are missing or damaged, contact customer support immediately.

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the OKD Corner Bar Storage Cabinet requires careful attention to detail. It is recommended to have at least two people for assembly due to the size and weight of some components. A Phillips head screwdriver and possibly a rubber mallet (not included) may be helpful.

1. **Unpack and Organize:** Carefully unpack all components and lay them out on a protected surface. Group similar parts and hardware together.
2. **Follow the Assembly Guide:** Refer to the step-by-step assembly guide included in your package. Each part is typically labeled for easy identification.
3. **Assemble Base and Frame:** Begin by assembling the base and main frame structure according to the diagrams. Ensure all connections are snug but do not overtighten until instructed.
4. **Install Shelves and Racks:** Insert the wine racks and glass holders into their designated positions. The glass shelves are removable and adjustable.
5. **Attach Doors:** Secure the barn doors using the provided hinges and hardware. Ensure they open and close smoothly.
6. **Install LED Lighting:** The RGB LED light strip is pre-installed in the top panel. Connect it as per the instructions to ensure functionality.
7. **Secure to Wall:** For stability and safety, attach the cabinet to a wall using the anti-tipping wall anchors provided. This step is crucial.

Product Dimensions



Image 4.1: Product dimensions and weight distribution for planning placement.



Metal Glass Holders

- 3 Rows of wine glass holders can hold 9-12 glasses

Retro Metal Handle

- Add a touch of retro accent
- Easy to grip and move sliding door



Storage Wine Racks

- Below 9-Grid wine rack to meet your wine collection needs

Image 4.2: Close-up of key components: metal glass holders, barn door handle, and wine racks.




Middle Extra Wine Racks

- The extra 5 wine slots in the middle are an additional addition to your wine collection space

Metal Barn Door

- Classic barn and iron mesh doors perfectly blend farm and industrial styles and match your home decor

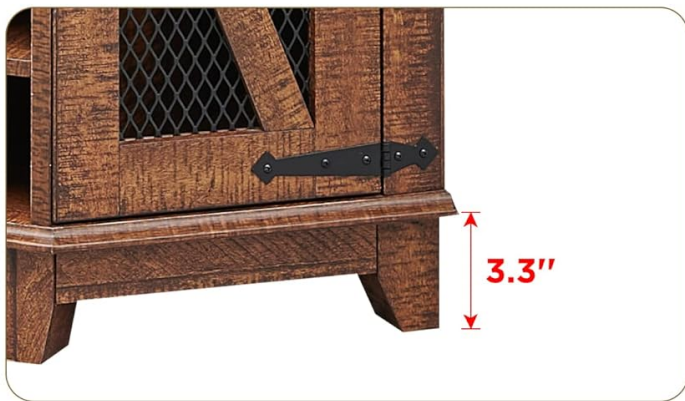

Sturdy Support Legs

- 5 Thickened support legs of 3.3" enhance the stability and durability

Image 4.3: Details of the middle wine racks, barn door, and support legs.

5. OPERATING INSTRUCTIONS

5.1 LED Lighting System

The cabinet features an integrated RGB LED light strip in the upper section. Use the provided remote control to manage the lighting.

- **Power On/Off:** Press the power button on the remote to turn the lights on or off.
- **Color Selection:** Choose from 16 different colors using the color buttons on the remote.
- **Flashing Modes:** Select from 4 flashing modes to create different ambiances.
- **Brightness Adjustment:** Use the brightness control buttons to increase or decrease the light intensity.

Adjustable Lighting System...



- 16 Different Colors 🌈
- 4 Flashing Modes ✨ ✨ ✨ ✨
- Adjustable Brightness Mode ☀️ 🌄 🌅



Image 5.1: Adjustable LED lighting system with various color and mode options.

5.2 Adjustable Shelves

The glass shelves in the upper section and the wooden shelves behind the barn doors are adjustable to accommodate items of various heights.

- **To Adjust:** Carefully remove items from the shelf. Lift the shelf slightly and pull it out. Re-insert the shelf into the desired peg holes, ensuring it is level and secure before placing items back.



Image 5.2: Removable and adjustable glass shelves for flexible storage.

5.3 Glass Holders and Wine Racks

- **Glass Holders:** The upper section includes 3 rows of metal glass holders designed to securely store 9-12 wine glasses.
- **Wine Racks:** The lower section features a 15-grid wine rack for organized bottle storage, along with additional slots in the middle section.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and longevity of your cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Glass Care:** Clean glass surfaces with a glass cleaner and a lint-free cloth.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as needed.
- **LED Lights:** If the LED lights malfunction, check the remote control battery and connections.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet is wobbly/unstable	Loose hardware; uneven floor; not secured to wall.	Ensure all screws are tightened. Place shims under legs if floor is uneven. Install or check wall anchors.
LED lights not working	Remote battery dead; loose connection; faulty LED strip.	Replace remote battery. Check all power connections. Contact customer support if issue persists.
Doors do not close properly	Misaligned hinges; obstruction.	Adjust hinges as needed. Remove any obstructions.
Missing or damaged parts	Shipping damage; packaging error.	Contact OKD customer support with your purchase details and part number for replacement.

8. SPECIFICATIONS

- **Brand:** OKD
- **Model Number:** MBDC32CBU-ROWAW
- **Color:** Reclaimed Barnwood
- **Product Dimensions:** 23.6"D x 31.5"W x 72"H
- **Material:** Engineered Wood (Frame, Top, Back)
- **Special Features:** Adjustable Shelf, Barn Doors, LED Lights
- **Mounting Type:** Floor Mount (with wall anchor recommendation)
- **Room Type:** Dining Room, Kitchen, Living Room
- **Weight Limit:** 50 Pounds (per shelf/overall)
- **Number of Shelves:** 8
- **Item Weight:** Approximately 50 Pounds
- **Assembly Required:** Yes

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact OKD customer support directly. If you encounter any issues or require assistance with your product, please reach out to the manufacturer's customer service team. Have your model number (MBDC32CBU-ROWAW) and purchase date ready.

OKD Customer Support: Please visit the official OKD website or refer to your purchase receipt for contact details.