

JOYIN 15642

JOYIN 62-inch Animatronic Werewolf Decoration Instruction Manual

Model: 15642

1. INTRODUCTION

Thank you for purchasing the JOYIN 62-inch Animatronic Werewolf Decoration. This life-sized Halloween prop is designed to enhance your outdoor or indoor Halloween display with its impressive height, glowing LED eyes, moving arms, and creepy sounds. It is sound and light activated, providing an interactive element to your spooky decor.



The JOYIN 62-inch Animatronic Werewolf Decoration, a full-sized Halloween prop designed for outdoor and indoor use.

2. SAFETY INFORMATION

Please read all safety warnings before setup and operation.

- **Outdoor Use Only:** This product is intended for outdoor use. Ensure stable and safe setup on a flat, level surface.
- **Inclement Weather:** Unplug and store the decoration indoors during heavy rain, strong winds, or other inclement weather conditions to prevent damage and ensure safety.
- **Children and Pets:** Do not allow children or pets to play on or near the display. This is a decorative prop, not a toy.
- **Flammable Materials:** Keep the decoration away from open flames, heaters, and other flammable materials.
- **Power Source:** Use only the specified battery type (3 AA batteries, not included). Do not mix old and new batteries, or different types of batteries.
- **Electrical Safety:** Ensure all electrical connections are secure and protected from moisture if used outdoors. Do not overload electrical outlets.

3. PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and undamaged:

- 1 x Animatronic Werewolf Figure (pre-assembled body and head)
- 1 x Base Stand
- Assembly Hardware (screws, if applicable)
- Instruction Manual

Note: 3 AA batteries are required for operation and are not included in the package.

4. SETUP

Follow these steps to set up your Animatronic Werewolf Decoration:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Base:** Attach the werewolf figure to its base stand. Ensure it is securely fastened to prevent tipping.
3. **Install Batteries:**



Steps for battery installation: Open the back compartment and insert 3 AA batteries.

- Locate the battery compartment, typically on the back or lower part of the animatronic.
- Open the compartment cover (a small screwdriver may be required).

- Insert 3 AA batteries, ensuring correct polarity (+/-).
 - Close the battery compartment cover securely.
4. **Positioning:** Place the animatronic on a flat, stable surface in your desired location. For outdoor use, consider securing the base to the ground if strong winds are anticipated.
 5. **Adjust Arms:** The arms are adjustable. Position them to create the desired spooky effect.

5. OPERATING INSTRUCTIONS

The JOYIN Animatronic Werewolf is designed for easy operation. It features sound and light activation.



Key features of the Animatronic Werewolf: Light-Up Eyes, Realistic Details, and Adjustable Arms.



The animatronic produces horrific sounds and is activated by sound.

- **Activation:** Once batteries are installed, the animatronic is in standby mode. It will activate when it detects sound or light changes in its vicinity.
- **Features:** Upon activation, the werewolf's LED eyes will glow, its arms will move, and it will emit creepy sounds.
- **Deactivation:** The animatronic will return to standby mode after a short period of activity. To fully power off, remove the batteries.

Note: The sensitivity of the sound and light activation may vary depending on ambient conditions.

6. MAINTENANCE

To ensure the longevity and optimal performance of your animatronic decoration, follow these maintenance guidelines:

- **Cleaning:** Wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the material.
- **Storage:** When not in use, disassemble the animatronic if possible and store it in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.

- **Battery Removal:** Always remove batteries if the product will not be used for an extended period to prevent battery leakage and corrosion.
- **Fabric Care:** The fabric components can be gently spot cleaned. Do not machine wash.

7. TROUBLESHOOTING

If you encounter issues with your Animatronic Werewolf, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Animatronic does not activate.	No batteries, dead batteries, incorrect battery polarity, sensor blocked, insufficient sound/light.	Ensure 3 AA batteries are installed correctly. Replace with fresh batteries. Check if the sensor (usually near the eyes or speaker) is clear. Test in a darker or quieter environment, or make a louder sound.
Sound is distorted or too low.	Low batteries, speaker obstruction.	Replace batteries. Ensure the speaker area is not covered.
Arms do not move.	Low batteries, mechanism obstruction.	Replace batteries. Check for any fabric or debris obstructing the arm movement.
LED eyes do not light up.	Low batteries, LED malfunction.	Replace batteries. If the issue persists, contact customer support.
Unit falls over easily.	Unstable surface, not properly secured.	Place on a flat, level surface. Secure the base to the ground using stakes or weights, especially in windy conditions.

8. SPECIFICATIONS

PRODUCT DIMENSIONS



62.9 INCH
160 CM

The Animatronic Werewolf stands approximately 62.9 inches (160 cm) tall.

Feature	Detail
Model Number	15642
Dimensions (L x W x H)	16.93 x 12.8 x 7.48 inches (packaged)
Height (Assembled)	Approximately 62 inches (157.5 cm)
Item Weight	4.53 pounds
Material	Plastic and Fabric
Power Source	3 AA Batteries (not included)
Activation	Sound and Light Activated
Features	Glowing LED Eyes, Moving Arms, Creepy Sounds
Recommended Use	Halloween parties, outdoor/indoor lawn decorations, haunted house props

9. WARRANTY AND SUPPORT

JOYIN products are manufactured with quality and care. For any questions, concerns, or issues regarding your Animatronic Werewolf Decoration, please contact JOYIN customer support directly.

Please retain your proof of purchase for warranty claims. Specific warranty details may be available on the product packaging or the official JOYIN website.

Contact Information:

Visit the official JOYIN website for support contact details: [JOYIN Store on Amazon](#)